

Precision Regulator Series IR1000/2000/3000



PAT.PEND

The addition of the small size Series IR1000 and the large size Series IR3000 provides an increased range of flow rates from approx. 200 /min. to approx. 6000 /min.

Precision Regulator Series IR 1000/2000/3000

Bracket and pressure gauge can be mounted from 2 directions

Mounting is possible on either the front or the back

Expanded regulating pressure range

The maximum set pressure has been expanded from the conventional 0.7MPa to 0.8MPa

Compact and light weight

IR1000 width 35mm weight 140g (previously unavailable small size added)
IR2000 width 50mm weight 300g

(▲ width 14%, weight ▲6% Compared to SMC IR200)

IR3000 width 66mm weight 640g

(▲ width 21%, weight ▲36% Compared to SMC IR400)




2 air operated models Air operated type added to series IR2000



Manifolding is possible

Order made specifications (except series IR2120, IR3000)

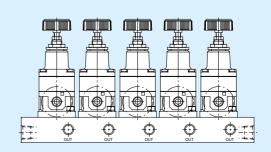


Modular body introduced


Can be combined with AF (air filter) and AFM (mist separator).



Superior relief flow characteristics

Relief flow has been increased by nearly 5 times (compared to SMC IR201, IR401)

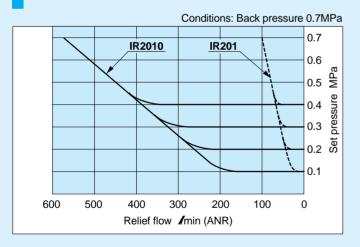

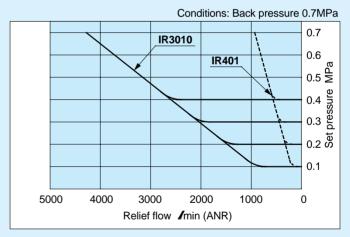


Series Variations							
	Model	E	Basic type	9	Air operated type		
Specifications		IR10□0	IR20□0	IR30□0	IR2120	IR3120	
Maximum set pressure	0.2MPa	•	•	•	_	_	
	0.4MPa	•	•	•	_	_	
	0.8MPa	•	•	•	•	•	
	Rc(PT) 1/8	•	_	_	_	_	
Port size	Rc(PT) 1/4	_	•	•	•	•	
	Rc(PT) 3/8	_	_	•	_	•	
	Rc(PT) 1/2	_	_	•	_	•	

Order Made Specifications				
Symbol	Specifications/Content			
10-	Clean room specifications			
20-	Copper-free specifications			
80-	Ozone resistant specifications			
_T	For high temperature			
-L	For low temperature			
-X1	Non-grease specifications			
IRM□□	Manifold (except series IR2120, IR3000)			

^{*} Refer to page 8 for details.


Application Examples

 Constant fluid pressure




• Since there is a large effective area for supply and exhaust, pressure setting can be done quickly.

Balance and drive Accurate balance pressure setting

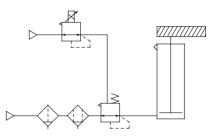


• Limits pressure fluctuation when driving a cylinder, maintaining excellent static and dynamic balance.

Accurate pressure setting – Sensitivity within 0.2%F.S. (full span) Tension controller

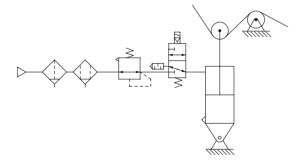


Contact pressure control

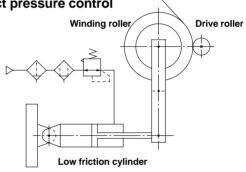


• Adapts to the cylinder's piston displacement, maintaining a constant pressure.

Multistage control of work piece pressing force (Wrapping machine)

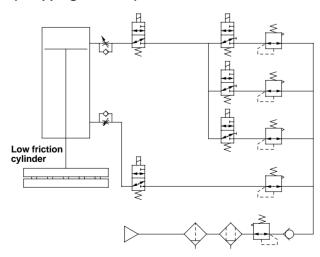


Leak test circuit

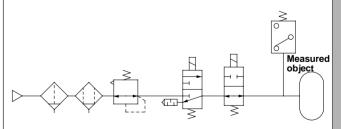

Precision Regulator *Series IR1000/2000/3000*

 JIS symbol




Standard Specifications

		Basic type	Air operated type			
Model	IR10□0	IR20⊡0	IR30□0	IR2120	IR3120	
Max. supply pressure	Maximum 1.0MPa					
Min. supply pressure	Set pressure + 0.05MPa Note 1) Set pressure + 0.1MPa			Set pressure + 0.05MPa	Set pressure + 0.1MPa	
	IR1000: 0.005 to 0.2MPa	IR2000: 0.005 to 0.2MPa	IR3000: 0.01 to 0.2MPa			
Regulating pressure range	IR1010: 0.005 to 0.4MPa	IR2010: 0.005 to 0.4MPa	IR3010: 0.01 to 0.4MPa	0.005 to 0.8MPa	0.01 to 0.8MPa	
	IR1020: 0.005 to 0.8MPa	IR2020: 0.005 to 0.8MPa	IR3020: 0.01 to 0.8MPa			
Input signal pressure			0.005 to 0.8MPa	0.01 to 0.8MPa		
Sensitivity	Within 0.2% of full span					
Repeatability			Within ± 0.5% of full span			
Linearity Note 3)	Within ±1% of full span					
Note 4) Air consumption			Exhaust port:	4 Imin (ANR) or less (supply pressure: 1.0MPa) 3 Imin (ANR) or less (supply pressure: 0.7MPa)	Bleed port: 9.5 /min (ANR) or less (supply pressure: 1.0MPa) Exhaust port: 2 /min (ANR) or less (at maximum set pressure)	
Port size	Rc(PT) 1/8	Rc(PT) 1/8 Rc(PT) 1/4 Rc(PT) 1/4, 3/8, 1/2		Rc(PT) 1/4	Rc(PT) 1/4, 3/8, 1/2	
Pressure gauge port	Rc(PT) 1/8 (2 locations)					
Ambient and fluid temperature	– 5 to 60°C (with no freezing)					
Weight (kg)	0.14	0.30	0.64	0.35	0.71	

Note 1) With the condition of no flow on the output side. Together with the set pressure, be sure to maintain a minimum differential pressure of 0.05MPa for models IR1000 and IR2000, and 0.1MPa for model IR3000.

- Note 2) Applicable only to air operated types IR2120 and IR3120. The basic type is excepted.
- Note 3) Indicates the linearity of the output pressure with respect to the input signal pressure.
- Note 4) Air is normally being discharged to the atmosphere.

How to Order

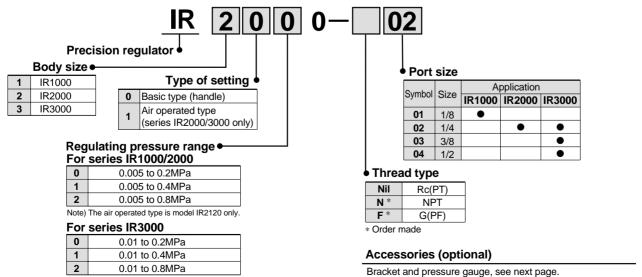

Series IR3000 Series IR2000

Specification Combinations


 Standard specifications O: Combination possible Blank: Combination not possible


Specifications			Applicable model				
		Symbol	IR1000 IR1010 IR1020		IR2120	IR3000 IR3010 IR3020	IR3120
Su	Set pressure max. 0.2MPa	0	•	•		•	
atio	Set pressure max. 0.4MPa	1	•	•		•	
jį;	Set pressure max. 0.8MPa	2	•	•	•	•	•
Standard specifications	Connection Rc(PT) 1/8	01	•				
<u>5</u>	Connection Rc(PT) 1/4	02		•	•	•	•
nda	Connection Rc(PT) 3/8	03				•	•
Sta	Connection Rc(PT) 1/2	04				•	•
Accessories	Bracket	В	0	0	0	0	0
Accessories	Pressure gauge	G	0	0	0	0	0
SL	Pressure gauge reverse mounted	R	0	0	0	0	0
ţi	Connection NPT1/8	N01	0				
ica	Connection NPT1/4	N02		0	0	0	0
Order made specifications	Connection NPT3/8	N03				0	0
ďs	Connection NPT1/2	N04				0	0
ade	Connection G(PF) 1/8	F01	0				
Ĕ	Connection G(PF) 1/4	F02		0	0	0	0
der	Connection G(PF) 3/8	F03				0	0
ŏ	Connection G(PF) 1/2	F04				0	0

Modular Products and Accessory Combinations

Description	Applicable model				
Description	IR10□0	IR20□0 / IR2120	IR30□0 / IR3120		
1 Air filter	AF2000	AF3000	AF4000		
2 Mist separator	AFM2000	AFM3000	AFM4000		
3 L bracket	B210L	B310L	B410L		
4 T bracket	B210T	B310T	B410T		
5 Spacer	Y20	Y30	Y40		
6 Spacer with L bracket (3 + 5)	Y20L	Y30L	Y40L		
7 Spacer with T bracket (4 + 5)	Y20T	Y30T	Y40T		

<Combination example>

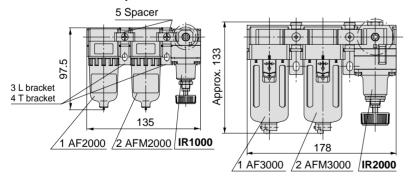

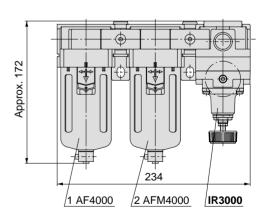

Accessories (Optional)/Part Nos.

Description					Part No.				
Description	IR1000	IR1010	IR1020	IR2000	IR2010	IR2020 / 2120	IR3000	IR3010	IR3020 / 3120
Bracket		P36201023			P36202028			P36203018	
Pressure gauge*	G33-2-01	G33-4-01	G33-10-01	G43-2-01	G43-4-01	G43-10-01	G43-2-01	G43-4-01	G43-10-01


^{*} Accuracy ±3% (full span)

SUP(1)

Valve guide

OUT(2)

Construction

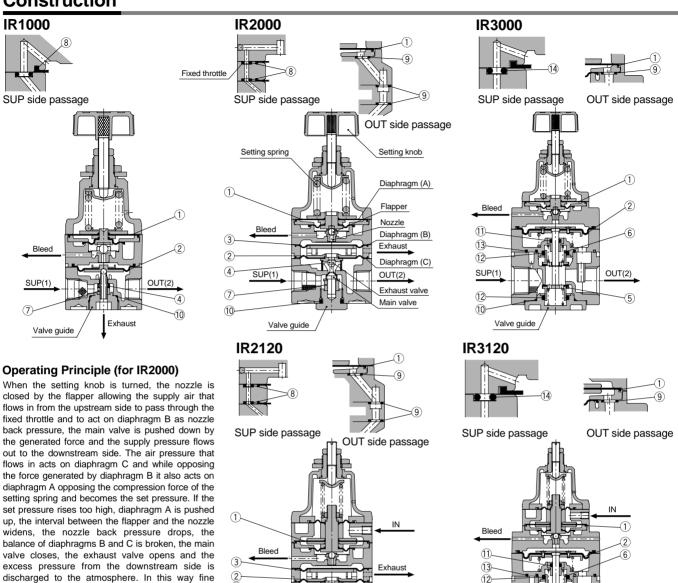

Replacement parts

pressure adjustment is performed.

pressure variations are detected by the

nozzle/flapper type pilot mechanism, and precise

					Part No.		
No.	lo. Description	Material	IR10□0	IR20□0	IR30□0	IR2120	IR3120
1	Diaphragm assembly	NBR, other	P362010-1	P362020-2	P362020-2	P362020-13	P362020-13
2	Diaphragm assembly	NBR, other	P362010-2	P362020-5	P362030-1	P362020-5	P362030-1
3	Diaphragm	NBR, other	_	P36202019	_	P36202019	_
4	Valve	Stainless steel, NBR	P36201020 (-1) Note 1)	P36202025	_	P36202025	_
5	Valve	Brass, NBR	_	_	P36203009	_	P36202009
6	Valve	Brass, NBR	_	_	P36203010	_	P36203010
7	Damper	NBR	P36201021	P36202026	_	P36202026	_
8	O-ring	NBR	ø2.5 x 1	ø2 x 1.25	_	ø2 x 1.25	_
9	O-ring	NBR	_	ø4.5 x 1	ø4.5 x 1	ø4.5 x 1	ø4.5 x 1
10	O-ring	NBR	ø10 x 1.3	JISB2401 P11	ø27.8 x 1.5	JISB2401 P11	ø27.8 x 1.5
11	O-ring	NBR	_	_	JISB2401 P5 Note 2)	_	JISB2401 P5 Note 2)
12	O-ring	NBR	_	_	JISB2401 P16 Note 2)	_	JISB2401 P16 Note 2
13	Seal (A)	NBR	_	_	P36203015	_	P36203015
14	Seal (B)	NBR	_	_	P36203016	_	P36203016
	Service parts kit no. (set of above items 1 through 14)		KT-IR1000 Note 3) KT-IR1010	KT-IR2000	KT-IR3000	KT-IR2120	KT-IR3120

OUT(2)

SUP(1)

Valve guide

10


Note 1) IR1000 uses P36201020-1 and IR1010/1020 use P36201020.

Note 2) Use mini-flick type


Note 3) IR1000 uses KT-IR1000 and IR1010/1020 use KT-IR1010.


Dimensions

IR10□0-01□

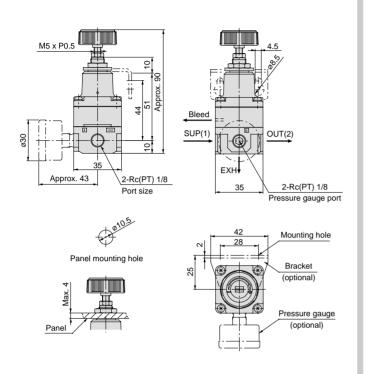



IR20□0-02□

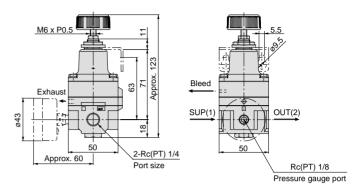


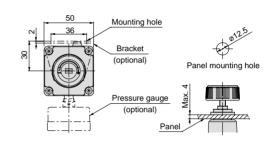


IR30□0-0□□

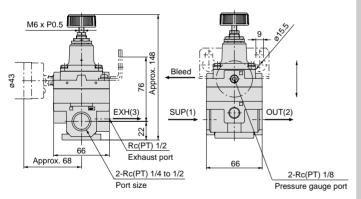

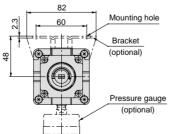

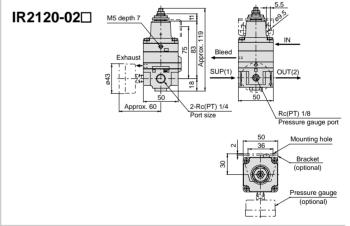


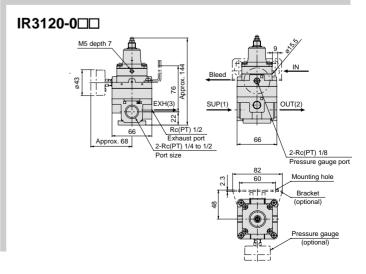



Series IR1000

Flow rate characteristics


* Testing methods conform to JIS B8372.

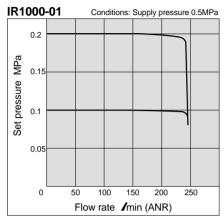


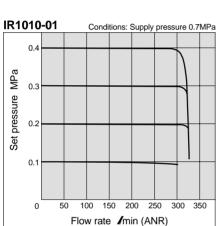


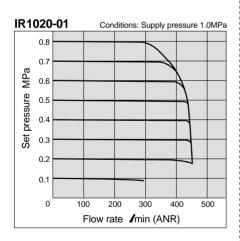


Relief characteristics

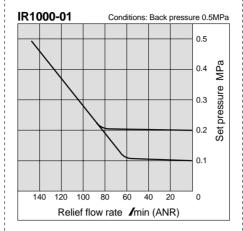

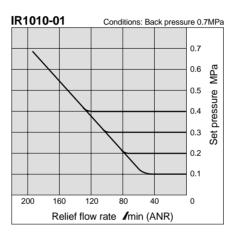


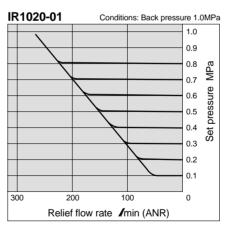


Pressure characteristics

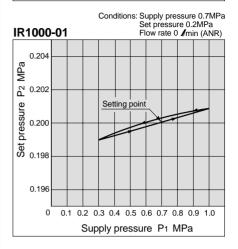

IR1010-01

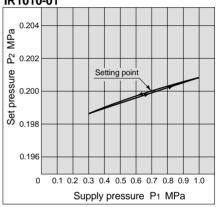


IR1020-01

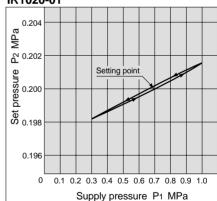



Series IR2000


Flow rate characteristics

* Testing methods conform to JIS B8372.

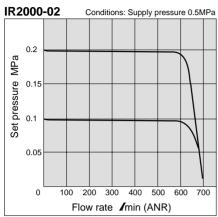


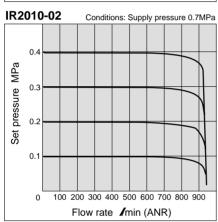


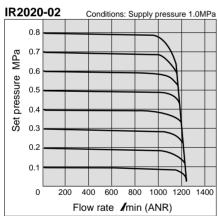


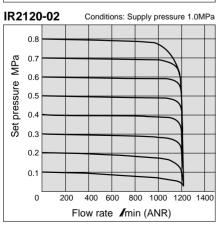


Relief characteristics

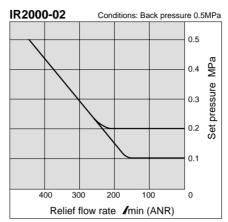


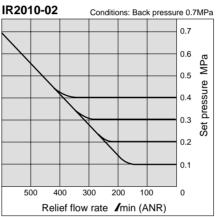


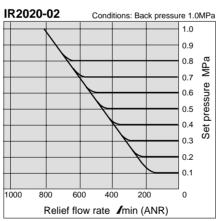


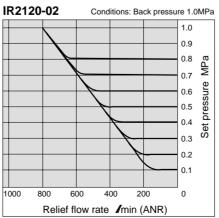


Pressure characteristics

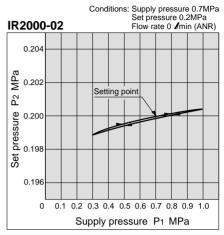

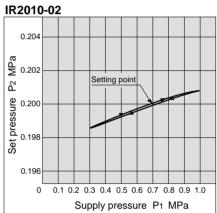

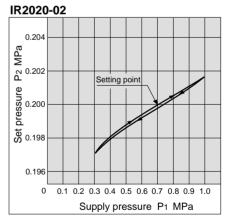


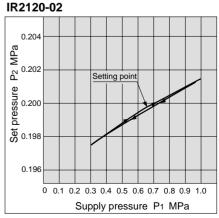



Series IR3000


Flow rate characteristics

* Testing methods conform to JIS B8372.

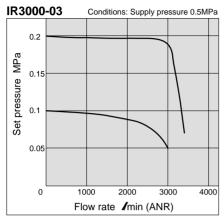


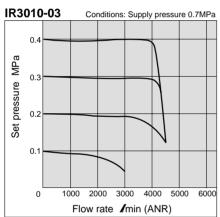


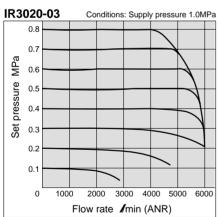


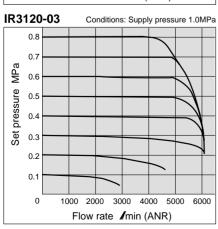


Relief characteristics

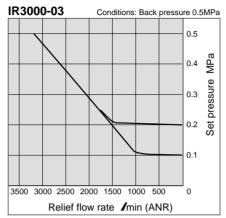


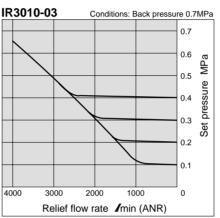


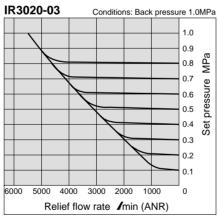


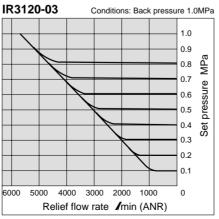


Pressure characteristics

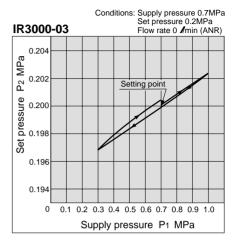

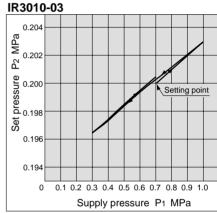

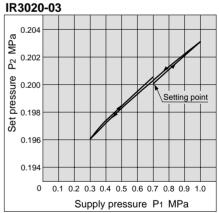

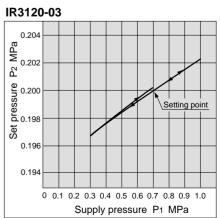

Series IR1000/2000/3000 Order Made Specifications



Contact SMC regarding detailed dimensions, specifications and delivery times.

1 Clean Room Specifications

10 — Standard part number

Note) Contact SMC if equipped with pressure gauge.

Clean room specifications


Specifications

Cleanliness Class 10000	
Bleed port With M5 fitting (applicable tube O.D. ø6	
EXH port	IR1000/2000: M5 fitting (applicable tube O.D. ø6) IR3000: Rc(PT) 1/2 female thread
Grease	Teflon® grease

Teflon® is a registered trade mark of DuPont.

2 Copper-free Specifications

 External and internal copper parts are changed to stainless steel or aluminum.




3 Ozone Resistant Specifications

Fluoro rubber is used for rubber seal materials.



 4 For High and Low Temperature Environments




T	For high temperature
1	For low temperature

Specifications

Symbol	Т	L
Environment	For high temp. environments	For low temp. environments
Ambient temperature	−5 to 100°C (Max. 80°C with pressure gauge)	−30 to 60°C
Rubber material Fluoro rubber		Special NBR or silicon rubber


5 Non-Grease Specifications

 Assembly is performed in an ordinary environment without using grease. However, since parts are not washed they are not completely oil-free.



6 Manifold Specifications (except type IR2120 and series IR3000)

2 to 8 station manifold type regulators. (Contact SMC regarding 9 or more stations.)

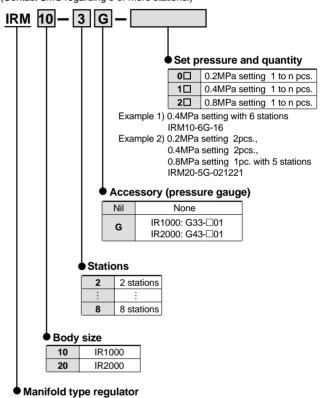

Specifications

Opecifications					
Stations	2 to 8 stations				
	Common SUP	IR1000: Rc(PT) 1/4, IR2000: Rc(PT) 3/8			
Ports	Individual OUT IR1000: Rc(PT) 1/8, IR2000: Rc(PT) 1/4				
	Individual EXH (from IR body)				
Set pressure	0.2MPa, 0.4MPa and 0.8MPa settings can be combined				
Accessory (pressure gauge)	G33-□-01 (IR1000), G43-□-01 (IR2000)				



Series IR1000/2000/3000 Safety Instructions

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by labels of **"Caution", "Warning" or "Danger"**. To ensure safety, be sure to observe ISO 4414 Note 1), JIS B 8370 Note 2) and other safety practices.

Caution: Operator error could result in injury or equipment damage.

Warning: Operator error could result in serious injury or loss of life.

⚠ Danger : In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power – Recommendations for the application of equipment to transmission and control systems.

Note 2) JIS B 8370: Pneumatic system axiom.

1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or after analysis and/or tests to meet your specific requirements.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if an operator is unfamiliar with it. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

- 3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.
- 1. Inspection and maintenance of machinery/equipment should only be performed after confirmation of safe locked-out control positions.
- 2. When equipment is to be removed, confirm the safety process as mentioned above. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
- 3. Before machinery/equipment is re-started, take measures to prevent shooting-out of cylinder piston rod, etc. (Bleed air into the system gradually to create back-pressure.)
- 4. Contact SMC if the product is to be used in any of the following conditions:
 - 1. Conditions and environments beyond the given specifications, or if product is used outdoors.
- 2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, press applications, or safety equipment.
- 3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.



Series IR1000/2000/3000 Precision Regulator Precautions

Be sure to read before handling.

Piping


⚠ Warning

1. Screw piping together with the recommended proper torque while holding the side with female threads.

Looseness or faulty sealing will occur if tightening torque is insufficient, while thread damage will result if the torque is excessive. Furthermore, if the side with the female threads is not held while tightening, excessive force will be applied directly to piping brackets, etc. causing damage or other problems.


Recommended proper torque N·m (kgf·cm)

Connection thread	1/8	1/4	3/8	1/2
Torque	7 to 9	12 to 14 (120 to 140)	22 to 24	28 to 30

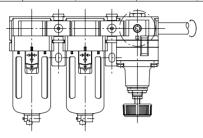

2. Do not allow twisting or bending moment to be applied other than the weight of the equipment itself.

Provide separate support for external piping, as damage may otherwise occur.

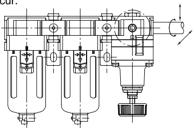

3. Since excessive moment loads and the propagation of vibrations, etc. can easily result from inflexible piping made of steel, etc., avoid these problems by using flexible tubing for intermediate connections.

Piping

⚠ Caution

 
1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove cutting chips, cutting oil and other debris from inside the pipe.

2. Wrapping of pipe tape

When connecting pipes and fittings, etc., be sure that cutting chips from the pipe threads and sealing material do not get inside

Further, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the pipe/fitting.



Operating Environment

Marning

- 1. Do not operate in locations having an atmosphere of corrosive gases, chemicals, sea water, water or steam, or where there will be contact with the same.
- 2. Do not operate in locations where vibration or impact occurs.
- 3. In locations which receive direct sunlight, provide a protective cover, etc.
- 4. In locations near heat sources, block off any radiated heat.
- 5. In locations where there is contact with spatter from water, oil or solder, etc., implement suitable protective measures.

Air Supply

- 1. These products are designed for use with compressed air. Contact SMC if any other fluid will be used.
- 2. Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt, or corrosive gases, etc., as this can cause damage or malfunction.
- If drainage is not removed from air filters and mist separators, it can flow out to the downstream side and lead to the malfunction of pneumatic equipment.

In cases where the management of drainage removal will be difficult, the use of filters with auto drains is recommended.



Series IR1000/2000/3000 Specific Product Precautions

Be sure to read before handling.
Refer to pages 9 and 10 for safety instructions and precautions.

Air Supply

⚠ Caution

- 1. If the supply pressure line contains drainage or dirt, etc., the fixed throttle can become clogged leading to malfunction, and therefore, in addition to an air filter (SMC Series AF) be sure to use a mist separator (SMC Series AM, AFM).
 - Refer to SMC's "Compressed Air Cleaning Systems" catalog regarding air quality.
- Never use a lubricator on the supply side of the regulator, as this will positively cause the fixed throttle to become clogged and lead to malfunction. If lubrication is required for terminal devices, connect a lubricator on the output side of the regulator.

Maintenance

⚠ Warning

- 1. When the valve guide (refer to construction drawing on page 3) is to be removed during maintenance, first reduce the set pressure to "0" and completely shut off the supply pressure.
- 2. When a pressure gauge is to be mounted, remove the plug after reducing the set pressure to "0".

Precautions for IR10□0 only

∧ Warning

1. When remounting the valve guide after removing it for maintenance, use a tightening torque of no more than 0.6N·m (6kgf·cm). Since the valve guide on this product is made of resin, there is a danger of damage if tightened with a torque exceeding the prescribed value.

Operation

- 1. Do not use a precision regulator outside the range of its specifications as this can cause failure. (Refer to specifications.)
- 2. When mounting is performed, make connections while confirming port indications.

Operation

- 3. If a directional switching valve (solenoid valve, mechanical valve, etc.) is mounted on the supply side of the regulator and repeatedly switched ON and OFF, wear of the nozzle/flapper section will be accelerated and a discrepancy in the setting value may occur. Therefore, avoid using a directional switching valve on the supply side. In the event a directional switching valve will be used, install it on the output side of the regulator.
- 4. Air is normally discharged from the bleed port (the hole on the side of the body's midsection). This is a necessary consumption of air based on the construction of the precision regulator, and is not an abnormality.
- 5. Be sure to tighten the lock nut after pressure adjustment.

Precautions for IR30□0, IR3120 only

⚠ Caution

- 1. The supply pressure is relatively high (approx. 0.5MPa or more), the set pressure is low (approx. 0.1MPa or less), and when operated with the output side released to the atmosphere, there may be pulsations in the setting side pressure. In this kind of situation, operate with the supply pressure reduced as much as possible, or increase the set pressure somewhat and restrict the output line (add and adjust a stop valve, etc.).
- 2. The capacity of the output side is large, and when used for the purpose of a relief function, the exhaust sound will be loud when being relieved. Therefore, operate with a silencer (SMC Series AN) mounted on the exhaust port (EXH port). The connection is Rc(PT) 1/2.

Precautions for IR2120, IR3120 (air operated type) only

⚠ Caution

- 1. Since the output of types IR2120 and IR3120 is the same pressure as the input signal pressure, select a type of regulator (general purpose or precision type) for input signal pressure adjustment according to the application.
- The screw on the topmost section is a zero point adjustment screw which is locked at the factory and requires no adjustment for operation.





Austria

SMC Pneumatik GmbH (Austria). Girakstrasse 8, A-2100 Korneuburg Phone: 02262-62280, Fax: 02262-62285



Belgium

SMC Pneumatics N.V./S.A. Nijverheidsstraat 20, B-2160 Wommelgem Phone: 03-355-1464, Fax: 03-355-1466



Czech

SMC Czech.s.r.o. Kodanska 46, CZ-100 10 Prague 10 Phone: 02-67154 790, Fax: 02-67154 793



Denmark

SMC Pneumatik A/S Jens Juuls vej 32, DK-8260 Viby J Phone: 45-70252900, Fax: 45-70252901



Estonia

Teknoma Festi AS Mustamäe tee 5, EE-0006 Tallinn, Estonia Phone: 259530, Fax: 259531



Finland

SMC Pneumatiikka OY Veneentekijäntie 7, SF-00210 Helsinki Phone: 09-681021, Fax: 09-6810233



France

SMC Pneumatique, S.A. 1, Boulevard de Strasbourg, Parc Gustave Eiffel Bussy Saint Georges F-77607 Marne La Vallee Cedex 3

Phone: 01-6476 1000, Fax: 01-6476 1010



Germany

SMC Pneumatik GmbH Boschring 13-15, D-63329 Egelsbach Phone: 06103-4020, Fax: 06103-402139



Greece

S. Parianopoulus S.A. 9, Konstantinoupoleos Street, GR-11855 Athens Phone: 01-3426076, Fax: 01-3455578



Hungary

SMC Hungary Kft. Budafoki ut 107-113, 1117 Budapest Phone: 01-204 4366. Fax: 01-204 4371



Ireland

SMC Pneumatics (Ireland) Ltd. 2002 Citywest Business Campus, Naas Road, Saggart, Co. Dublin Phone: 01-403 9000, Fax: 01-464 0500



Italy

SMC Italia S.p.A Via Garibaldi 62, I-20061 Carugate, (Milano) Phone: 02-92711, Fax: 02-92150394



Latvia

Ottensten Latvia SIA Ciekurkalna Prima Gara Linija 11, LV-1026 Riga, Latvia Phone: 371-23-68625, Fax: 371-75-56748



Lithuania

UAB Ottensten Lietuva Savanoriu pr.180, LT-2600 Vilnius, Lithuania Phone/Fax: 370-2651602



Netherlands

SMC Controls BV De Ruyterkade 120, NL-1011 AB Amsterdam Phone: 020-5318888, Fax: 020-5318880



Norway
SMC Pneumatics (Norway) A/S
Wollsveien 13 C, granfoss Noeringspark N-134 Lysaker, Norway Phone: 22 99 6036, Fax: 22 99 6103



Poland

Semac Co., Ltd. PL-05-075 Wesola k/Warszaway, ul. Wspolna 1A Phone: 022-6131847, Fax: 022-613-3028



Portugal

SMC España (Sucursal Portugal), S.A. Rua de Eng^o Ferreira Dias 452, 4100 Porto Phone: 02-610-89-22, Fax: 02-610-89-36



Romania

SMC Romania srl Vasile Stroescu 19, Sector 2, Bucharest Phone: 01-210-1354, Fax: 01-210-1680



Russia

SMC Pneumatik LLC Centrako Business Centre 103, Bolshoy Prospect V.O., 199106 St. Petersburg Phone: 812-1195131, Fax: 812-1195129



Slovakia

SMC Slovakia s.r.o. Pribinova ul. C. 25, 819 02 Bratislava Phone: 0-563 3548, Fax: 07-563 3551



Slovenia

SMC Slovenia d.o.o. Grajski trg 15, 8360 Zuzemberk Phone: 068-88 044 Fax: 068-88 041



Spain SMC España, S.A. Zuazobidea 14, Pol. Ind. Jundiz, E-01015 Vitoria Phone: 945-184 100, Fax: 945-184 124



Sweden SMC Pneumatics Sweden A.B. Ekhagsvägen 29-31, S-14105 Huddinge Phone: 08-603 07 00, Fax: 08-603 07 10



Switzerland

SMC Pneumatik AG Dorfstrasse 7, CH-8484 Weisslingen Phone: 052-396-3131, Fax: 052-396-3191



Turkey Entek Pnömatik San. ve Tic Ltd. Sti. Perpa Tic. Merkezi Kat: 11 No: 1625, TR-80270 Okmeydani Istanbul Phone: 0212-221-1512, Fax: 0212-220-2381



SMC Pneumatics (UK) Ltd Vincent Avenue, Crownhill, Milton Keynes, MK8 0AN Phone: 01908-563888 Fax: 01908-561185

OTHER SUBSIDIARIES WORLDWIDE:

ARGENTINA, AUSTRALIA, BOLIVIA, BRASIL, CANADA, CHILE, CHINA, HONG KONG, INDIA, MALAYSIA, MEXICO, NEW ZEALAND, PHILIPPINES, SINGAPORE, SOUTH KOREA, TAIWAN, THAILANDIA, USA, VENEZUELA For more information, please contact your local SMC Regional Centre

SMC UK Regional Centres

BELFAST
Tel:01232 778414 Fax:01232 778422
SMC Pneumatics (UK) Ltd
Northern Ireland Regional Centre
Suite 3, Shaftesbury House, Edgewater Road Belfast BT3 9JQ

BIRMINGHAM
Tel:01675 467177 Fax:01675 465073
SMC Pneumatics (UK) Ltd
Birmingham Regional Centre
24 The Courtyard, Gorsey Lane, Coleshill Warwickshire B46 1JA

BRISTOL
Tel:01179 522155 Fax:01179 522186
SMC Pneumatics (UK) Ltd
Bristol Regional Centre
5 East Gate Office Centre
East Gate Road, Eastville, Bristol
BS5 6XX

SMC UK Distributors

Birmingham JAMES LISTER Tel: 0121 5803800 Fax: 0121 5535951

Blackburn BLACKBURN PNEUMATIC SYSTEMS LTD Tel: 01254 682232 Fax: 01254 682224

Bristol APPLIED AUTOMATION Tel: 0117 9827769 Fax: 0117 9235522

CRAWLEY
Tel:01293 614094 Fax:01293 614135
SMC Pneumatics (UK) Ltd
Crawley Regional Centre
9 Pelham Court, Pelham Place, Broadfield

CUMBERNAULD
Tel:01236 781133 Fax:01236 780611
SMC Pneumatics (UK) Ltd
Scottish Regional Centre 1 Carradale Crescent. Broadwood Business Park, Cumbernauld

DROITWICH
Tel: 01905 774544 Fax: 01905 797343
SMC Pneumatics (UK) Ltd
Droitwich Regional Centre
Hampton Park, Hampton Lovett
Droitwich, Worcestershire
WR9 0NX

Bury St Edmunds PNEUMATIC LINES Tel: 01284 706239 Fax: 01284 761218

Cardiff WALES FLUID POWER Tel: 01222 494551 Fax: 01222 481955

IPSWICH
Tel:01473 240040 Fax:01473 747707
SMC Pneumatics (UK) Ltd
Ipswich Regional Centre
Unit 6 & 7, Alpha Business Park
16-18 Whitehouse Road, Ipswich, Suffolk
IP1 5LT

MANCHESTER
Tel:0161 876 7371 Fax:0161 876 7372
SMC Pneumatics (UK) Ltd
Manchester Regional Centre
3 Modwen Road, Waters Edge Business Park
Ordsall Lane, Salford, Manchester
M5 3EZ

MILTON KEYNES
Tel: 01908 265247 Fax: 01908 262705
SMC Pneumatics (UK) Ltd
Vincent Avenue, Crownhill, Milton Keynes MK8 OAN

East Grinstead AUTARKY AUTOMATION Tel: 01342 311388 Fax: 01342 323733

Newton Ayciiffe ONCAD AUTOMATION Tel: 01325 311599 Fax: 01325 307562

NEWCASTLE
Tel:0191 487 2040 Fax:0191 487 2041
SMC Pneumatics (UK) Ltd
Newcastle Regional Centre
Unit B6, Marquis Court, Marquis Way
Team Valley Trading Estate, Gateshead
Tyne & Wear
NE11 0RU

POOLE

POOLE Tel:01202 732233 Fax:01202 737743 SMC Pneumatics (UK) Ltd Poole Regional Centre Unit 4, Acorn Business Centre, Ling Road Poole, Dorset BH12 4NZ

SHEFFIELD
Tel: 01909 565504 Fax: 01909 569717
SMC Pneumatics (UK) Ltd
Sheffield Regional Centre Unit 4, North Anston Business Park Houghton Road, North Anston, Sheffield S31 7JJ

Plymouth APPLIED AUTOMATION Tel: 01752 343300 Fax: 01752 341161

Redditch MULTI-PNEUMATICS Tel: 01527 544544 Fax: 01527 544296