



3 Port Solenoid Valve

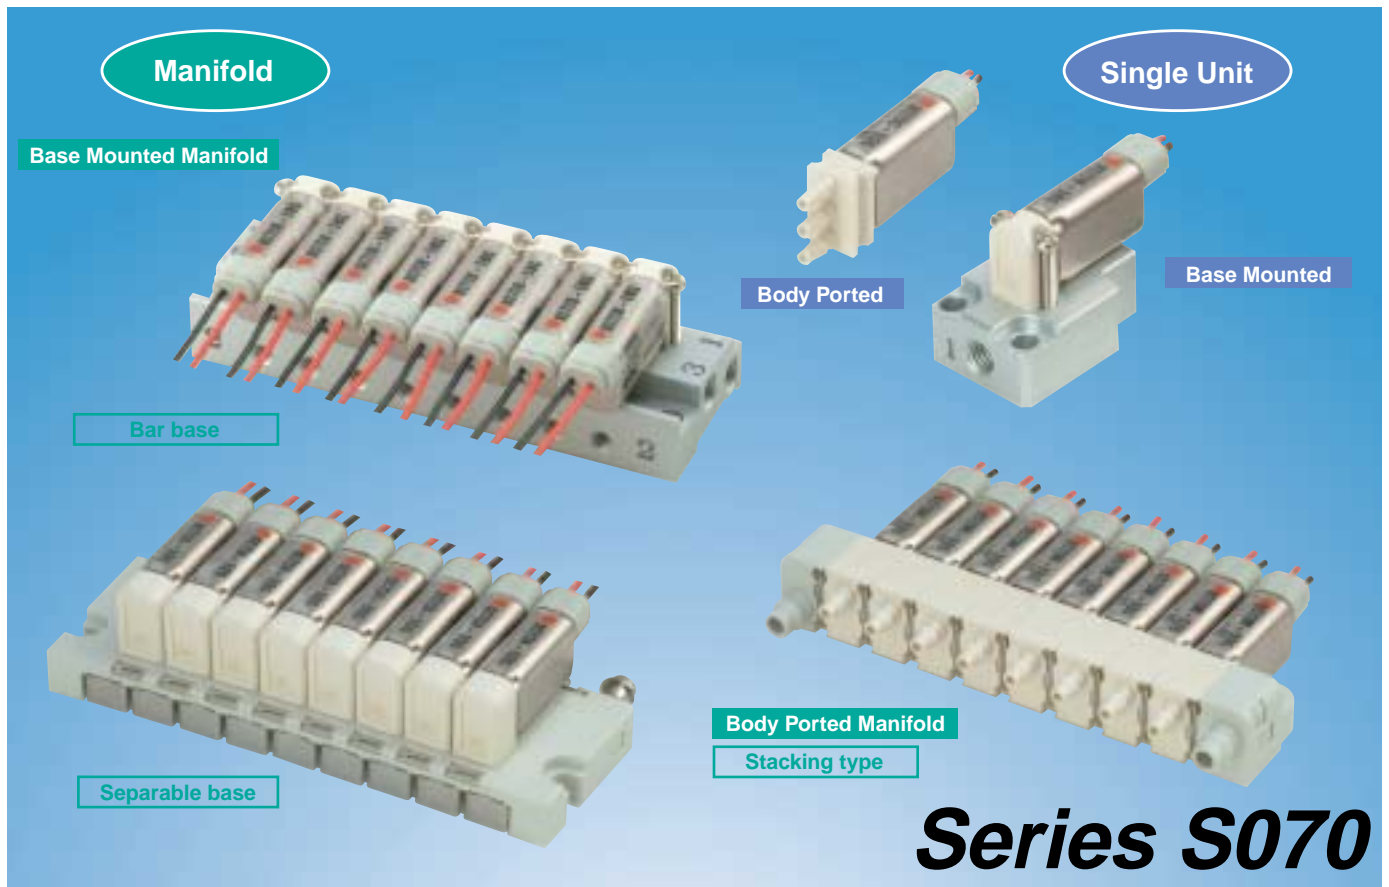

- Valve width 7 mm
- Weight 5 g (single unit valve)
- Power consumption 0.35 W (standard),
0.1 W (with power saving circuit)
- Operation noise 38 dB (A) or less
- Sonic conductance: C 0.083 [dm³/(s·bar)]
- Flow rate: 15 ℓ/min
- Stacking type manifold

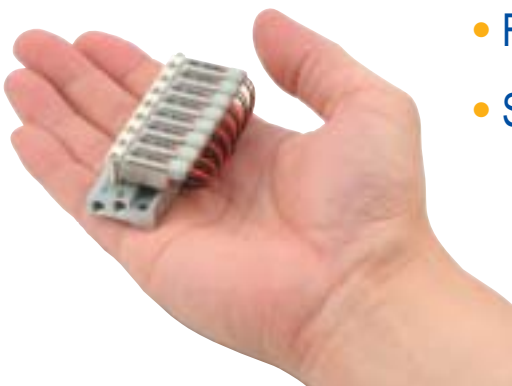

Separable base




Stacking type

Compact Direct Operated 3 Port Solenoid Valve

Series S070

How to Order Valve

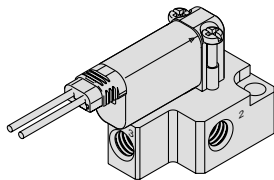


Base Mounted

S070 B - 5 B G

Body Ported

S070 C - 5 B G - 32

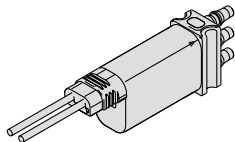

Body type

Symbol	Body type
B	Base mounted type with screws

Sub-plate/Port size of sub-plate

Symbol	Sub-plate
Nil	Without sub-plate
M3	With sub-plate
M5	

Body type

Symbol	Body type
C	Body ported

Port size

Symbol	Connection	Applicable tubing
32	Barb fitting	ø3.18/ø2



Coil voltage

5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC

Electrical entry

G – Grommet

C – Plug lead with light/surge voltage suppressor and connector with lead wire (L=300mm)

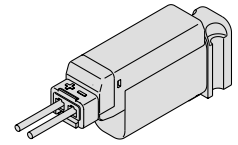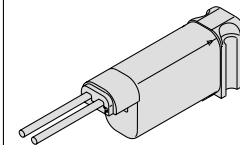

Power consumption – Pressure specification – Flow rate


Symbol	Power consumption (W)	Maximum operating pressure (MPa)	Cv factor
A	0.35	0.1	0.021
B		0.3	0.011
C	0.5	0.3	0.021
D		0.5	0.011
E <small>Note)</small>	0.1 <small>(with power saving circuit)</small>	0.1	0.011
F <small>Note)</small>		0.3	0.006



Note) An option only applicable to 24 VDC plug lead type.

Compact Direct Operated 3 Port Solenoid Valve **Series S070**

Specifications

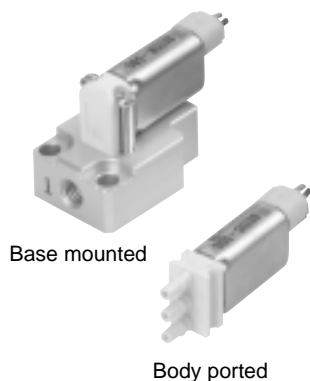

Valve construction	Poppet
Fluid	Air / Inert gas / Low vacuum (1.33×10^2 Pa)
Maximum operating pressure	0.3 MPa (0.35 W, 0.1 W), 0.5 MPa (0.5 W)
Proof pressure	1 MPa
Ambient and fluid temperature ^{Note 1)}	-10 to 50°C
Lubrication	Not required
Impact/Vibration resistance ^{Note 2)}	30/150 m/s ²
Enclosure	IP40
Weight	5 g (single unit valve)
Mounting orientation	Free



Note 1) Use dry air and prevent condensation at low temperatures.


Note 2) Vibration resistance: No malfunction resulted in 45 to 2000 Hz, a one-sweep test performed in the axial and right angle directions of the main valve and armature for both energized and de-energized states.

Impact resistance: No malfunction resulted in an impact test using a drop impact tester. The test was performed one time each in the axial and right angle directions of the main valve and armature, for both energized and de-energized states.

With the 0.1 W specification, the vibration and impact resistance is 10/50 m/s² or less.

Note 3) With the low vacuum specification, the operating pressure range is 1.33×10^2 Pa to the maximum operating pressure.

JIS symbol

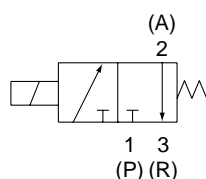

Solenoid specifications

Power consumption ^{Note 1)}	0.35 W (standard), 0.5 W (high pressure), 0.1 W (power saving)
Rated coil voltage	3, 5, 6, 12, 24 VDC
Allowable voltage fluctuation ^{Note 2)}	±10% of the rated voltage
Coil insulation type	Equivalent to class B



Note 1) With a light/surge voltage suppressor and power saving circuit, the light consumes a power equivalent to 2 mA. With the 0.1 W DC specification 0.35 W DC at inrush (20 ms) and 0.1 W DC at holding.

Note 2) With a power saving circuit, keep the voltage fluctuation within 24 VDC ± 5%.

Flow specifications/Response time

Power consumption	Maximum operating pressure	Flow characteristics				Response time ms ^{Note 2)}	
		C[dm ³ /(s·bar)]	b	Cv	Flow rate [l/min], ANR ^{Note 3)}	ON	OFF
0.5 W DC	0.5 MPa	0.042	0.27	0.011	9.6	3 or less	3 or less
	0.3 MPa	0.083	0.28	0.021	15.1	5 or less	3 or less
0.35 W DC	0.3 MPa	0.042	0.27	0.011	7.6	3 or less	3 or less
	0.1 MPa	0.083	0.28	0.021	9.5	5 or less	3 or less
0.1 W DC (at holding) with power saving circuit ^{Note 1)}	0.3 MPa	0.021	0.27	0.006	3.8	3 or less	6 or less
	0.1 MPa	0.042	0.28	0.011	4.8	5 or less	6 or less



Note 1) With the 0.1 W DC specification, keep the vibration/impact within 10/50 m/s².
0.35 W DC at inrush (20 ms) and 0.1 W DC at holding.

Note 2) The response time is the value at the rated voltage and maximum operating pressure.

Note 3) The flow values are calculated by using the maximum operating pressure with a Delta P = 0.1 MPa.
Calculation follow ISO 6358

Weight


Part N°	Weight (g)	Note
S070A-**G	6.4	-
S070A-**C	6.9	
S070A-**CO	6.1	
S070B-**G	6.1	Weight of mounting screw is 0.3 (g) for S070B
S070B-**C	6.6	
S070B-**CO	6.8	
S070C-**G	6.2	Weight of mounting screw is 0.3 (g) for S070C
S070C-**C	6.7	
S070C-**CO	5.9	

Series S070

Construction - Individual type

Component Parts

Number	Description	Material
1	Solenoid coil	—
2	Body	Resin
3	Core	Stainless steel
4	Armature assembly	Stainless steel, resin
5	Return spring	Stainless steel
6	Poppet	FKM
7	Interface gasket	FKM
8	Round head combination screw	Carbon steel
9	Sub-plate	Aluminum

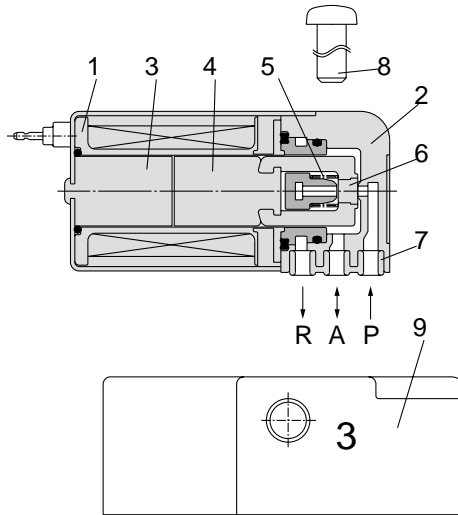


* The above figure is an example of S070B-□□G base piping type (mounted with screws).

Accessories - Individual type

Plug connector assembly (for plug lead)

 S070-14A-




• Lead wire length Weight (g)

Lead wire length	Weight (g)
Nil	150 mm 0.8
3	300 mm 1.4
6	600 mm 2.6
10	1000 mm 4.2

Sub-plate

 S070-S- M3



• Port size Weight (g)

Port size	Weight (g)
M3 M3 female thread	7.6
M5 M5 female thread	7.7

Replacement Parts - Individual type

Gasket

Valve model	Gasket No.
S070A	S070A-80A-1
S070B	S070B-80A-1
S070M	S070M-80A-1



Note) Order is accepted in 10 units.

Mounting screw

Valve model	Mounting screw No.
S070B	AXT632-106A-1
S070C	AXT632-106A-2




Note) Each of the above part numbers is for two screws, which are to be ordered by 10 units. Order is accepted in 10 units.

Dimensions

Base mounted with sub-plate


S070B-□□G-M3

Grommet type

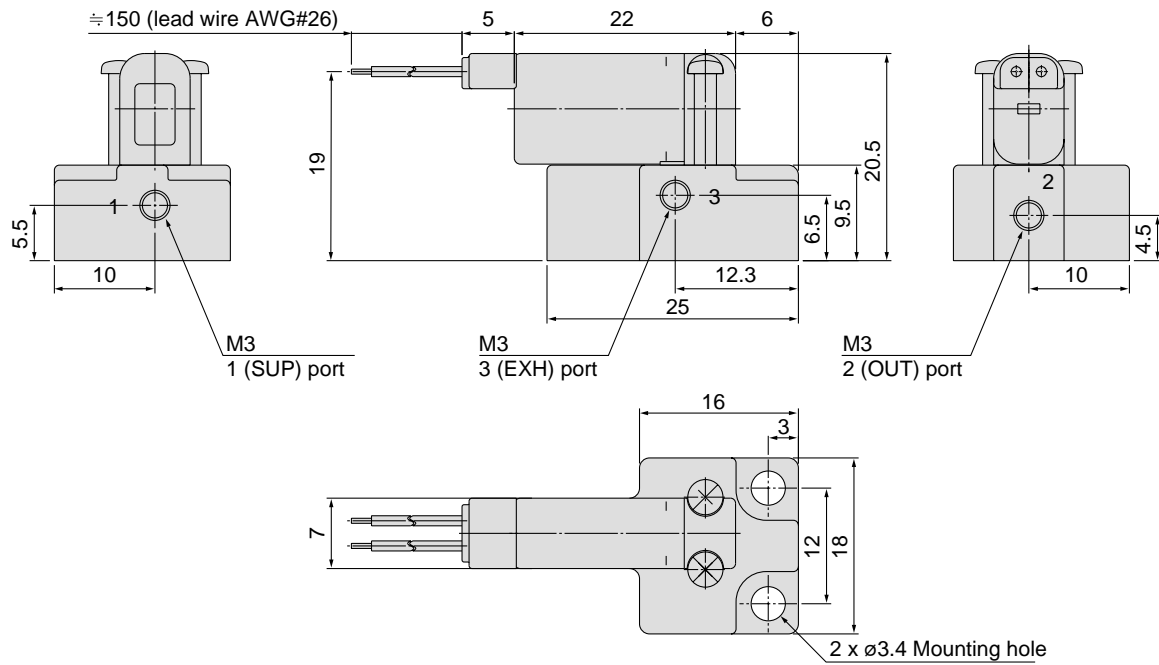

S070B-□□C-M3

Plug lead type

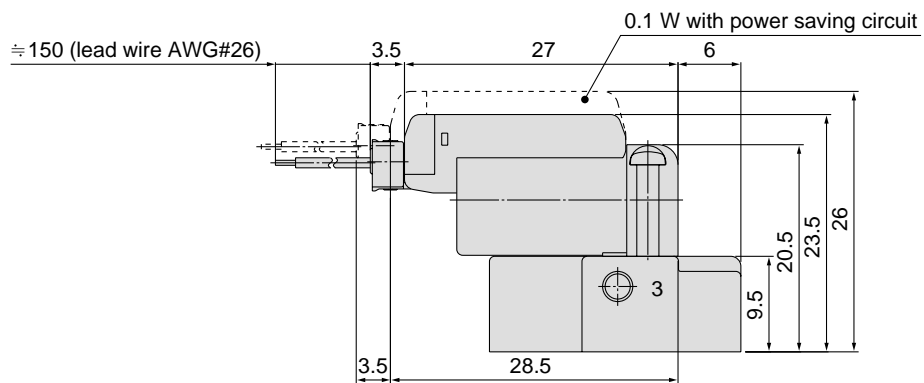


Series S070

Dimensions

Base mounted with sub-plate


S070B-□□G-M5

Grommet type

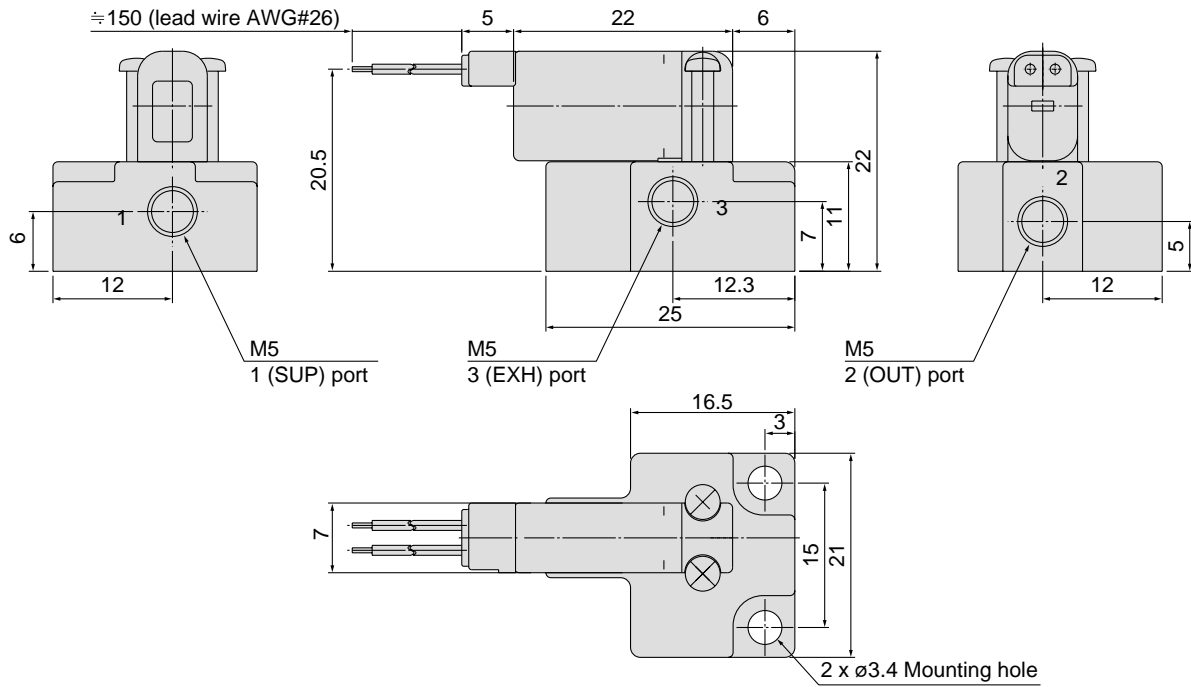

S070B-□□C-M5

Plug lead type

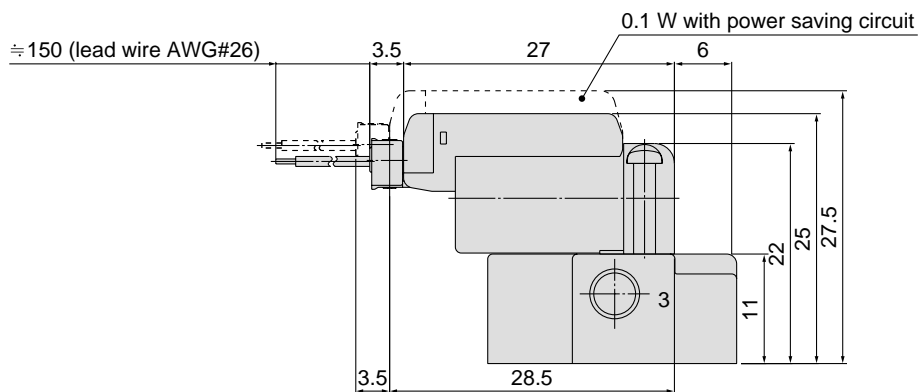


Dimensions

Body ported


S070C-□□G-32

Grommet type

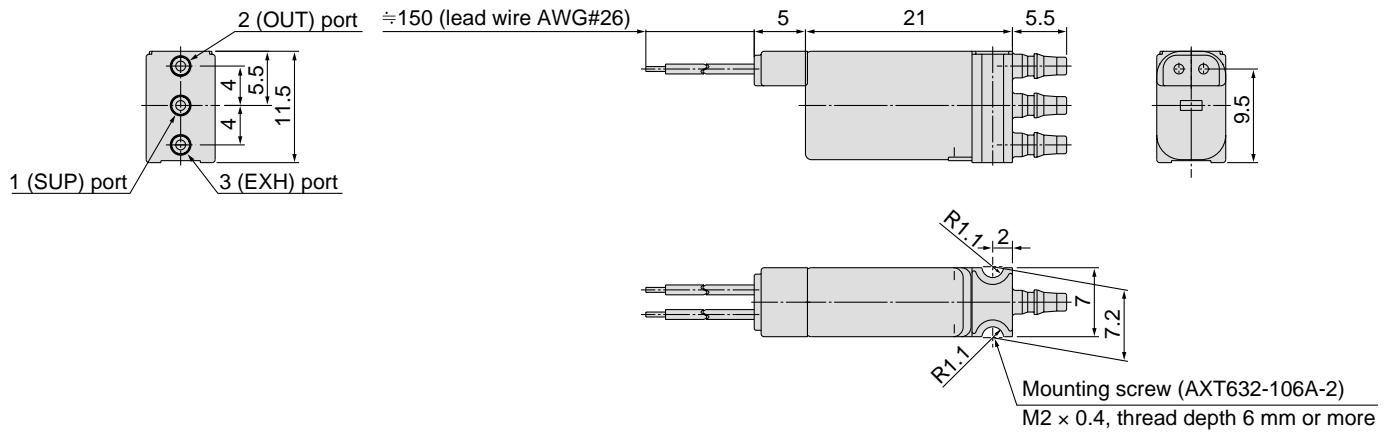

S070C-□□C-32

Plug lead type

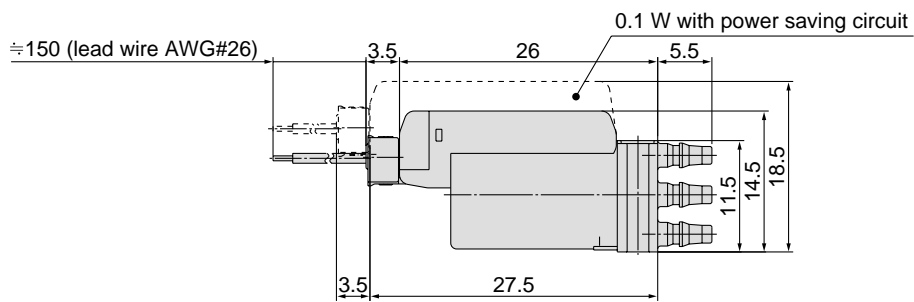

3 Port Solenoid Valve

Series S070/Base Mounted Manifold

Stacking Base Type

How to Order Manifold

Base Mounted Manifold Stacking Base


SS07 3 A01-08 C

Ports
3 3 port

Port size

Symbol	SUP/EXH port (Applicable tubing)	OUT port	
		Barb fittings	Applicable tubing
A01	Barb fittings	Barb fittings	ø3.18/ø2
A02	(ø6/ø4)		ø4/ø2.5

Note) The outside and inside diameters of the "applicable tubing" are indicated for the barb fitting.

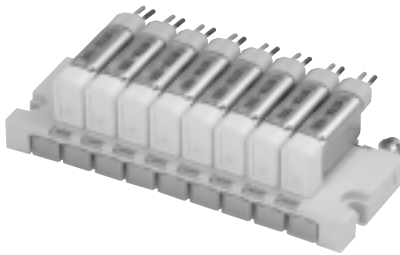

Stations

02	2 stations
03	3 stations
⋮	⋮
20	20 stations

Note) Maximum of 20 stations

Electrical entry

C Grommet/Plug lead

How to Order Manifold Assembly

Enter the part numbers of the valves and options to be mounted below the manifold base part number.

<Example>


SS073A01-04C 1 set ——— Manifold Base no.

*S070A-5BG 3 set ——— Valve no.

*SS070A-10A 1 set ——— Blanking plate assembly no.

→ Prefix the symbol "*" to the solenoid valve part number.

Write sequentially from the 1st station on the D side.

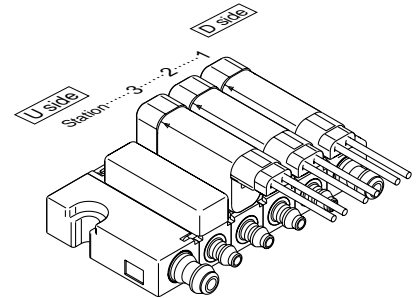

How to Order Valve

S070 A-5 B G

Body type

Symbol	Body type
A	Base mounted with clips

Electrical entry

G	Grommet
C	Plug lead with light/surge voltage suppressor and connector with lead wire (L=300m)

Coil voltage

5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC

Power consumption – Pressure specification – Flow rate

Symbol	Power consumption (W)	Maximum operating pressure (MPa)	Cv factor
A	0.35	0.1	0.021
B		0.3	0.011
C	0.5	0.3	0.021
D		0.5	0.011
E Note)	0.1 (with power saving circuit)	0.1	0.011
F Note)		0.3	0.006

Note) Accessories please refer to page 13.


Note) An option only applicable to 24 VDC plug lead type.

Compact Direct Operated 3 Port Solenoid Valve **Series S070**

Dimensions

Base mounted manifold / Separable base

SS073A⁰¹/₀₂ - Stations C

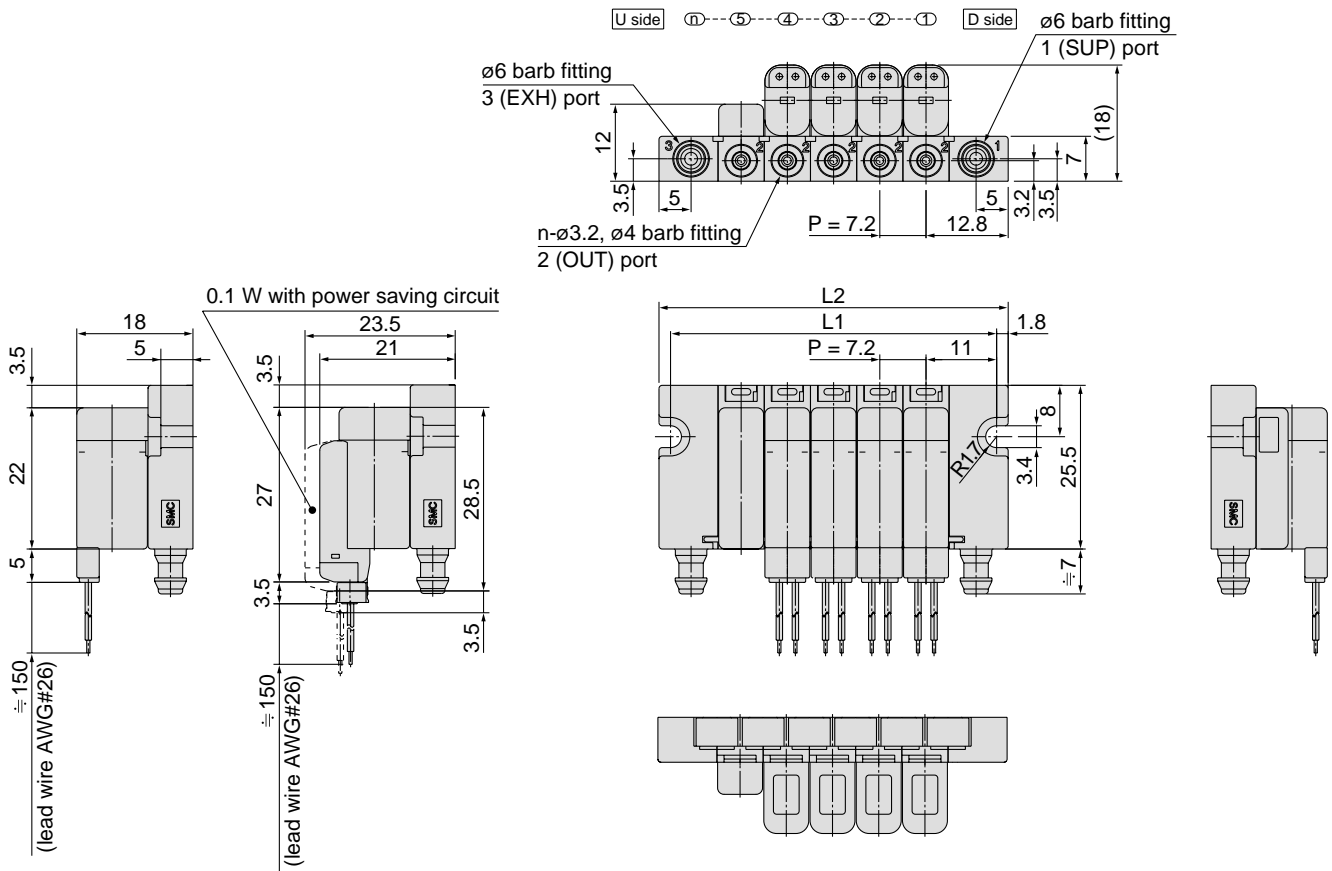

Dimensions

Formulas: $L1 = n \times 7.2 + 14.8$, $L2 = n \times 7.2 + 18.4$, n: Stations (maximum 20 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	29.2	36.4	43.6	50.8	58	65.2	72.4	79.6	86.8	94	101.2	108.4	115.6	122.8	130	137.2	144.4	151.6	158.8
L2	32.8	40	47.2	54.4	61.6	68.8	76	83.2	90.4	97.6	104.8	112	119.2	126.4	133.6	140.8	148	155.2	162.4

Weight

Part N°	Calculation of weight (g) (N=Station Number, 2 to 20)	Note
SS073A01-°C	5.4 + 2.1 x N	Not include valves
SS073A02-°C		

3 Port Solenoid Valve

Series S070/Base Mounted Manifold

Bar Base Specification

How to Order Manifold

Base Mounted Manifold
Bar Base

SS07 3 B01-08 C

Ports
3 3 port

Port size

Symbol	SUP/EXH port (Applicable tubing)	OUT port Applicable tubing	
	B01	M5 female thread	M3 female thread


Stations

02	2 stations
03	3 stations
⋮	⋮
20	20 stations

Note) Maximum of 20 stations

Electrical entry

C	Grommet/Plug lead
----------	-------------------

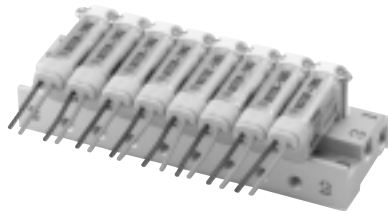

How to Order Manifold Assembly

Enter the part numbers of the valves and options to be mounted below the manifold base part number.

<Example>


SS073B01-04C 1 set ——— Manifold Base no.

***S070B-5BG** 3 set ——— Valve no.

***SS070B-10A** 1 set ——— Blanking plate assembly no.

→ Prefix the symbol "*" to the solenoid valve part number.

Write sequentially from the 1st station on the D side.

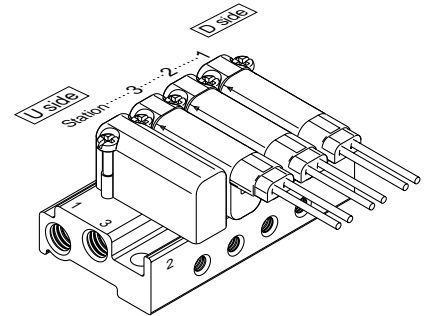

How to Order Valve

S070 B-5 B G

Body type

Symbol	Body type
B	Base mounted with screws

Electrical entry

G	Grommet
C	Plug lead with light/surge voltage suppressor and connector with lead wire (L=300)

Coil voltage

5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC

Power consumption – Pressure specification – Flow rate

Symbol	Power consumption (W)	Maximum operating pressure (MPa)	Cv factor
A	0.35	0.1	0.021
B		0.3	0.011
C	0.5	0.3	0.021
D		0.5	0.011
E Note)	0.1 (with power saving circuit)	0.1	0.011
F Note)		0.3	0.006

Note) Accessories please refer to page 13.


Note) An option only applicable to 24 VDC plug lead type.

Compact Direct Operated 3 Port Solenoid Valve **Series S070**

Dimensions

Base mounted manifold / Bar base

SS073B01- Stations C

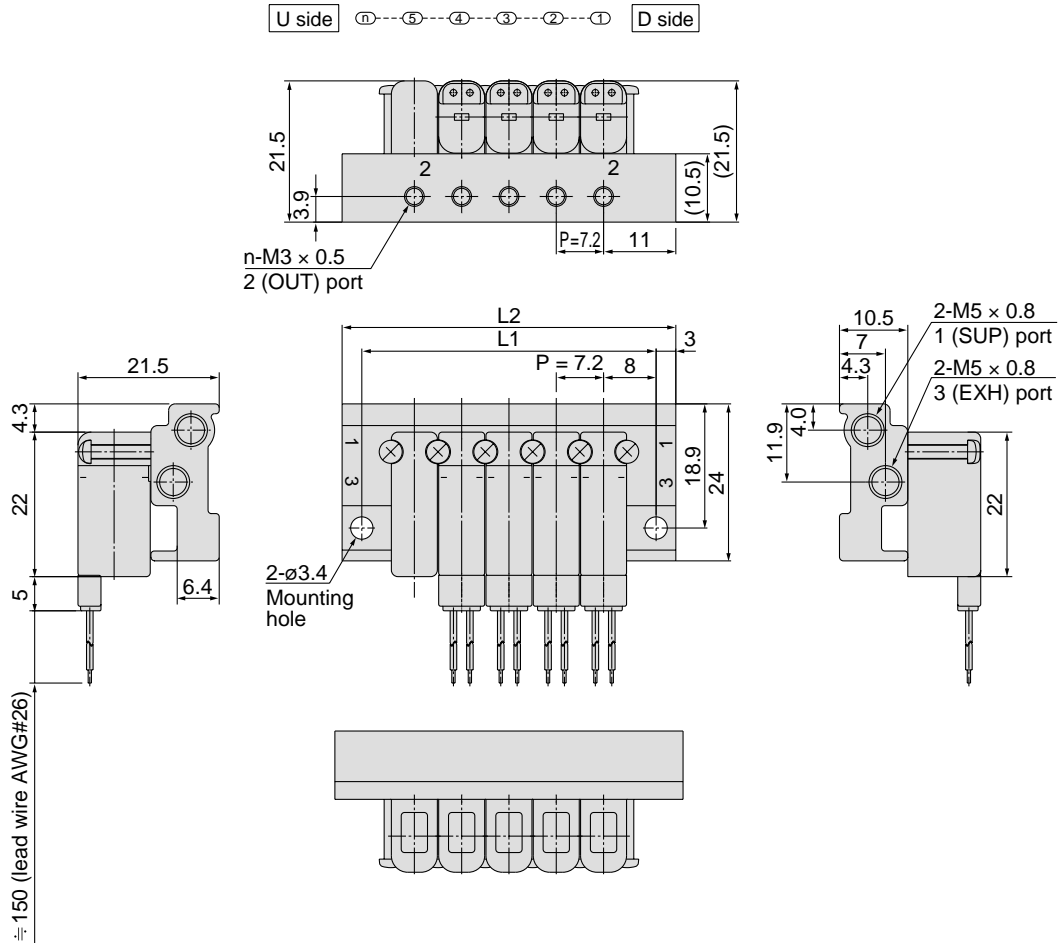

Dimensions

Formulas: $L1 = n \times 7.2 + 8.8$, $L2 = n \times 7.2 + 14.8$, n: Stations (maximum 20 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1		23.2	30.4	37.6	44.8	52	59.2	66.4	73.6	80.8	88	95.2	102.4	109.6	116.8	124	131.2	138.4	145.6	152.8
L2		29.2	36.4	43.6	50.8	58	65.2	72.4	79.6	86.8	94	101.2	108.4	115.6	122.8	130	137.2	144.4	151.6	158.8

Weight

Part N°	Calculation of weight (g) (N=Station Number, 2 to 20)	Note
SS073B01-*C	$6.0 + 2.2 \times N$	Not include valves

3 Port Solenoid Valve

Series S070/Body Ported Manifold

Stacking Type Specifications

How to Order Manifold

Body Ported Manifold Stacking type

SS07 3 M01-08 C

Ports
3 3 port

Port size

Symbol	SUP/EXH port (Applicable tubing)	OUT port	
		Barb fittings	Applicable tubing
M01	Barb fittings ($\phi 6/\phi 4$)	Barb fittings	$\phi 3.18/\phi 2$
M02		Barb fittings	$\phi 4/\phi 2.5$



Note) The outside and inside diameters of the "applicable tubing" are indicated for the barb fitting.


Stations

02	2 stations
03	3 stations
⋮	⋮
20	20 stations

Note) Maximum of 20 stations

Electrical entry

C Grommet/Plug lead

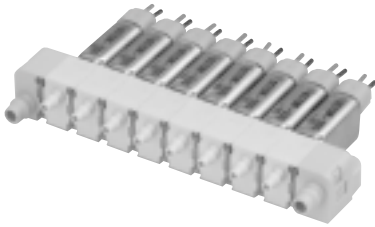

How to Order Manifold Assembly


Enter the part numbers of the valves and options to be mounted below the manifold base part number.

<Example>

SS073M01-04C 1 set ——— Manifold Base no.
***S070M-5BG-32** 4 set ——— Valve no.

→ Prefix the symbol "*" to the solenoid valve part number.

Write sequentially from the 1st station on the D side.

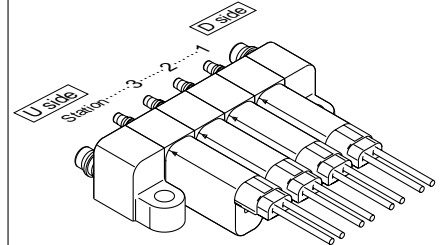

How to Order Valve

S070 M-5 B G-32

Body type

Symbol	Body type
M	Body ported stacking manifold type

Port size

Symbol	Connection	Applicable tubing
32	Barb fitting	$\phi 3.18/\phi 2$
40		$\phi 4/\phi 2.5$

Electrical entry

G	Grommet
C	Plug lead with light/surge voltage suppressor and connector with lead wire (L=300)

Coil voltage

5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC

Power consumption – Pressure specification – Flow rate

Symbol	Power consumption (W)	Maximum operating pressure (MPa)	Cv factor
A	0.35	0.1	0.021
B		0.3	0.011
C	0.5	0.3	0.021
D		0.5	0.011
E Note)	0.1 (with power saving circuit)	0.1	0.011
F Note)		0.3	0.006

Note) Accessories please refer to page 13.




Note) An option only applicable to 24 VDC plug lead type.

Compact Direct Operated 3 Port Solenoid Valve **Series S070**

Dimensions

Body ported stacking type manifold

SS073M⁰¹/₀₂ - Stations C

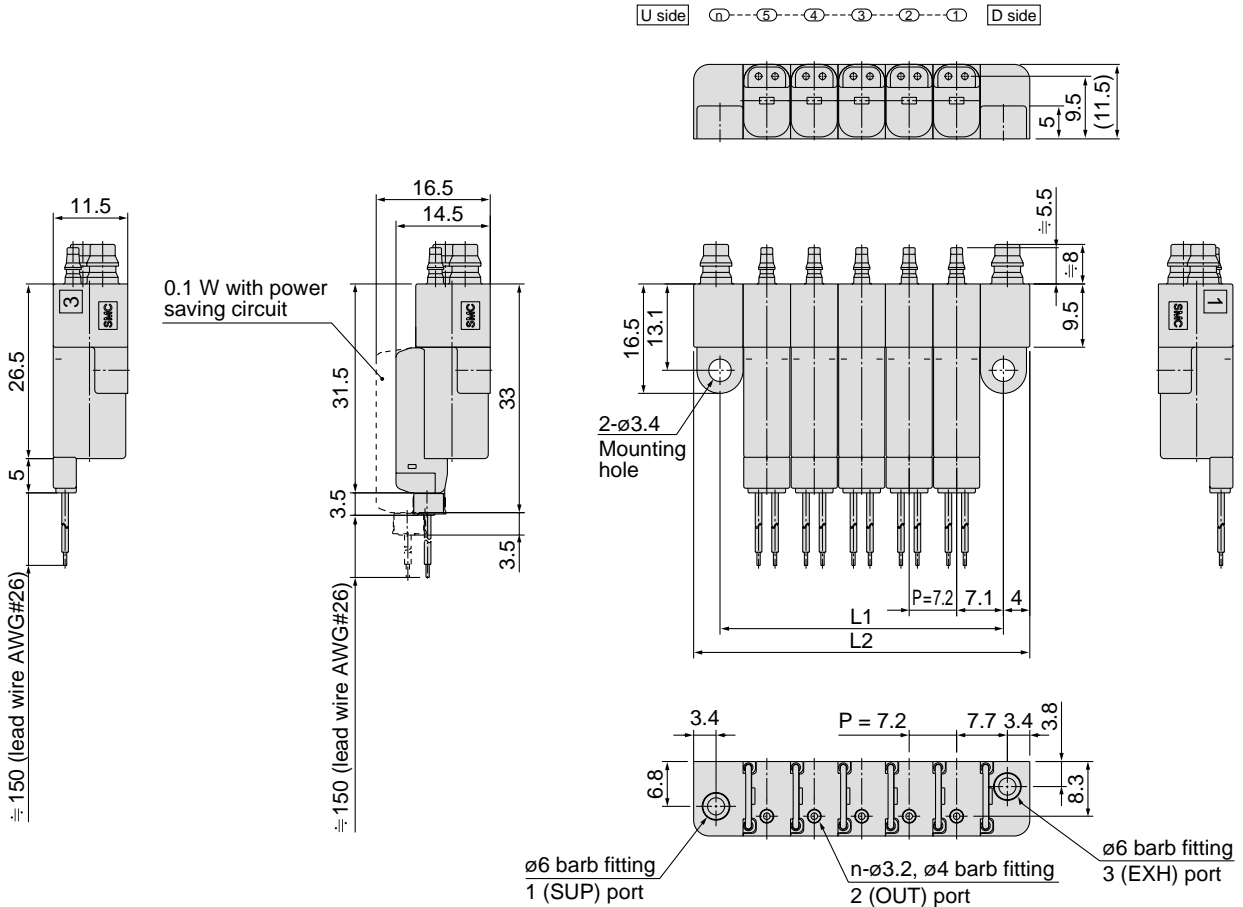

Dimensions

Formulas: $L1 = n \times 7.2 + 7$, $L2 = n \times 7.2 + 15$, n: Stations (maximum 20 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	21.4	28.6	35.8	43	50.2	57.4	64.6	71.8	79	86.2	93.4	100.6	107.8	115	122.2	129.4	136.6	143.8	151
L2	29.4	36.6	43.8	51	58.2	65.4	72.6	79.8	87	94.2	101.4	108.6	115.8	123	130.2	137.4	144.6	151.8	159

Weight

Type	Part N°	Calculation of weight (g) (N=Station Number, 2 to 20)	Note
Body ported stacking, Grommet	SS073M01-*C	$2.8 + 6.7 \times N$	Include valves
	SS073M02-*C		
Body ported stacking, with connector	SS073M01-*C	$2.8 + 7.2 \times N$	
	SS073M02-*C		
Body ported stacking, without connector	SS073M01-*C	$2.8 + 6.4 \times N$	
	SS073M02-*C		

Series S070


Manifold Options

Blanking plate assembly (for SS073A)

SS070A-10A (for separable base)

This assembly is mounted on a manifold block where the valve is removed for maintenance or a replacement valve is going to be mounted.

Name	No.	Weight (g)
Blanking plate	SS070A-10A	0.7

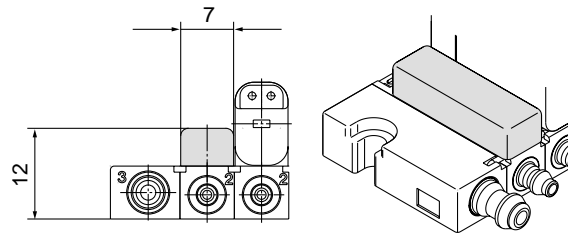


Blanking plate assembly (for SS073B)

SS070B-10A (for bar base)

This assembly is mounted on a manifold block where the valve is removed for maintenance or a replacement valve is going to be mounted.

Name	No.	Weight (g)
Blanking plate	SS070B-10A	1.3


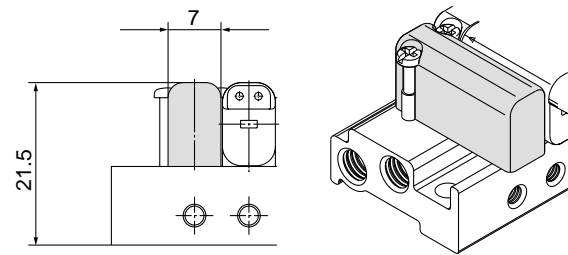


Intermediate block assembly (for SS073A)

SS070A-B (for separable base)

This assembly is used to secure the manifold when a large number of stations are manifolded. (Accommodated as one station.)

* In the manifold specification sheet, specify the position where the block assembly is mounted.

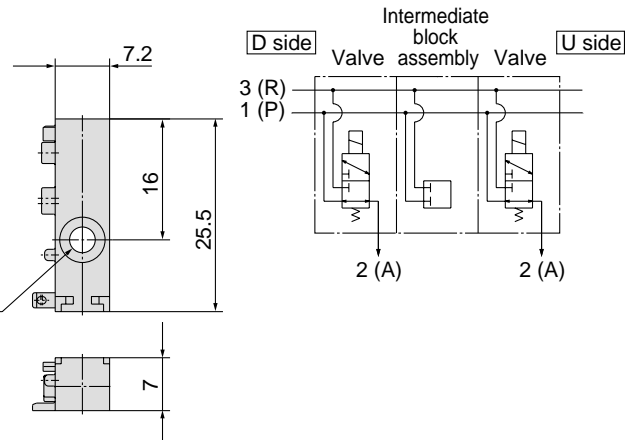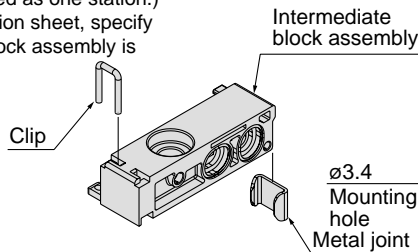



Name	No.	Weight (g)
Intermediate block	SS070A-B	1.5

Intermediate block assembly (for SS073M)

SS070M-B (for stacking type)

This assembly is used to secure the manifold when 20 or more stations are manifolded. (Accommodated as one station.)

* In the manifold specification sheet, specify the position where the block assembly is mounted.

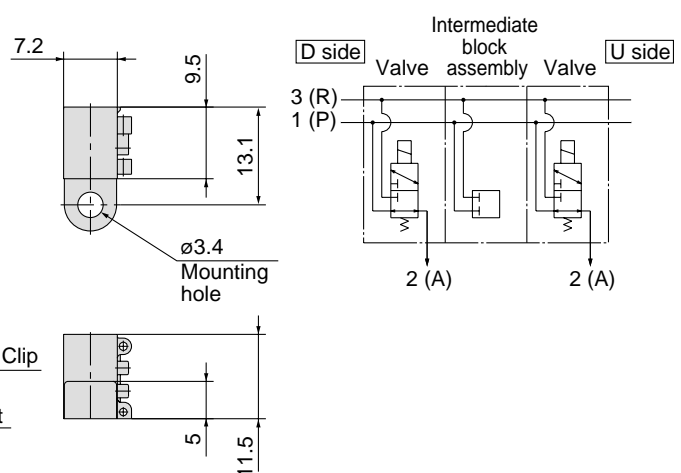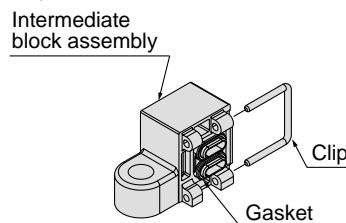

Name	No.	Weight (g)
Blanking plate	SS070M-B	1.2


Plug connector assembly (for plug lead)

S070-14A



• Lead wire length Weight (g)


Nil	150 mm	0.8
3	300 mm	1.4
6	600 mm	2.6
10	1000 mm	4.2

 

Series S070

Exploded View of Separable Base

Base mounted / SS073A□-□C Exploded view of separable base

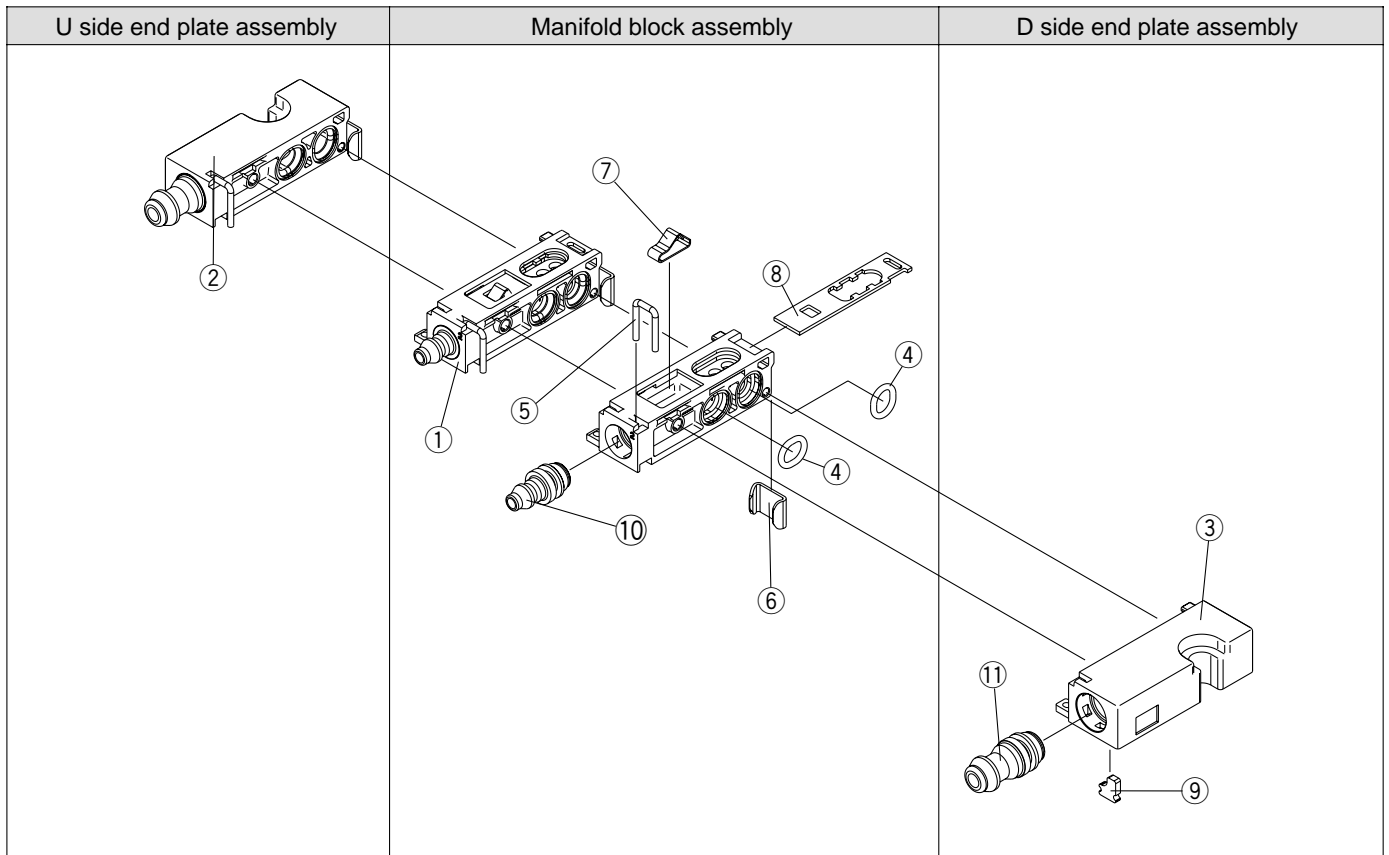

< Manifold Block Assembly >

① Manifold block assembly No.

SS070A 01-1A

● Port size

01	With $\phi 3.18/\phi 2$ barb fitting
02	With $\phi 4/\phi 2.5$ barb fitting

< U Side End Plate Assembly >

② U side end plate assembly No.

SS070A01-2A

< D Side End Plate Assembly >

③ D side end plate assembly No.

SS070A01-3A

< Replacement Parts for Manifold Block >

Replacement Parts

No.	No.	Description	Material	Number
④	SS070A-80A-1	O-ring	FKM	10
⑤	SS070A-80A-2	Clip	Stainless steel	10
⑥	SS070A-80A-3	Metal joint	Stainless steel	10
⑦	SS070A-80A-4	Leaf spring	Stainless steel	10
⑧	SS070A-80A-5	Mounting bracket	Stainless steel	10

< Replacement Parts for U/D End Plate >

Replacement Parts

No.	No.	Description	Material	Number
⑨	SS070A-80A-6	Stopper plate	Stainless steel	10

< Barb Fitting Assembly >

⑩ Barb fitting assembly (for cylinder port)

SS070-50A-32

● Port size

32	Applicable tube $\phi 3.18/\phi 2$
40	Applicable tube $\phi 4/\phi 2.5$

🔍 Note) Order is accepted in 10 units.

⑪ Barb fitting assembly (for 1(P), 3(R) ports)

SS070-51A-60


● Applicable tubing $\phi 6/\phi 4$

🔍 Note) Order is accepted in 10 units.

Series S070

Exploded View of Stacking Type

Body ported type / SS073M01-□C Exploded view of stacking type

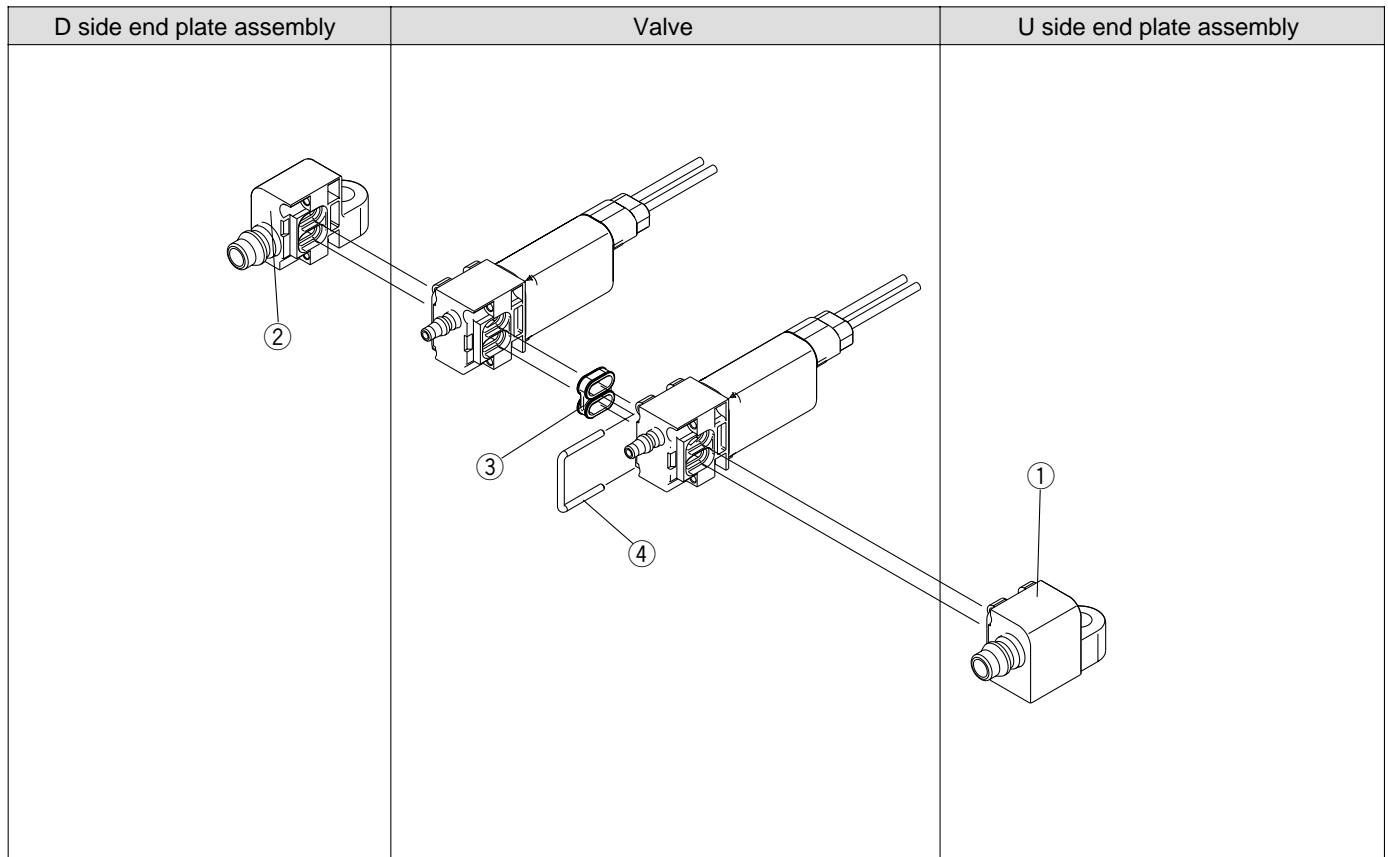

< U End Plate Assembly >

① U end plate assembly No.

SS070M01-2A

< D End Plate Assembly >

② D end plate assembly No.

SS070M01-3A


Replacement Parts


No.	No.	Description	Material	Number
③	SS070M-80A-1	Gasket	FKM	10
④	SS070M-80A-2	Clip	Stainless steel	10




Safety Instructions

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by a label of "**Caution**", "**Warning**" or "**Danger**". To ensure safety, be sure to observe ISO 4414 Note 1), JIS B 8370 Note 2) and other safety practices.

 **Caution** : Operator error could result in injury or equipment damage.

 **Warning** : Operator error could result in serious injury or loss of life.

 **Danger** : In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power – General Rules for Pneumatic Equipment

Note 2) JIS B 8370: Pneumatic system axiom

Warning

1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or after analysis and/or tests to meet your specific requirements. The expected performance and safety assurance will be the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalogue information with a view to giving due consideration to any possibility of equipment failure when configuring a system.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if handled incorrectly. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.

1. Inspection and maintenance of machinery/equipment should only be performed after confirmation of safe locked-out control positions.
2. When equipment is to be removed, confirm the safety process as mentioned above. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
3. Before machinery/equipment is restarted, take measures to prevent shooting-out of cylinder piston rod, etc.

4. Contact SMC if the product is to be used in any of the following conditions:

1. Conditions and environments beyond the given specifications, or if product is used outdoors.
2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuits in press applications, or safety equipment.
3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.



3 Port Solenoid Valve/Common Precautions 1

Be sure to read before handling.

Design

⚠ Warning

1. Actuator drive

When an actuator, such as a cylinder, is to be driven using a valve, take appropriate measures to prevent potential danger caused by actuator operation.

2. Effect of back pressure when using a valve

Use caution when valves are manifolded because actuator malfunction due to back-pressure may occur.

3. Holding pressure (including vacuum)

Since valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum) in a pressure vessel.

4. The valve cannot be used as an emergency shutoff valve, etc.

The valves presented in this catalogue are not designed for safety applications such as an emergency shutoff valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

5. Maintenance space

The installation should allow sufficient space for maintenance activities (removal of valve, etc.).

6. Release of residual pressure

Provide a residual pressure release function for maintenance purposes.

7. Vacuum applications

When a valve is used for vacuum switching, take appropriate measures against the suction of external dust or other contaminants through vacuum pads and exhaust ports.

8. Ventilation

When a valve is used inside a sealed control panel, etc., provide ventilation to prevent a pressure increase caused by exhausted air inside the control panel or temperature rise caused by the heat generated by the valve.

Selection

⚠ Warning

1. Confirm the specification.

The products presented in this catalogue are designed only for use in compressed air systems (including vacuum). Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to specifications.)

Contact SMC when using a fluid other than compressed air (including vacuum).

2. Extended periods of continuous energization

 
• Continuous energization of the valve for extended periods of time may have an adverse effect on the solenoid valve performance and the peripheral equipment due to temperature rises caused by the heat generation of the coil. Please consult SMC if valves will be continuously energized for extended periods of time or the energized period per day will be longer than the de-energized period. It is also possible to shorten the energization period by using valves of the N.O. (normally open) type.

• When solenoid valves are mounted in a control panel, employ measures to radiate excess heat, so that temperatures remain within the valve specification range. Use special caution when three or more stations sequentially aligned on the manifold are continuously energized since this will cause a drastic temperature rise.

⚠ Caution

1. Leakage voltage

When using a resistor in parallel with the switching element or using a C-R element (surge voltage suppressor) for protection of the switching element, note that leakage voltage will increase due to leakage current flowing through the resistor or C-R element. Limit the amount of residual leakage voltage to the following value: 2% or less the rated voltage



2. Surge voltage suppressor

If a surge protection circuit contains diodes other than ordinary types of diodes such as Zener diodes or ZNRs, a residual voltage that is in proportion to the protective elements and the rated voltage will remain. Therefore, give consideration to surge voltage protection of the controller.

3. Low temperature operation

Valve use is possible to temperature extremes to -10°C . Take appropriate measures to avoid freezing of drainage, moisture etc.

4. Mounting orientation

Refer to the specifications.



3 Port Solenoid Valve/Common Precautions 2

Be sure to read before handling.

Mounting

⚠ Warning

1. If air leakage increases or equipment does not operate properly, stop operation.

Check mounting conditions when air and power supplies are connected. Initial function and leakage tests should be performed after installation.

2. Instruction manual

Mount and operate the product after reading the manual carefully and understanding its contents.

Also keep the manual where it can be referred to as necessary.

3. Painting and coating

Warnings or specifications printed or pasted on the product should not be erased, removed or covered up.

Consult SMC if paint is to be applied to resinous parts, as this may have an adverse effect due to the paint solvent.

Piping

⚠ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Screwing in fittings

When screwing fittings into valves, tighten as follows.

1) M3, M5

(1) When installing SMC fittings, etc., follow the procedures below.

After tightening by hand, tighten an additional 1/4 rotation for M3 and 1/6 rotation for M5 with a tool. However, when using a miniature fitting, tighten an additional 1/4 rotation with a tool after tightening by hand. Also, when there are 2 gaskets such as in case of a universal elbow or universal tee, tighten an additional 1/2 rotation.

Note) If overtightened, threaded part may be broken or gasket deformed. If tightened insufficiently, thread part may be loosened. In either case, air leakage could occur.

(2) When using a fitting brand other than SMC, follow the instruction by the manufacturer of the fittings.

3. Connection of piping to products

When connecting piping to a product, refer to its instruction manual to avoid mistakes regarding the supply port, etc.

Wiring

⚠ Caution

1. Applied voltage

When electric power is connected to a solenoid valve, be careful to apply the proper voltage. Improper voltage may cause malfunction or coil damage.

2. Confirm the connections.

After completing the wiring, confirm that the connections are correct.

Lubrication

⚠ Caution

1. Lubrication

1) The valve has been lubricated for life at the manufacturer, and does not require further lubrication in service.

2) If a lubricant is applied in the system, use turbine oil class 1 (no additives), ISO VG32.

Air Supply

⚠ Warning

1. Use clean air.

Do not use compressed air which contains chemicals, synthetic oils containing organic solvents, salts or corrosive gases, etc., as this can cause damage or malfunction.

⚠ Caution

1. Install air filters.

Install air filters close to valves at their upstream side. A filtration degree of 5 μm or less should be selected.

2. Install an air dryer, after-cooler or water separator, etc.

Air that includes excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an air dryer, after-cooler or water separator, etc.

3. If excessive carbon dust is generated, eliminate it by installing mist separators at the upstream side of valves.

If excessive carbon dust is generated by the compressor, it may adhere to the inside of valves and cause malfunction.

Refer to SMC's "Best Pneumatics Vol. 4" catalogue for compressed air quality.



3 Port Solenoid Valve/Common Precautions 3

Be sure to read before handling.

Operating Environment

Warning

1. Do not use in atmospheres where the valve is in direct contact with corrosive gases, chemicals, salt water, water or steam.
2. Do not use in an explosive atmosphere.
3. Do not use in locations subject to vibration or impact. Confirm the specifications in the main section of the catalogue.
4. Use a protective cover, etc., to shield valves from direct sunlight.
5. Shield valves from radiated heat generated by nearby heat sources.
6. Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.
7. When solenoid valves are mounted in a control panel or are energized for extended periods of time, employ measures to radiate excess heat, so that temperatures remain within the valve specification range.

Maintenance

Warning

1. Perform maintenance procedures as shown in the instruction manual.

If handled improperly, malfunction or damage of machinery or equipment may occur.

2. Removal of equipment maintenance and supply/exhaust of compressed air

When equipment is serviced, first confirm that measures are in place to prevent dropping of work pieces and run-away of equipment, etc. Then cut the supply pressure and power, and exhaust all compressed air from the system using its residual pressure release function.

When the equipment is to be started again after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators, etc., and then confirm that the equipment is operating normally.

3. Low frequency operation

Valves should be switched at least once every 30 days to prevent malfunction. (Use caution regarding the air supply.)

Caution

1. Drain flushing

Remove drainage from air filters regularly.

2. Lubrication

Once lubrication has been started, it must be continued. And use turbine oil Class 1 (no additives), VG32. If other lubricant oil is used, it may cause malfunction. Contact us for suggested turbine oil Class 2(with additive), VG32.



Series S070/Specific Product Precautions 1

Be sure to read before handling.


Refer to pages 16 through 19 for safety instructions, precautions.

⚠ Caution

Valve mounting / Removal

1. Base mounted with screws

With the base mounted type fixed with screws, confirm the installation of the gasket mounted on the body interface and fasten the dedicated mounting screws (AXT632-106-1) at an appropriate torque (0.10 to 0.14 Nm). (Fasten equally so that the valve will not tilt.)

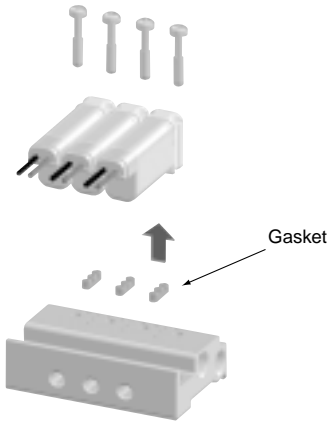



2. Base mounted with clips

1 Hook a flat head watchmakers screwdriver into the hole of the metal bracket and pull it approximately 1 mm in the direction indicated by the arrow. 2 Insert the solenoid valve from above. After confirming that the bottom surface of the solenoid valve contacts the top surface of the manifold, detach the flat head screwdriver from the mounting bracket while holding the solenoid valve body. (Before mounting, confirm the installation of the interface gasket on the solenoid valve body.)

The built-in leaf spring returns the mounting bracket to its original position.

(Then confirm that the end of the mounting bracket is aligned with the side of the manifold block. Refer to the figure below.)

Similarly, to remove the valve, pull the mounting bracket and pull up the solenoid valve vertically. Use caution so that no excessive force is applied to the lead wire in mounting and removal.

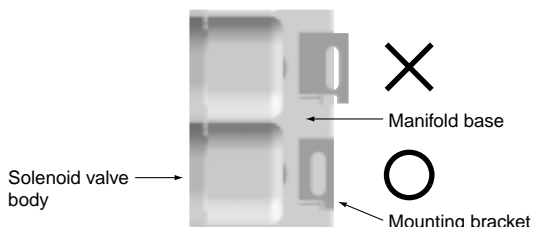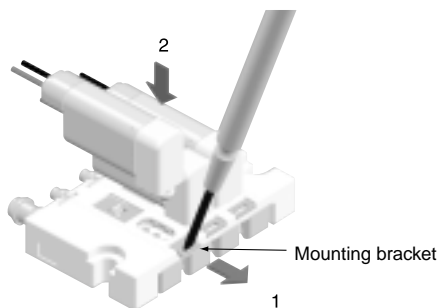

⚠ Caution

Screwing in M5/M3 thread

After tightening by hand, tighten an additional 1/4 rotation for M3 and 1/6 rotation for M5. Overtightening may cause bending of the thread or air leakage due to deformation of the gasket. Insufficient screwing may cause loosening of the thread or air leakage.

Applicable Tubing Size

Stacking manifold


Port	Applicable tubing	Recommended tubing
1 (SUP), 3 (EXH)	ø6/ø4	TS0604/TU0604
2 (OUT)	ø4/ø2.5	TS0425/TU0425
	ø3.18/ø2	TIUB01

Note) In case of a body ported single unit valve, the applicable tubing size is ø3.18/ø2 for all 1 (SUP), 2 (OUT), and 3 (EXH) ports.

If fittings of a brand other than SMC are used, follow the specifications of the fittings to be mounted.

Tubing installation (with barb fitting)

- Using tubing cutters TK-1, 2, or 3, cut the tubing perpendicularly to the tubing axis while allowing for sufficient margin to the required length.
- Insert the tubing and push it all the way to the barb end. If the tubing is not installed securely to the end, problems such as leakage or disconnection of the tubing can occur.
- When the tubing is inserted into the barb fitting, push it in the direction of the tubing axis to prevent excessive lateral loads being applied to the barb fitting.

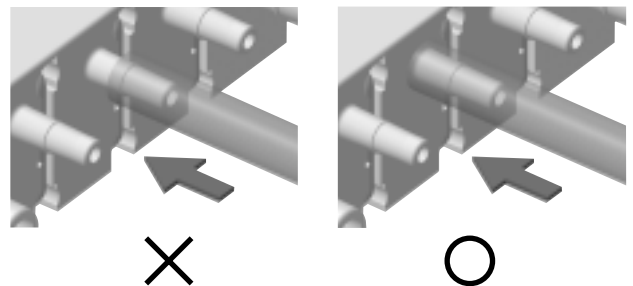

- To remove the tubing from the barb fitting, use caution so that no excessive lateral load will be applied to the barb fitting. When using a cutter to remove the tubing, sufficient care should be taken so as not to make any flaws on the barb fitting.
- After tubing installation, avoid excessive loads, such as tensile, compressive, or bending strength, being applied to the tubing.



Series S070/Specific Product Precautions 2


Be sure to read before handling.

Refer to pages 16 through 19 for safety instructions, precautions.

⚠ Caution Mounting

1. Solenoid valve fixing procedure (body ported single unit)

When mounting a body ported type single unit valve, tighten the dedicated mounting screw (AXT632-106A-2) at an appropriate torque (0.05 to 0.07 Nm) to firmly secure the valve body. (Tighten equally so that the valve will not tilt.) If the coil is fixed, the coil joint may break due to application of an excessive load to the tubing body, for example, when the tubing is inserted. With a base mounted type solenoid valve also, use caution to avoid excessive loads.

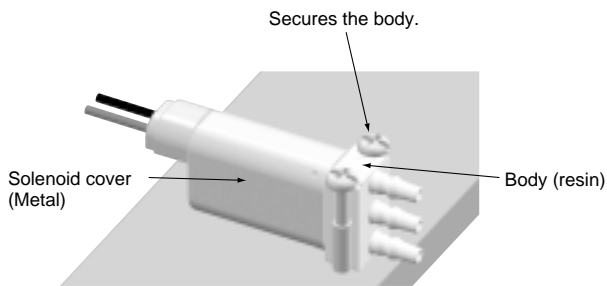


⚠ Caution Adding and removing manifold stations

1. Base mounted stacking type

- 1 Remove the clip and metal joint from the position where the new station is to be mounted by pulling them in the directions indicated by the arrows.
- 2 Place the additional manifold block assembly and mount the metal joint and clip by reversing the assembly order. Securely insert the clip and the metal joint so that they will not protrude from the top and bottom surfaces respectively.


The clip is commonly used to secure the manifold block and fittings.

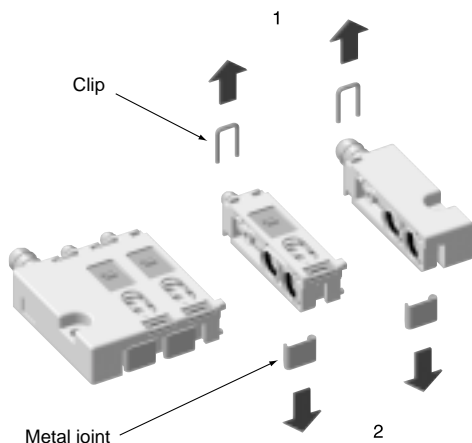

To remove the station, follow the same procedure for assembly and disassembly.

2. Body ported manifold type

- 1 Remove the clip on the position where the station is to be added by pulling it in the direction indicated by the arrow. (Insert a flat head screwdriver in the recess indicated in the figure to remove the clip.)
- 2 Place the additional solenoid valve into the separation and insert the clip. Insert the clip until it fits in the groove on the body side.

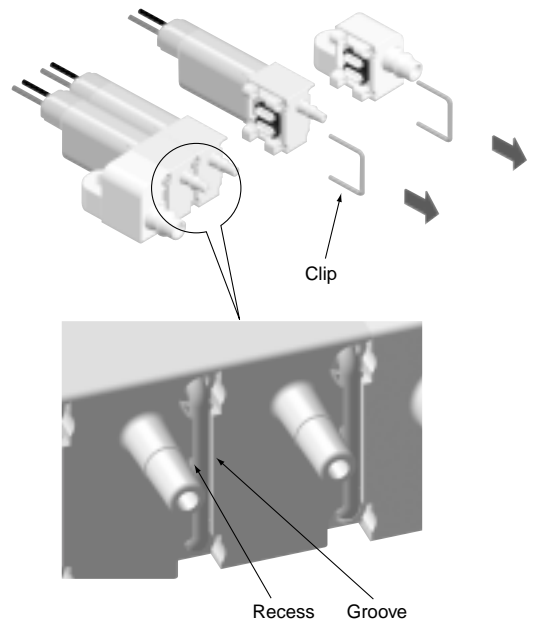


⚠ Caution Vacuum application

An N.C. type valve pressurized at 1 (SUP) port can be used within the maximum operating pressure differential specified for the product. If the valve is to be used in the following applications, however, care should be taken about the piping ports, maximum operating pressure differential and allowable leakage.

1) Vacuum release application

Use 3 (R) port for vacuum pressure and 1 (P) port for vacuum release pressure. The pressure differential between 3 (R) and 1 (P) is the maximum operating pressure differential for each type.

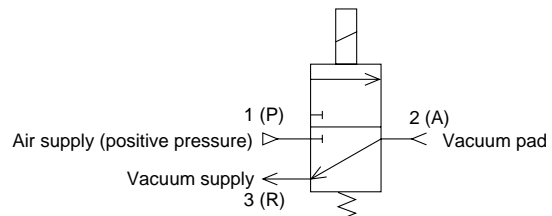

2) Vacuum retention

Please consult SMC if the allowable leakage is limited when the valve is used for vacuum retention of a vessel, even within the low vacuum range (1.33×10^2 Pa or above).



Series S070/Specific Product Precautions 3

Be sure to read before handling.

Refer to pages 16 through 19 for safety instructions, precautions.


⚠ Caution Wiring

1) Internal wiring


- Grommet
(This solenoid valve has no polarity.)



- With light/surge voltage suppressor
(This solenoid valve has no polarity.)

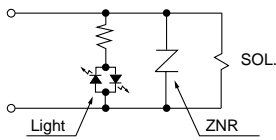


- With 0.1 W power saving circuit

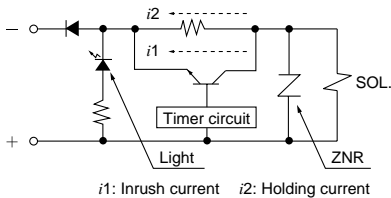

2) Electrical circuit

- (1) Adopt an electrical circuit with no chattering generated at the contact.
- (2) Keep the voltage within the $\pm 10\%$ range of the rated voltage.
Care should be taken about the voltage drop when the rated voltage is 6 VDC or less or when the response speed is important.
- (3) When using a C-R element (surge voltage suppressor) for protection of the switching element, please keep in mind that leakage voltage will increase due to leakage current flowing through the C-R element.

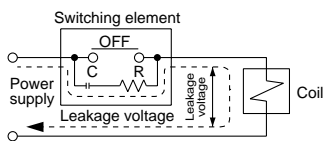

Keep the residual leakage voltage with 2% of the rated voltage.

- (4) Be sure to confirm the applied voltage. If a wrong voltage is applied, it can lead to malfunction or coil burning.
- (5) In wiring, use caution to avoid application of excessive force to the lead wire. It can cause malfunction or break the coil.

⚠ Caution

Power saving circuit of 0.1 W DC (at holding)

- 1) Keep the vibration and impact within 10/50 m/s².
- 2) Keep the voltage fluctuations within 24 VDC $\pm 5\%$.
- 3) The power consumption is 0.35 W DC at inrush (20 ms) and 0.1 W DC at holding.

**EUROPEAN SUBSIDIARIES:****Austria**

SMC Pneumatik GmbH (Austria).
Girakstrasse 8, A-2100 Korneuburg
Phone: +43 2262-62280, Fax: +43 2262-62285
E-mail: office@smc.at
http://www.smc.at

**Germany**

SMC Pneumatik GmbH
Boschring 13-15, D-63329 Egelsbach
Phone: 06103-4020, Fax: 06103-402139
E-mail: info@smc-pneumatik.de
http://www.smc-pneumatik.de

**Netherlands**

SMC Pneumatics BV
De Ruyterkade 120, NL-1011 AB Amsterdam
Phone: 020-5318888, Fax: 020-5318880
E-mail: info@smcpneumatics.nl

**Slovenia**

SMC industrijska Avtomatika d.o.o.
Grajski trg 15, SLO-8360 Zuzemberk
Phone: +386 738 85240 Fax: +386 738 85249
E-mail: office@smc-ind-avtom.si
http://www.smc-ind-avtom.si

**Belgium**

SMC Pneumatics N.V./S.A.
Nijverheidsstraat 20, B-2160 Wommelgem
Phone: 03-355-1464, Fax: 03-355-1466
E-mail: post@smcpneumatics.be

**Greece**

S. Parianopoulos S.A.
7, Konstantinoupoleos Street,
GR-11855 Athens
Phone: 01-3426076, Fax: 01-3455578

**Norway**

SMC Pneumatics Norway A/S
Vollsveien 13 C, Granfos Næringspark
N-1366 Lysaker
Tel: (47) 67 12 90 20, Fax: (47) 67 12 90 21
http://www.smc-norge.no

**Spain**

SMC España, S.A.
Zuazobidea 14
01015 Vitoria
Phone: 945-184 100, Fax: 945-184 124
E-mail: post@smc.smces.es

**Czech Republic**

SMC Industrial Automation CZ s.r.o.
Hudcova 78a, CZ-61200 Brno
Phone: +420 5 414 24611, Fax: +420 5 412 18034
E-mail: office@smc.cz
http://www.smc.cz

**Hungary**

SMC Hungary Ipari Automatizálási Kft.
Budafoki ut 107-113, H-1117 Budapest
Phone: +36 1 371 1343, Fax: +36 1 371 1344
E-mail: office@smc-automation.hu
http://www.smc-automation.hu

**Poland**

SMC Industrial Automation Polska Sp.z.o.o.
ul. Konstruktorska 11A, PL-02-673 Warszawa,
Phone: +48 22 548 5085, Fax: +48 22 548 5087
E-mail: office@smc.pl
http://www.smc.pl

**Sweden**

SMC Pneumatics Sweden AB
Ekhagsvägen 29-31, S-141 71 Huddinge
Phone: 08-603 07 00, Fax: 08-603 07 10
http://www.smc.nu

**Denmark**

SMC Pneumatik A/S
Knudsminde 4B, DK-8300 Odder
Phone: (45)70252900, Fax: (45)70252901
E-mail: smc@smc-pneumatik.dk

**Ireland**

SMC Pneumatics (Ireland) Ltd.
2002 Citywest Business Campus,
Naas Road, Saggart, Co. Dublin
Phone: 01-403 9000, Fax: 01-464-0500

**Portugal**

SMC Sucursal Portugal, S.A.
Rua de Engº Ferreira Dias 452, 4100-246 Porto
Phone: 22-610-89-22, Fax: 22-610-89-36
E-mail: postpt@smc.smces.es

**Switzerland**

SMC Pneumatik AG
Dorfstrasse 7, CH-8484 Weisslingen
Phone: 052-396-3131, Fax: 052-396-3191
E-mail: info@smc.ch
http://www.smc.ch

**Estonia**

SMC Pneumatics Estonia OÜ
Laki 12-101, 106 21 Tallinn
Phone: 06 593540, Fax: 06 593541
http://www.smcpneumatics.ee

**Italy**

SMC Italia S.p.A
Via Garibaldi 62, I-20061 Carugate, (Milano)
Phone: 02-92711, Fax: 02-9271365
E-mail: mailbox@smcitalia.it
http://www.smcitalia.it

**Romania**

SMC Romania srl
Str Frunzei 29, Sector 2, Bucharest
Phone: 01-324-2626, Fax: 01-324-2627
E-mail: smccadm@canad.ro
http://www.smcromania.ro

**Turkey**

Entek Pnömatik San. ve Tic Ltd. Sti.
Perpa Tic. Merkezi Kat: 11 No: 1625,
TR-80270 Okmeydanı Istanbul
Phone: 0212-221-1512, Fax: 0212-221-1519
http://www.entek.com.tr

**Finland**

SMC Pneumatics Finland OY
PL72, Tiistiniityntie 4, SF-02031 ESPOO
Phone: 09-859 580, Fax: 09-8595 8595
http://www.smcfitec.sci.fi

**Latvia**

SMC Pneumatics Latvia SIA
Smerla 1-705, Riga LV-1006, Latvia
Phone: 0777-94-74, Fax: 0777-94-75
http://www.smclv.lv

**Russia**

SMC Pneumatik LLC.
36/40 Sredny pr. St. Petersburg 199004
Phone: (812) 118 5445, Fax: (812) 118 5449
E-mail: smcfa@peterlink.ru
http://www.smc-pneumatik.ru

**UK**

SMC Pneumatics (UK) Ltd
Vincent Avenue, Crownhill,
Milton Keynes, MK8 0AN
Phone: 0800 1382930 Fax: 01908-555064
E-mail: sales@smcpneumatics.co.uk
http://www.smcpneumatics.co.uk

**France**

SMC Pneumatique, S.A.
1, Boulevard de Strasbourg, Parc Gustave Eiffel
Bussy Saint Georges
F-77607 Marne La Vallée Cedex 3
Phone: 01-6476 1000, Fax: 01-6476 1010
http://www.smc-france.fr

**Lithuania**

UAB Ottensten Lietuva
Savanoriu pr. 180, LT-2600 Vilnius, Lithuania
Phone/Fax: 370-2651602

**Slovakia**

SMC Priemyselna Automatizacia, s.r.o.
Námestie Martina Benku 10
SK-81107 Bratislava
Phone: +421 2 444 56725, Fax: +421 2 444 56028
E-mail: office@smc.sk
http://www.smc.sk

**OTHER SUBSIDIARIES WORLDWIDE:**

ARGENTINA, AUSTRALIA, BOLIVIA, BRASIL, CANADA, CHILE, CHINA, HONG KONG, INDIA, MALAYSIA, MEXICO, NEW ZEALAND, PHILIPPINES, SINGAPORE, SOUTH KOREA, TAIWAN, THAILAND, USA, VENEZUELA

<http://www.smceu.com>
<http://www.smcworld.com>