Pressure Gauge Guide


Gauge with Switch

GP46 O.D.: ø42





- ■A pressure switch function has been added to the gauge
- ■The pressure switch is equipped with a light for verifying operation.
- ■The pressure gauge is equipped with a limit indicator.
- ■To be used for verifying the supply pressure.

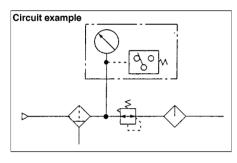

Standard Specifications

	Fluid		Air	
Gauge	riuiu		AIr	
	Ambient and fluid temperature		–5 to 60°C (Non-freezing)	
	Indicated pressure range		0 to 1.0MPa(0 to 10kgf/cm²)	
	Port size		R(PT) 1/8, 1/4	
Pressure switch	Setting range (1) (2)		0.1 to 0.8MPa(1 to 8.5kgf/cm ²)	
	Hysteresis		0.07MPa(0.7kgf/cm²)	
	Pointer error (3)		±0.05MPa, ±0.5kgf/cm² (5 to 40°C) ±0.08MPa, ±0.8kgf/cm² (–5 to 60°C) Non freezing	
	Contact		With light: 1a, Without light: 1ab	
	Wiring		Lead wire (length: 300mm)	
	Indicator light	AC	Neon light	
		DC	Light emitting diode (LED)	
	Weight		0.12kg	

Note 1) Indicates the condition at the lower pressure limit.

Note 2) Make sure to provide a minimum difference of 0.1MPa between the set pressure and the operating pressure (including the pressure drop). If the difference is smaller, it could lead to improper operation. Refer to p.1.16-8 for details on how to set the setting needle.


Note 3) Maximum error value: Add the pressure gauge indicator error of $\pm 0.03 MPa$ to the setting needle error.

Micro switch rated voltage

N01 NPT¹/8 N02 NPT1/4


Voltage Operating current range	30V DC	125V AC	250V AC
Load resistance	0.01 to 0.5A	0.01 to 0.3A	0.01 to 0.2A

How to Order

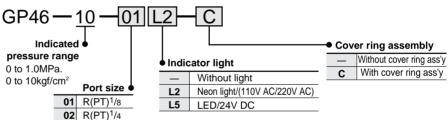


Circuit Diagram

Without light

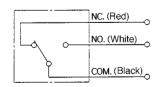


With light

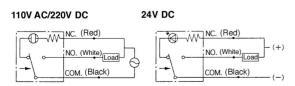

The arrow in the diagram indicates the direction of the pressure increase. The light turns OFF when the pressure becomes higher than the set pressure and turns ON when the pressure becomes lower than the set pressure.

Dimensions

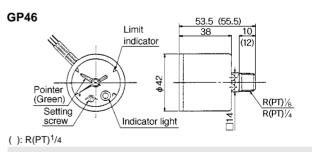

GP46: With cover ring assembly (for panel mounting)

