D.P. Lube Series ALD600/900

Centralized control of multi-point lubrication

Low oil consumption volume

Simplified oil feeding volume setting in which only the pressure differential is adjusted

Oil can be replenished by merely opening and closing the oil filler plug without stopping the air line

The condition of the generation of micromist can be checked from the oil filler port



ALD600



ALDU600 (With panel)


Standard Specifications

Model name	D.P.	Lube	D.P. Lu	be Unit ⁽¹⁾	AC					
Model	ALD600	ALD900	ALDU600	ALDU900	AV					
Port size Rc(PT) (2)	^{3/} 4 1	11/4 11/2 2	1 ¹ / ₄ 1 ¹ / ₂ 2	AV						
Fluid		A	ir							
Proof pressure		1.5MPa								
Operating pressure range	0.1 to 1	1.0MPa	0.15 to	1.0MPa	AR					
Operating press. differential range		0.03 to 0.1MPa								
Recommended press. differential		0.05MPa								
Press. differential setting min. flow (3)	102 ℓ/min (ANR)									
Bowl capacity between levels	pacity between levels 2000 5000 2000 500		5000	VEX						
Recommended oil	Turbine oil class 1 (ISO VG32)				VLA					
Ambient and fluid temperature		5 to	60°C		SRF					
Bowl material	Epoxy resin with glass fiber, Polycarbonate				AW					
Weight (kg)	8.9	21.3	11.1(18.6) ⁽⁴⁾	31.6(48.1) ⁽⁴⁾						
Note 1) D.P. Lube unit h		at primary side of D	.P. Lube.		AMR					
Note 2) Port of D.P. Lube unit is union. Note 3) Condition: Primary pressure = 0.5MPa, Pressure differential = 0.05MPa Note 4) () is weight with panel.										
Accessory (Optio	ons) Part No).			AWD					
		Der	4 Ma							

	Part No.								
Description Model	ALD600	ALD900	ALDU600	ALDU900	ITV				
Bracket	126130P	126044P	126130P	126044P 113449 ⁽¹⁾ 113543 ⁽²⁾	VBA				
Panel	_	_	12661P	12651-1P	G				


Note 1) Bracket for filter mounting: For Rc(PT)11/4 , $1^{1/2}$ Thread machining on filter body is needed. Note 2) Bracket for filter mounting: For Rc(PT)2

How to Order

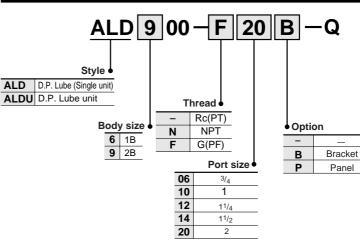


ALD600/900


Piping example

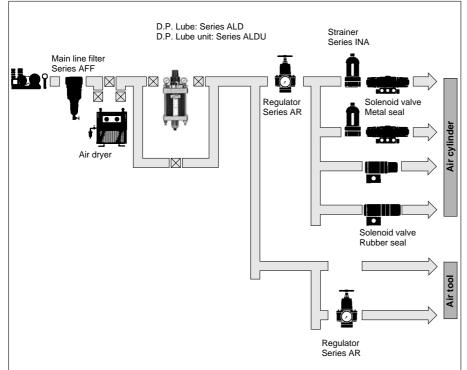

Circuit

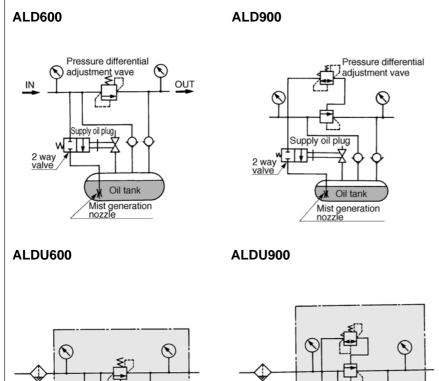

Flow Characteristics




ALD600-10 0.1 (MPa) 0.08 0.065 differential 0.06 0.05 0.04 Pressure 0.02 0.25 3 3.84 5 6 (X1000) Flow (*c*/min(ANR))


How to read graph

With the flow rate set to 250 *d*/min(ANR) and the pressure differential set to 0.05MPa, by changing the flow rate to 3800 *d*/min(ANR) and 6000 *d*/min(ANR), the pressure differential will change from the initial 0.05MPa to 0.06MPa, and to 0.065MPa.


ALD900-20

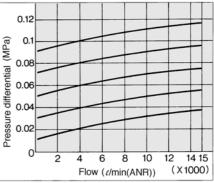

Pressure differential and mist generation

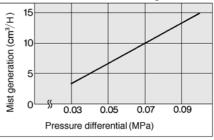

Min. flow for pressure differential setting

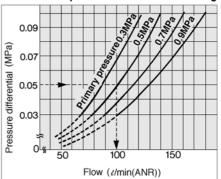


How to read graph


When the primary pressure is 0.5MPa, a flow rate that is greater than $102 \ dmin(ANR)$ will be necessary to set the pressure differential to 0.05MPa. Below this flow rate, the pressure differential cannot be set to 0.05MPa.




D.P.Lube **ALD600/900**

Construction

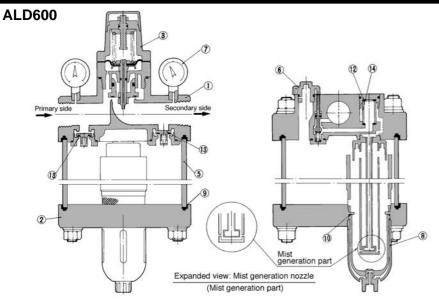

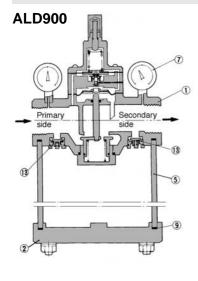

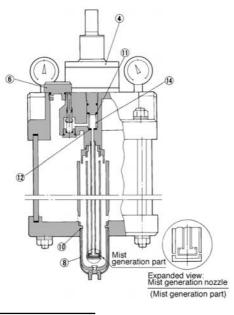

Component parts

ALD600 ALD900	No.	Description	erial	
	INO.	Description	ALD600	ALD900
Body Aluminum die cast Aluminum die d	1	Body	Aluminum die cast	Aluminum die cast
2 Bottom cover Aluminum die cast Aluminum die	2	Bottom cover	Aluminum die cast	Aluminum die cast

Replacement parts

No.	Description	Material	Part No.					
INO.	Description	Material	ALD600	ALD900				
3	Valve guide assembly	_	12612AP	—				
(4)	Pilot body assembly	—	—	12609AP				
(5)	Bowl assembly	Epoxy resin with glass fibre	126139-1A	126059-1A				
6	Lubrication plug assembly	Zinc die cast, NBR	126115AP	126115AP				
$\overline{\mathcal{O}}$	Pressure gauge (2 pcs.)	—	GA46-10-01	GA46-10-02				
8	Bowl assembly	—	AF11-2	AF11-2				
9	Sealing (2 pcs.)	NBR	126140	126060				
10	O ring	NBR	11307	11307				
11	Seal	NBR	—	126046				
12	Seal	NBR	126047(2)	126047				
(13)	Check valve assembly (2 pcs.)	_	126127A	126022A				
14	Filter element	Bronze	11294-70B	11294-70B				

A Precautions	
Be sure to read before handling. Refer to p.0-26 and 0-27 for Safety Instructions and common precautions on the products in this catalogue, and refer to p.1.0-2 and 1.0-3 for precautions on every series.	
	AC
Design	AV
Warning ①Epoxy resin containing glass fiber and	AU
polycarbonate is used in some parts of the D.P. Lube and the D.P. Lube Unit. These units cannot be used in an environment or	AF
in a location that is exposed to synthetic oil, thinner, acetone, alcohol, organic solvents such as ethylene chloride,	AR
chemicals such as sulphuric acid or nitric acid, cutting oil, kerosene, gasoline, or a threadlock agent, etc., because they will	IR
be damaged. Mounting/Adjustment	VEX
	SRP
①Provide about 30cm of space above and below the D.P. Lube or the D.P. Lube Unit	AW
to facilitate their maintenance inspection. (2) When the line is stopped, do not adjust or set the differential pressure, as it could cause the differential adjustment valve to	AMR
3When setting the pressure differential, if there is a fluctuation in the operating flow	AWM
rate, set the pressure differential at the lower flow rate range.	AWD
Piping	ITV
Warning	VBA
(1) The drain pipe for the air filter in the D.P. Lube Unit must have a minimum pipe bore of ¿10, and a maximum length of 5m. Avoid units a size because its avoid acutors.	G
using a riser pipe because it could cause the auto drain to malfunction. (2)If installing an air tank, install it on the IN side of the D.P. Lube Unit. If it is installed on the OUT side, the micromist could be arrested by the air tank, which could lead to insufficient feeding of oil.	AL
Maintenance	
∆ Warning	


AWarning

Defore removing the oil filler plug, loosen it two and half turns to completely release the pressure inside the case. This will prevent the oil filler plug from flying out.


ALD600/900

Dimensions

D.P. Lube ALD600-06 to 10. ALD900-012 to 20

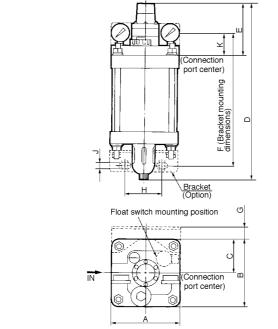


At the terminal of an air pressure line in which a D.P. Lube is used, install a strainer (filtration rate of 5μ m) upstream with a metal seal solenoid valve, which is susceptible to dust.

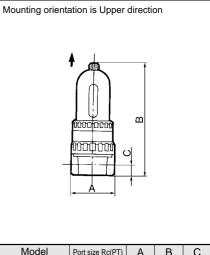


Model	Port size Rc(PT)	A	В	С
INA-11-402	1/4	63	141	15
INA-11-403	3/8	63	164.5	15
INA-11-404	¹ / ₄ , ³ / ₈ , ¹ / ₂	80	170	15
INA-11-405	3/4	85	180	20
INA-11-406	³ /4, 1	90	230	22
INA-11-407	1	100	251	22

Model	Dort oizo	Δ	р	<u> </u>		г	Bracket dimensions							
Model	Port size	A	В				F	G	Н	J	K			
ALD600-□06 to 10	³ ⁄4, 1	175	175	87.5	460	135	345	32.5	95	14	57			
ALD900-□12 to 20	1 ¹ / ₄ , 1 ¹ / ₂ , 2	250	250	125	613	209	419.2	0	120	14	49.6			

D.P. Lube Unit ALDU600-06 to 10, ALDU900-12 to 20

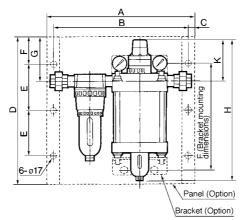

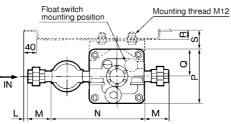

Model	Port size	А	В	С	D	E	F	G	н	J	к	L	М	N	Р	Q	R	S
ALDU600-□06	3/4	470	430	20	480	150	90	145	460	345	135	43	67	283	175	87.5	30	62.5
ALDU600-□10	1	470	430	20	20 400	+00 150	90	140	400	345	155	10	77	296	175	07.5	30	02.5
ALDU900-012	1 ¹ / ₄								615			57	85	424				
ALDU900-014	$1^{1}/_{2}$	710	670	20	700	230	120	222	615	419.2	209	51	90	424	250	125	33.2	33.2
ALDU900-020	1								682			16	100	476				