Best Pneumatics 4

Pressure Gauge Guide

General Purpose Pressure Gauge: G□	P.1.15	-2
Oil Free/External Parts Copper Free Pressure Gauge: G46E	P.1.15	-6
Pressure Gauge for Clean Regulator: G46-□-□-SR	P.1.15	-6





General Purpose Pressure Gauge

	Size	Model	Indication	Gauge	range	Connecting		Material		Indicatio	n units ⁽¹⁾	Attachment (2)	
	(O.D.)	(Type)	precision ±%FS	MPa	kgf/cm²	thread	Case	Clear cover	Stud	MPa	MPa & kgf/cm ²		
General purpose	ø15	G15 (DTtype)	5	0 to 1.0	_	R(PT) ¹ / ₈ Male thread, M5 Female	Zinc die cast	Poly-	Zinc die cast	•			P.1.15-2
OZS 1 SC	ø26	G27 (DTtype)		0 to 1.0	_	R(PT) ¹ / ₁₆ Male thread	(Sun-coat treated)	carbonate	(Sun-coat treated)	-	•		1 .1.13-2
With limit indicator				0.1- 0.0									
	w51	G36 (DTtype) GA36 (ATtype)	3	0 to 0.2 0 to 0.4 0 to 0.7 0 to 1.0 0 to 1.5	_	R(PT) ¹ /8	Rolled steel (Black melamine painted)	Poly- carbonate	Brass	-	•	-	P.1.15-3
With limit indicator													
	Ø42 GA46	G46 (DTtype)	OTtype) 0	0 to 0.2 0 to 0.4 0 to 0.7	4 0 to 4	R(PT) ¹ / ₈ R(PT) ¹ / ₄	Rolled stee (Black	(Black Poly-	Poly- carbonate Brass	ee _		Cover ring ass'y	P.1.15-4
		GA46 (ATtype)		0 to 1.0 0 to 1.5	0 to 10 0 to 15	R(PT) ¹ /8	melamine painted)	carbonate				_	
	ø43	43 (DTtype)	3	0 to 0.2 0 to 0.3 0 to 0.4 0 to 0.6 0 to 0.7 0 to 1.0	0 to 2 0 to 3 0 to 4 0 to 6 0 to 7 0 to 10	R(PT) ¹ / ₈ R(PT) ¹ / ₄	Stainless steel	Glass	Brass	-	•	-	P.1.15-5
						N 1 - 1 - 1 \ O -							

Note 1) Consult SMC for psi and bar scale indication and connecting thread "NPT". Note 2) Possible for use in a panel mounting.

Oil Free/External Parts Copper Free Pressure Gauge

	Size	Model		L C		nracision	Connecting		Material		Indicatio	n units ⁽¹⁾	Attachment	
	(O.D.)	(Type)	±%FS	MPa	thread	Case	Clear cover	Stud	MPa	MPa & kgf/cm²	Attacimient			
With limit indicator														
	ø42	G46E (DT type)	3	0 to 0.2 0 to 0.4 0 to 0.7 0 to 1.0	R(PT) ¹ / ₈ R(PT) ¹ / ₄	Rolled stee (Black melamine painted)	Poly-	Brass Electroless nickel plated	-	•	Cover ring ass'y	P.1.15-6		
4,11111				_		Oil fre	ee (Degre	ased)						

Note 1) Consult SMC for psi and bar scale indication and connecting thread "NPT". Note 2) Possible for use in a panel mounting.

Pressure Gauge for Clean Regulator

	Size (O.D.)	Model (Type)	Indication precision ±%FS	Gauge range MPa	Connecting thread		Material Clear cover	Stud	Indicatio MPa	n units (1) MPa & kgf/cm²	Attachment (2)	
With limit indicator			±/01 3							u ug., u		1 1
	ø42	G46-□-SR (DT type)	າ 🤈	0 to 0.2 0 to 0.4 0 to 0.7 0 to 1.0	R(PT) ¹ / ₄	painted)	Poly- carbonate (Hard coated)		-	•	-	P.1.15-6
					Note 1) Co	DALLE CNAC	fan aa: aad	has acala	indication on	-1	hannal "NIDT"	1

Note 1) Consult SMC for psi and bar scale indication and connecting thread "NPT". Note 2) Refer to the p.1.15-6 for further information.

General Purpose Pressure Gauge

G15 (DT type)/G27 (DT type)

O.D.: ø15 ø26





G15-10-01

G27-10-R1

Standard Specifications

Model		G15	G27			
Type		DT type (Back side thread)				
Indication p	recision	±5% F.S. (Full span)				
	Case	Zinc die cast (Sun coat treated)				
Material	Clear cover	Poly-carbonate				
	Stud	Zinc die cast (S	un coat treated)			
Applicable model	R ¹ / ₁₆		AC1000/AR1000/AW1000			
Applicable model	R(PT) ¹ / ₈	ARM1000/2000	_			



•Caution on handling: Error may result if drain, oil, etc. gets into gauges.

Model (Standard)


Model	Gauge range MPa	Indication units	Connecting thread	
G15-10-01	0 to 1.0	MPa	R(PT) ¹ / ₈ Male, M5 Female thread	
G27-10-R1	0 to 1.0	MPa	R(PT) ¹ / ₁₆ Male thread	

Model (Made to order)


Madal	Gauge range	Indication	0 " " 1
Model	MPa	units	Connecting thread
G27-10-M5-X201	0 to 1.0	MPa	M5 Female thread

Dimensions

G15 (DT type)

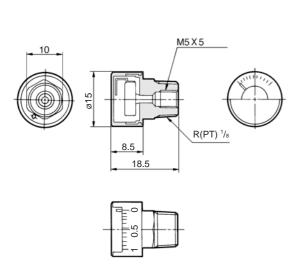

G27 (DT type)

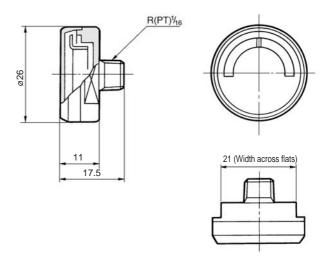

AV

AC

AU

AF AR

וח

IR VEX

SRP

AW

AMR

AWM

AWD

ITV

VBA

G

AL

General Purpose Gauge/With Limit Indicator

G36 (DT type)/GA36 (AT type)

O.D.: ø37



G36-10-01

Standard Specifications

Model		G36	GA36			
Туре		DT type (Back side thread) AT type (Vertical side thread)				
Indication precis	ion	±3% F.S. (Full span)			
Material	Case	Aluminum Die-cast	Rolled steel (Black painted)			
	Clear cover	Poly-carbonate Part no. G36-00-00-				
	Stud	Aluminum Die-cast	Brass			
Applicable model	R(PT) ¹ /8	AC2000/2500/3000 AR2000/2500/3000 AW2000/3000				


Model (Standard)

Model	Gauge range MPa	Indication units	Connecting thread	Note
G36-2-01	0 to 0.2			
G36-4-01	0 to 0.4	MPa		
G36-7-01	0 to 0.7		R(PT) ¹ /8	
G36-10-01	0 to 1.0			
GA36-10-01	0 to 1.0	MPa		AT type

Model (Made to order)

model (made to ender)										
Model		Gauge ra	ange	Indication unit	Connecting	Note				
Iviodei	MPa	kgf/cm²	psi	indication unit	thread					
G36-2-01-X7	_	0 to 2	0 to 30							
G36-4-01-X7	_	0 to 4	0 to 60	kgf/cm ²		_				
G36-7-01-X7	_	0 to 7	0 to 100	psi Dual						
G36-10-01-X7		0 += 40	0 to 150	indication	R(PT) ¹ /8					
GA36-10-01-X7		0 to 10	0 to 150							
G36-10-01-X2	0 to 1.0	_	_	MPa		(Ni) plated stem				
G36-15-01	0 to 1.5	_	_	MPa		_				

Dimensions

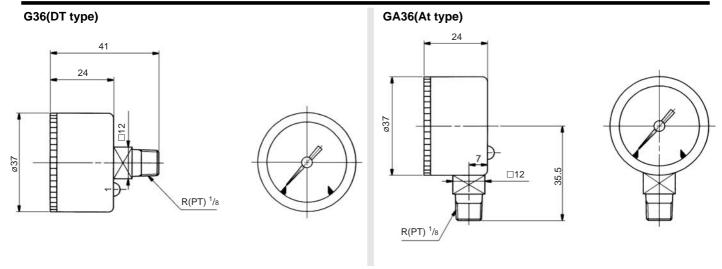

General Purpose Pressure Gauge/With Limit Indicator

G46(DT type)/GA46(AT type)

O.D.: ø42

IR

ITV







G46-10-02M-C


Dimensions in (parentheses) 1/4: R(PT) connecting thread **Dimensions**


G46(DT type)

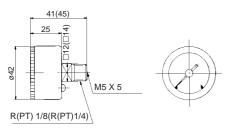


G46(DT type): With assembly (For panel mounting)

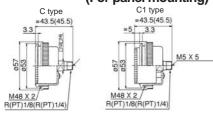

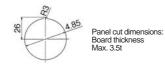

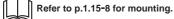

GA46(AT type)

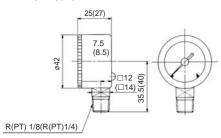

Standard Specifications

Model			G46	GA46			
Туре			DT type (Back side thread)	AT type (Vertical side thread)			
Indication precision			±3%F.S. (Full span)				
	Case	e	Aluminum Die-cast	Rolled steel (Black painted)	AC		
Material	Clear cover		Poly-carbonate Part no.: G46-00-00-3				
	Stud		Aluminum Die-cast	Brass	AV		
Applicable model	Applicable model R(PT) 1/4		AC4000/5000/5500/6000 AR4000/5000/6000				
Applicable model			AW4000 AW4000		AF		
Attachment: With cover ring ass'y		C type	Part no.: 1305104-1A				
		C1 type	Part no.: 1305104-3A				

Model (Standard)

,							
Model	Pressure range MPa	Indication units	Connecting thread	Note	VEX		
G46-2-01, 02	0 to 0.2						SRP
G46-4-01, 02	0 to 0.4		, 1 / 1 /		O . (.		
G46-7-01, 02	0 to 0.7	R(PT) ¹ / ₈ , ¹ / ₄			AW		
G46-10-01, 02	0 to 1.0	MPa					
G46-2-01 to 02M	0 to 0.2	IVIFA				AMR	
G46-4-01 to 02M	0 to 0.4		$R(PT) \frac{1}{8}, \frac{1}{4}$		/ \\\\		
G46-7-01 to 02M	0 to 0.7		With M5 female thread		AWM		
G46-10-01 to 02M	0 to 1.0				/ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		
GA46-10-01 to 02	0 to 1.0	MPa	R(PT) 1/8, 1/4	AT Type	AWD		
					,,,,,		

Model (Made to order)

	D						
Model	Pres	sure rar	ige	Indication units	Connecting thread	read Note	
iviouei	MPa	kgf/cm ²	psi	indication units	Connecting thread	Note	VBA
G46-2-01 to 02-C, C1	0 to 0.2	_	_				
G46-4-01 to 02-C, C1	0 to 0.4	_	_		R(PT) ¹ / ₈ , ¹ / ₄		G
G46-7-01 to 02-C, C1	0 to 0.7	_			K(F1) / 8, / 4		
G46-10-01 to 02-C, C1	0 to 1.0	_	_	MD-	R(PT) $\frac{1}{8}$, $\frac{1}{4}$ With M5 female thread	With cover	AL
G46-2-01 to 02M-C, C1	0 to 0.2	_	_	MPa		ring assembly	
G46-4-01 to 02M-C, C1	0 to 0.4	_	_				
G46-7-01 to 02M-C, C1	0 to 0.7	_	_				
G46-10-01 to 02M-C, C1	0 to 1.0	_	_				_
G46-4-02-X7	_	0 to 4	0 to 60	kgf/cm ² Dual	P/DT) 1/		
G46-10-02-X7	_	0 to 10	0 to 150	psi indication	R(PT) 1/4		_
G46-2-02M-X4	0 to 0.2	_	_				
G46-4-02M-X4	0 to 0.4		_			Oil free	
G46-7-02M-X4	0 to 0.7	_	_		1 /	Oli liree	
G46-10-02M-X4	0 to 1.0	_	_		R(PT) 1/4		_
G46-2-02M-C, C1-X4	0 to 0.2	_	_	MPa	With M5 female thread		
G46-4-02M-C, C1-X4	0 to 0.4	_	_			Oil free	
G46-7-02M-C, C1-X4	0 to 0.7	_	_			With cover ring assembly	
G46-10-02M-C, C1-X4	0 to 1.0	_	_			accombiy	_
G46-10-02-X2	0 to 1.0	_	_		R(PT) 1/4	(Ni) Plated Stem	_
G46-15-02	0 to 1.5	_	_	MPa	13(1-1) 7/4	_	

General Purpose Pressure Gauge

G43(DT type)

O.D.: ø43





G43-10-01

Standard Specifications

Model		G43	
Туре		DT type (Back side thread)	
Indication preci	sion	±3%F.S. (Full span)	
	Case	Stainless steel	
Material	Clear cover	Glass	
	Stud	Brass	
Annlinghla madel	R(PT) ¹ /8	IP200, IP600, IT600, IR200	
Applicable model	R(PT)		


Model (Standard)

Model	Pressure range	Indication units	Connecting thread	Note
iviodei	MPa	indication units		Note
G43-2-01 to 02	0 to 0.2		R(PT) ¹ / ₈ , ¹ / ₄	
G43-4-01 to 02	0 to 0.4	MPa		
G43-6-01	0 to 0.6	IVIFA	R(PT) 1/8	
G43-10-01 to 02	0 to 1.0		R(PT) 1/8, 1/4	

Model (Made to order)

Madal	Pre	ssure ra	nge	Indication units Connecting thread		Note
Model	MPa	kgf/cm ²	psi	indication units	Connecting threat	Note
G43-2-01 to 02-X7	_	0 to 2	0 to 30		R(PT) ¹ / ₈ , ¹ / ₄	
G43-4-01 to 02-X7	_	0 to 4	0 to 60	kgf/cm ² Dual	11(1 1) 70, 74	
G43-6-01-X7	_	0 to 6	0 to 90	psi indication	R(PT) 1/8	
G43-10-01 to 02-X7	_	0 to 10	0 to 150		R(PT) ¹ / ₈ , ¹ / ₄	
G43-7-02	0 to 0.7	_	_	MPa	R(PT) ¹ / ₄	

Dimensions

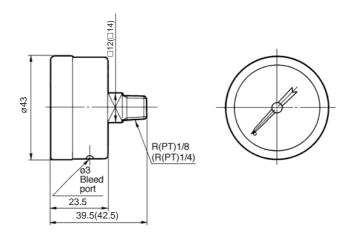

The dimensions in: Connecting thread R(PT) $^{1}/_{4}$



Oil Free/External Parts Copper Free Pressure Gauge

G46E (DT type)

O.D.: ø42







G46E-10-02M-C

Dimensions

Dimensions in: R(PT) 1/4 connecting thread

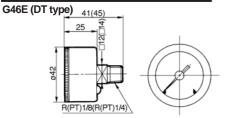

G46E (DT type): With cover ring assy's (For panel mounting)

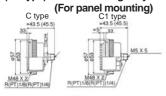



Standard Specifications

Model			G46E		
Type			DT type (Back side thread)		
Indication precision			±3% F.S. (Full span)		
Treatment			Oil free (Degreased)		
	Case		Rolled steel (Black melamine plated)		
Material	Clear cover		Poly-carbonate (Hard coated) Part no.: G46-00-00-2		
	Stud		Brass (Electroless nickel plated)		
Attachment: With cover ring ass'v		C type	Part no.: 1305104-1A		
		C1 type	Part no.: 1305104-3A		

Model (Standard)

Model	Pressure range	Indication units	Connecting thread	Mata
Model	MPa	indication units	Connecting thread	Note
G46E-2-02M	0 to 0.2			
G46E-4-02M	0 to 0.4	MPa	R(PT) ¹ /4	
G46E-7-02M	0 to 0.7	IVIFA	With M5 Female thread	
G46E-10-02M	0 to 1.0			

Model (Made to Order)

	Pressure range	Indication units	Connecting thread	Note
Model	MPa		Connecting thread	
G46E-2-02M-C/C1	0 to 0.2	MPa	R(PT) ¹ /4 W/ M5 Female thread	With cover ring assembly
G46E-4-02M-C/C1	0 to 0.4			
G46E-7-02M-C/C1	0 to 0.7			
G46E-10-02M-C/C1	0 to 1.0			

Gauge for Clean Regulator/With Limit Indicator

G46-**■**-**■**-SR

O.D.: ø42




G46-10-02-SR

Standard Specifications

<u> </u>							
Model		G46-□-02-SRA	G46-□-02-SRB				
Type		DT type (Back side thread)					
Precision		±3%	F.S.				
Fluid contact	ct part cleaning	Precise cleansing	General degreasing				
Assembly/Adjus	stment environments	Clean room	General production line				
Oil/Water t	free	Oil/Wa	Oil/Water free				
	Fluid contact part	Stainless steel 316					
Material	Case	Stainless steel 304 (Black melamine plated)					
Material	Clear cover	Poly-carbonate (Hard coated) Part no.: G46-00-00-2					
	Inner equipment	Brass					

Dimensions

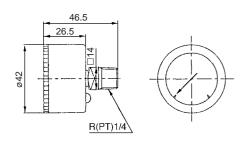

Model (Standard)

Model		Pressure range MPa	Indication units	Connecting thread	Note
G46-2-02-SRA		0 to 0.2			
G46-2-02-SRB	G46-2-02-SRB				
G46-4-02-SRA	G46-4-02-SRA G46-4-02-SRB G46-7-02-SRA G46-7-02-SRB	0.45.0.4	MPa	R(PT) ¹ /4	
G46-4-02-SRB		0 to 0.4			
G46-7-02-SRA					
G46-7-02-SRB		0 10 0.7			
G46-10-02-SRA	\	0.4.4.0			
G46-10-02-SRE	3	0 to 1.0			



AC AV

AU

AF

AR

IR VEX

SRP

AW

AMR

AWM

ITV


VBA

G


AL

Procedure for setting the limit gauge indicator


(1)Before setting the (green) limit indicator, turn the cover counterclockwise (approximately 6 to 7mm) until it stops. Then, remove by pulling it towards you.

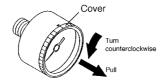

(2)Use a flat head screwdriver (with a 2.9mm blade width) to set the (green) limit indicator. Be careful not to bend the other needle or damage the dial plate.

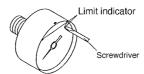

(3)After completing the setting, replace the cover. Fit the cover by aligning the cutout in the cover to the groove on the top of the black case. Turn the cover clockwise (approximately 6 to 7mm) and make sure that the matching mark on the cover is aligned with the groove on the top of the case.

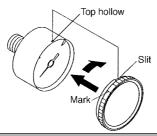

⚠ Precautions

Be sure to read before handling. Refer to p.0-26 and 0-27 for Safety Instruction and common precautions on the products mentioned in this catalogue.

Selection

∆ Caution

- ①Do not apply high load voltage (current) or surge current as this can cause the switch to malfunction.
- 2) Make sure that no direct impact or vibrations are applied to the body.
- ③If operating under pressure pulsations or in high frequency operations, contact SMC.


Installation

∧Caution


- ①During transport and installation, do not apply shock to the product, such as by dropping doing so will affect its precision.
- ②In terms of its installation posture, place it perpendicular to the ground, with the zero point on the dial of the pressure gauge facing down.
- ③Do not install it in an area that is exposed to high temperature or humidity, because doing so will lead to improper operation.
- (4)To screw in the pressure gauge, make sure to turn the gauge by placing a wrench over the square wrench flats. If the pressure gauge is screwed in by holding it on some other area, it could lead to air leakage or damage.

Procedure for setting the limit gauge indicator and the setting needle

(1)Before setting the limit indicator and the (green) setting needle, turn the cover counterclockwise (approximately 6 to 7mm) until it stops. Then, remove by pulling it towards you.

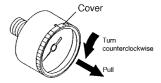


(2)Use a flat head screwdriver (with a 2.9mm blade width) to set the (green) limit indicator. Be careful not to bend the other needle or damage the dial plate.

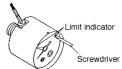


(3)Before setting the setting needle, use a flat head screwdriver (with a 2.9mm blade width) to turn the setting screw and set the setting needle to the set pressure.




(4)After completing the setting, replace the cover. Fit the cover by aligning the cutout in the cover to the groove on the top of the black case. Turn the cover clockwise (approximately 6 to 7mm) until it stops. Make sure that the matching mark on the cover is aligned with the groove on the top of the case.

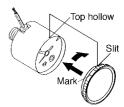

Procedure for assembling the cover ring assembly

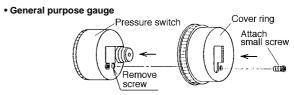

• Gauge with pressure switch

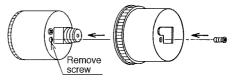

- 1. Remove the small screw (1 position) from the pressure gauge.
- 2. Place the cover ring on the pressure gauge.
- Using the small screw that is provided with the cover ring, install the over ring. The installation torque is 0.3 to 0.5N.m.

