



# Air Cylinder Series CJ1

Double Acting: ø4/Single Acting Spring Return: ø2.5, ø4

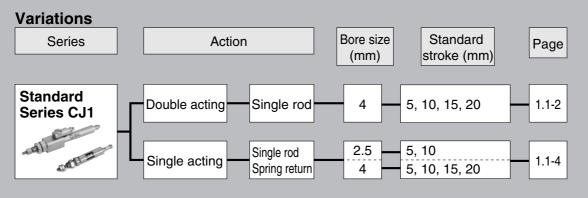

#### **How to Order/Double Acting**

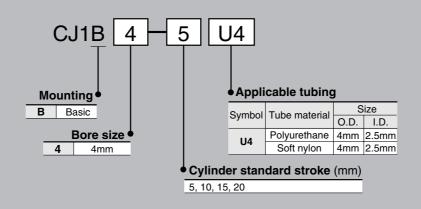



Refer to p.1.1-4 and 1.1-5 for single acting style.

CJ1

**CJP** 

CJ<sub>2</sub>

CM<sub>2</sub>

**C85** 

**C76** 

CG1

MB

MB<sub>1</sub>

CP95

**C95** 

C92


CA<sub>1</sub>

CS<sub>1</sub>

## Air Cylinder/Double Acting

## Series CJ1

 $\emptyset 4$ 

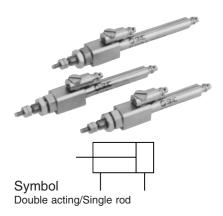


## Compact series of double acting cylinders

(A cylinder with a ø4 bore has been added as a compact style to the existing CJ2: ø6 double acting cylinder.)

## The fitting on the rod cover side has been provided with a variable piping direction.

(The piping direction of the fitting on the rod cover side can move freely within a range of  $\pm 90^{\circ}$ .)

■The piping direction of the fitting on the rod cover side varies within a range of ±90°.

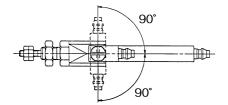

#### **Specifications**

Action	Double acting single rod
Fluid	Air
Proof pressure	1.05MPa
Max. operating pressure	0.7MPa
Min. operating pressure	0.2MPa
Ambient and fluid temperature	-10°C to 70°C (Non-freezing)
Operating piston speed	50 to 500mm/s
Cushion	None
Thread tolerance	JIS class 2
Stroke tolerance	+0.5
Mounting	Basic style
Lubrication	Not required (Non-lube)

#### Model/Cylinder Bore Size/Standard Strokes

Model	Bore size (mm)	Standard stroke (mm)
CJ1B4	4	5, 10, 15, 20

#### **Applicable Tubing**

Tubina	Material	Si	ze	Model No.	
Tubing	Material	O.D.	I.D.	Model No.	
Motrio oizo	Polyurethane	4mm	2.5mm	TU0425	
Metric size	Soft nylon	4mm	2.5mm	TS0425	

#### **Theoretical Force**

I HEOLETIC	ai i dice								(N)		
Bore size	Rod size	Action	Astica Piston area		Operating pressure (MPa)						
(mm)	(mm)	Action	(mm²)	0.2	0.3	0.4	0.5	0.6	0.7		
4	•	OUT	12.6	2.52	3.78	5.04	6.30	7.56	8.82		
4	2	IN	9.4	1.88	2.82	3.76	4.70	5.64	6.58		

#### Weight

Bore size (mm)	Cylinder stroke (mm)	Weight (g)		
	5	12.0		
4	10	12.4		
4	15	12.8		
	20	13.2		

### ⚠ Precaution

Be sure to read before handling. Refer to p.0-39 to 0-42 for Safety Instructions and common precautions. I

**Piping** 

#### 

① Do not forcibly connect piping that could apply a lateral force to the cylinder tube, this could cause the cylinder tube to tilt and lead to a malfunction. Mounting


#### 

- Do not install by directly grasping the cylinder tube, as this could cause the tube to deform and lead to a malfunction.
- ② Do not install by grasping the piston rod with a pair of electrician's pliers, as this could scratch the piston rod, which could damage the bearing or the rod seal. As a result, it could lead to a malfunction or air leakage.



## Air Cylinder/Double Acting Series CJ1


#### Construction

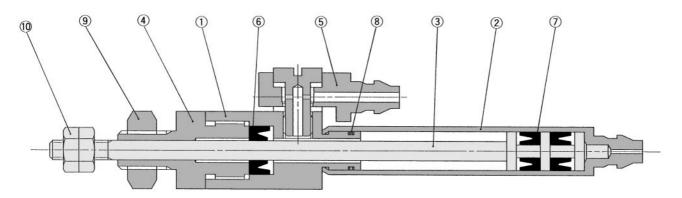

#### **Component Parts**

No.	Description	Material	Note		
1	Rod cover	Brass	Electroless nickel plated		
2	Cylinder tube	Brass	Electroless nickel plated		
3	Piston	Stainless steel			
4	Seal retainer	Brass	Electroless nickel plated		
(5)	Fittings	Body Brass	Electroless nickel plated		
(3)	Fittings	Gasket PVC			
6	Rod seal	NBR			
7	Piston seal	NBR			
8	Tube gasket	NBR			
9	Mounting nut	Steel	Nickel plated		
10	Rod end nut	Steel	Nickel plated		

#### **Dimensions: Double Acting/Basic style**

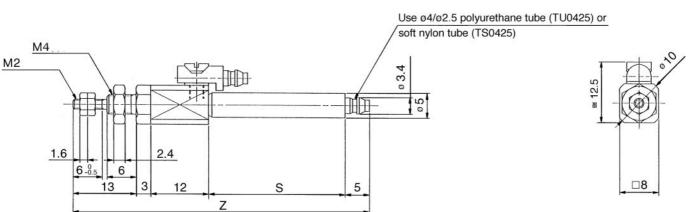

Symbol Bore		S				Z				
(mm)	5	10	15	20	5	10	15	20		
4	18	23	28	33	51	56	61	66		

CJ1

CJP

CJ2

CM2

C85

C76

CG1

MB

MB1

CP95

C95

C92

CA1

CS1

## Air Cylinder/Single Acting (Spring Return)

## Series CJ1

ø2.5, ø4



#### Symbol Single acting/Spring return



#### **Spring Retracting Force**

Bore size (mm)	Extended position	Retracted position
2.5	1.13	0.64
4	3.04	1.47

## Weight (g) Bore size (mm) 5 10 15 20

## Bore size (mm) 5 10 15 20 2.5 1.5 2 — — 4 3.7 4.6 5.6 6.5

### ↑ Precautions

Be sure to read before handling. Refer to p.0-39 to 0-42 for Safety Instructions and common precautions.

#### **Piping**

#### **⚠** Caution


 Do not forcibly connect piping that could apply a lateral force to the cylinder tube, as this could cause the cylinder tube to tilt and lead to a malfunction.

#### Mounting

#### **⚠** Caution

- Do not operate with a load applied to the piston rod during retraction. The spring that is built into the cylinder provides only enough force to retract the piston rod. Thus, if a load is applied, the piston rod will not be able to retract to the end of the stroke.
- ② Do not install by grasping the cylinder tube, as this could cause the tube to deform and lead to a malfunction.

### **How to Order/Single Acting**

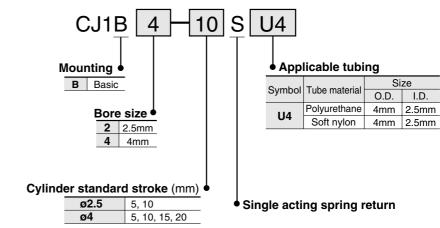

#### **Specifications**

(N)

Action	Single acting spring return
Fluid	Air
Proof pressure	1.05MPa
Max. operating pressure	0.7MPa
Min. operating pressure	0.3MPa
Ambient and fluid temperature	−10 to 70°C (Non-freezing)
Operating piston speed	50 to 500mm/s
Cushion	None
Thread tolerance	JIS 2 class
Stroke tolerance	+0.5
Mounting	Basic style
Lubrication	Not required (Non-lube)

#### Model/Cylinder Bore Size/Standard Strokes

Model	Bore size (mm)	Standard stroke (mm)
CJ1B2	2.5	5, 10
CJ1B4	4	5, 10, 15, 20

#### **Applicable Tubing**

Tulking	Matarial	Si	ze	Madal Na	
Tubing	Material	O.D.	I.D.	Model No.	
Metric size	Polyurethane	4mm	2.5mm	TU0425	
Wetric Size	Soft nylon	4mm	2.5mm	TS0425	

#### **Theoretical Force**

Heoretic	ai Fuice							(N)	
Bore size	Rod size	Operating Piston area		Operating pressure					
(mm) (mm)	direction	(mm <sup>2</sup> )	0.3	0.4	0.5	0.6	0.7		
0.5	4	OUT	4.9	0.34	0.83	1.32	1.81	2.30	
2.5	<b>2.5</b> 1	IN	_			0.64			
4	0	OUT	12.6	0.74	2.00	3.26	4.52	5.78	
4	4 2	IN	_			1.47			




## Air Cylinder/Single Acting (Spring Return) Series CJ1

#### Construction


#### CJ1B2-□SU4

#### CJ1B4-□SU4

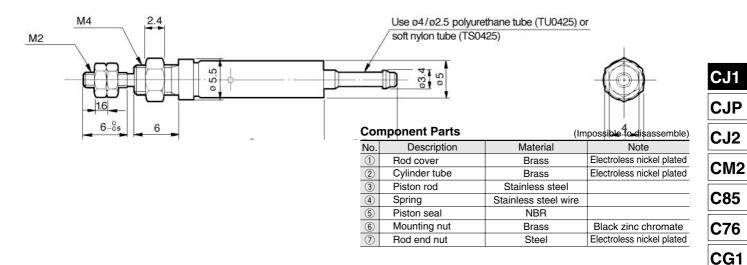


**Dimentions: Basic style** 

Bore size: ø2.5/CJ1B2-□SU4

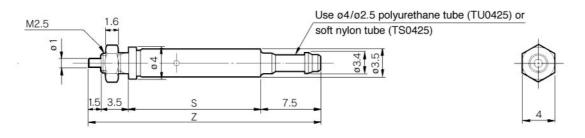

Bore Stray	9	3	Z		
(mm) Stroke	5	10	5	10	
2.5	16.5	25.5	29	38	

Bore size: ø4/CJ1B4-□SU4

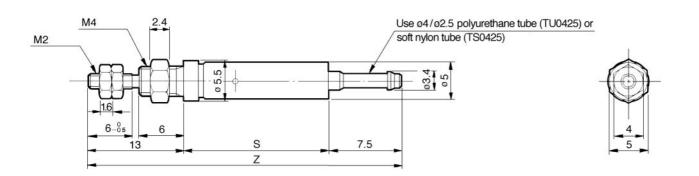

Bore Symbol	S			Z				
(mm) Stroke	5	10	15	20	5	10	15	20
4	19.5	28.5	37.5	46.5	40	49	58	67

MB

MB1

**CP95** 

C95

C92

CA<sub>1</sub>

CS<sub>1</sub>