




Caged Ball LM Guide

Ball Cage Effect Compact, Radial Type



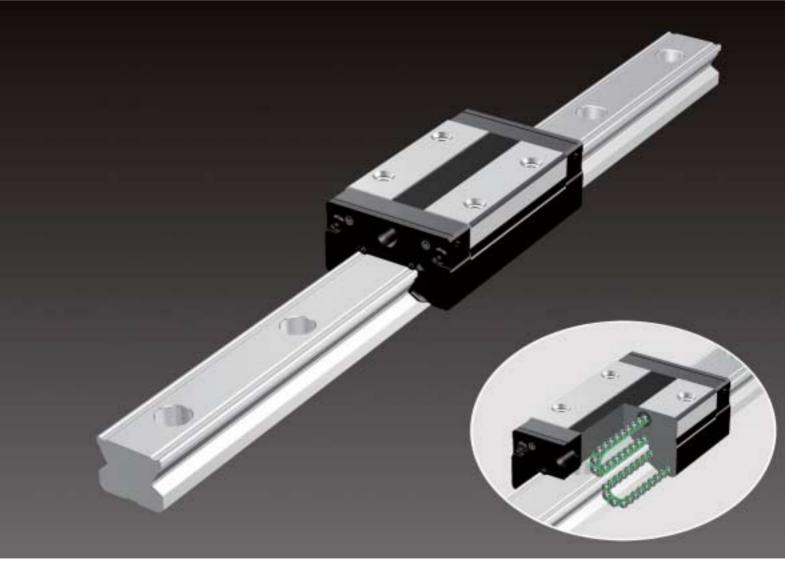

Ball Cage Effect


The early forms of ball bearings were full-ball types without ball cages. Friction between balls caused loud noise, made high-speed rotation impossible and shortened the service life. Twenty years later, a Caged Ball design was developed for ball bearings. The new design enabled high-speed rotation at a low noise level, and extended the service life despite the reduced number of balls used. It marked a major development in the history of ball bearings.

Similarly, the quality of needle bearings was significantly improved by the caged needle structure.

With cage-less, full-ball types of ball bearings, balls make metallic contact with one another and produce loud noise. In addition, they rotate in opposite directions, causing the sliding contact between two adjacent balls to occur at a speed twice the ball-spinning rate. It results in severe wear and shortens the service life.

In addition, without a cage, balls make point contact to increase bearing stress, thus facilitating breakage of the oil film. In contrast, each caged ball contacts the cage over a wide area. Therefore, the oil film does not break, the noise level is low and balls can rotate at a high speed, resulting in a long service life.


- Long Service Life and Long-term Maintenance-free Operation Superbly High Speed Low Noise, Acceptable Running Sound
- Smooth Motion
- Low Dust Generation

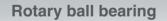



Conventional structure


 Adjacent balls contact each other at a point. As a result, contact stress is high and the oil film breaks due to friction.
 The service life becomes shorter.

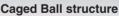

- •The service life is prolonged due to the elimination of wear caused by friction between balls.
- The absence of friction between balls results in reduced heat generation during high-speed rotation.
 The absence of friction between balls eliminates collision noise of
- The absence of friction between balls eliminates collision noise of the balls.
 The even spacing of the balls enables them to move smoothly.
- The even spacing of the balls enables them to move smoothly.
 Retention of lubricant in the ball cage ensures a long service life.



With the Caged Ball LM Guide, the use of a ball cage allows lines of evenly spaced balls to circulate, thus eliminating friction between the balls. In addition, grease held in a space between the ball circulation path and the ball cage (grease pocket) is applied on the contact surface between each ball and the ball cage as the ball rotates, forming an oil film on the ball surface. This minimizes the risk of oil-film break.

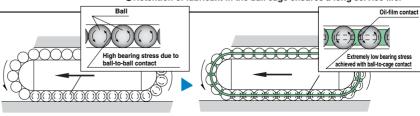


Conventional structure

Caged Ball structure



Compact, Radial Type Caged Ball LM Guide



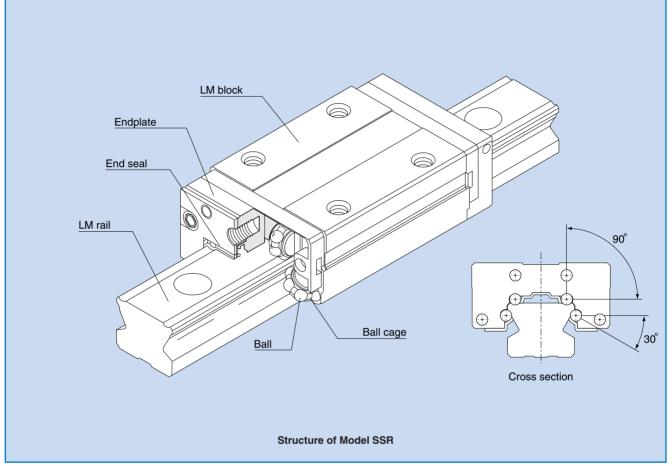

Balls roll in four rows of raceways precision-ground on an LM rail and an LM block, and ball cages and endplates incorporated in the LM block allow the balls to circulate.

Use of the ball cage eliminates friction between balls and increases grease retention, thus achieving low noise, high speed and long-term maintenance-free operation.

Compact, radial type

The compact design with a low sectional height and the ball contact structure at 90° make SSR an optimal model for horizontal guides.

Superb planar running accuracy

Use of a ball contact structure at 90° in the radial direction reduces displacement in the radial direction under a radial load and achieves highly accurate, smooth linear motion.


Self-adjustment capability

The self-adjustment capability through Face-to-Face configuration of THK's unique circular-arc grooves (DF set) enables a mounting error to be absorbed even under a preload, thus achieving highly accurate and smooth linear motion.

Stainless steel type also available as standard

A stainless steel type with its LM block, LM rail and balls all made of stainless steel, which is superbly corrosion resistant, is also available as standard.




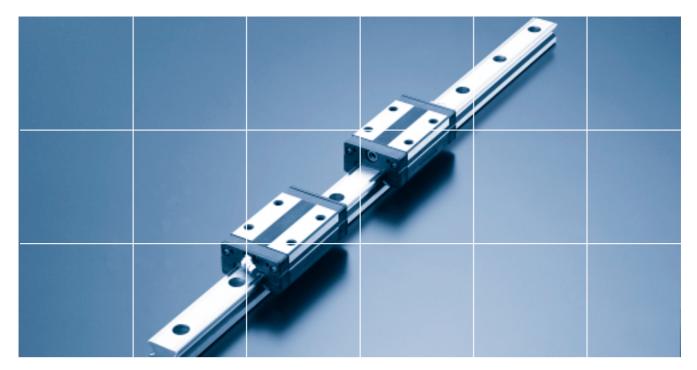


SSR Outline Model SSR - Product Overview


With a low mounting height, compact design and a large radial load capacity, this model is optimal for horizontal guides.

Major applications Grinding machine / semiconductor manufacturing machine / printed circuit board drilling machine / 3D measuring instrument / chip mounter / medical equipment

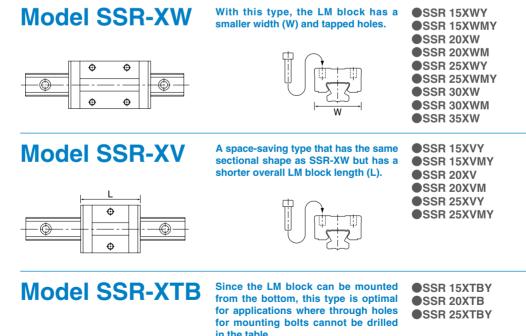

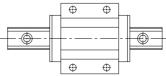

in the table.

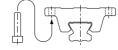




SSR OUTLINE Model SSR - Product Overview

Rated Loads in All Directions

Model SSR is capable of receiving loads in all four directions: radial, reverse-radial and lateral directions.

Its basic dynamic load rating is represented by the symbol in the radial direction indicated in the figure on the right, and the actual value is provided in the dimensional table^{*1} for SSR. The values in the reverse-radial and lateral directions are obtained from table 1.



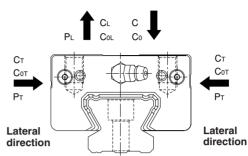

Radial direction

*1: Dimensional table for model SSR

Model SSR-XW → pages 9-10

Model SSR-XV → pages 9-10

Model SSR-XTB → pages 11-12

Table 1 Rated Load of Model SSR in All Directions

Direction	Basic dynamic load rating	Basic static load rating
Radial direction	С	C₀
Reverse-radial direction	CL=0.50C	C _{0L} =0.50C ₀
Lateral direction	C⊤=0.53C	Cot=0.43Co



When the LM block of model SSR receives loads in all directions simultaneously, the equivalent load is obtained in the equation below.

where	

$\mathbf{P}_{\mathrm{E}} = \mathbf{X} \cdot \mathbf{P}_{\mathrm{L}} + \mathbf{Y} \cdot \mathbf{P}_{\mathrm{T}}$

P⊧	:Equivalent load	(N)	P∟
	·Reverse-radial direc	ction	Pτ
	·Lateral direction		X. Y

P∟	:Reverse-radial load	(N)
----	----------------------	-----

P_⊤ :Lateral load (N)

X, Y:Equivalent factor (see table 2)

Table 2 Equivalent Factor of Model SSR

PE	Х	Y
Equivalent load in reverse-radial direction	1	1.155
Equivalent load in lateral direction	0.866	1



*1: Basic dynamic load rating (C)

It refers to a load with a constant magnitude and direction under which the rated life (L) of a group of identical LM Guide units independently operating is 50 km

Service life


The service life of an LM Guide is subject to variations even under the same operational conditions. Therefore, it is necessary to use the rated life defined below as a reference value for obtaining the service life of the LM Guide.

Rated life

The rated life means the total travel distance that 90% of a group of units of the same LM Guide model can achieve without flaking (scale-like exfoliation on the metal surface) after individually running under the same conditions.

Service life time

Once the rated life (L) has been obtained, the service life time can be obtained using the equation on the right if the stroke length and the number of reciprocations are constant.

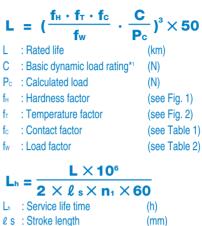


n₁ : No. of reciprocations per min (min⁻¹)

f_H : Hardness factor

To ensure the achievement of the optimum load capacity of the LM Guide, the raceway hardness must be between 58 and 64 HRC At hardness below this range, the basic dynamic and static load ratings decrease. Therefore, the rating values must be multiplied by the respective hardness factors (fr.). Since the LM Guide has sufficient hardness, the fr value for the LM Guide

is normally 1.0 unless otherwise specified.

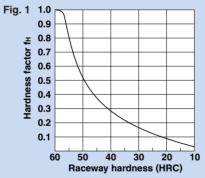

fc : Contact factor

When multiple LM blocks are used in close contact with each other, it is difficult to achieve uniform load distribution due to moment loads and mounting-surface accuracy. When using multiple blocks in close contact with each other, multiply the basic load rating (C or C_0) by the corresponding contact factor indicated in Table 1.


Note: When uneven load distribution is expected , consider using a contact factor from Table 1

Table 1 Contact Factor (fc)

Number of blocks used in close contact	Contact factor fc
2	0.81
3	0.72
4	0.66
5	0.61
6 or more	0.6
Normal use	1

f_T: Temperature factor

Since the service temperature of Caged Ball LM Guides is normally 80°C or below, the fr value is 1.0.

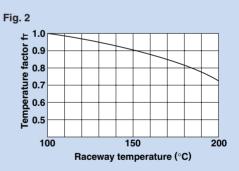

fw : Load factor

In general, reciprocating machines tend to produce vibrations or impact during operation. It is especially difficult to accurately determine all vibrations generated during high-speed operation and impacts produced each time the machine starts and stops. Therefore, where the effects of speed and vibration are estimated to be significant, divide the basic dynamic load rating (C) by a load factor selected from Table 2, which contains empirically obtained data

Table 2 Load Factor (fw)

Vibration/impact	Speed (V)	fw
Faint	Very slow V≦0.25m/s	1 to 1.2
Weak	Slow 0.25 <v≦1m s<="" td=""><td>1.2 to 1.5</td></v≦1m>	1.2 to 1.5
Moderate	Medium 1 <v≦2m s<="" td=""><td>1.5 to 2</td></v≦2m>	1.5 to 2
Strong	Fast V>2m/s	2 to 3.5



SSR OUTLINE Model SSR - Product Overview


*1: Preload

Preload is an internal load applied to the rolling elements (balls, rollers, etc.) of an LM block in advance in order to increase its rigidity. The clearance of all model SSR units is adjusted to the designated value before being shipped. Therefore, it is unnecessary to adjust the preload.

Radial Clearance Standard

Since the radial clearance of an LM Guide greatly affects the running accuracy, load carrying capacity and rigidity of the LM Guide, it is important to select an appropriate clearance according to the application.

In general, selecting a negative clearance (i.e., a preload^{*1} is applied) while taking into account possible vibrations and impact generated from reciprocating motion favorably affects the service life and the accuracy.

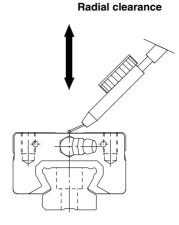

Unit: µm

		orna parti
Indication symbol	Normal	Light preload
Model No.	No symbol	C1
15	- 4 to + 2	-10 to - 4
20	- 5 to + 2	-12 to - 5
25	- 6 to + 3	-15 to - 6
30	- 7 to + 4	-18 to - 7
35	- 8 to + 4	-20 to - 8



6

*1: Running parallelism

It refers to the parallelism error between the LM block and the LM rail datum plane when the LM block travels the whole length of the LM rail with the LM rail secured on the reference datum plane using bolts.

*2: Difference in height M

It indicates the difference between the minimum and maximum values of height (M) of each of the LM blocks used on the same plane in combination.

*3: Difference in width W₂

It indicates the difference between the minimum and maximum values of the width (W₂) between each of the LM blocks, mounted on one LM rail in combination, and the LM rail.


Мо

Accuracy Standard

The accuracy of model SSR is specified in terms of running parallelism (⁻¹), dimensional tolerance for height and width, and height and width difference between a pair (^{-2, -3}) when two or more LM blocks are used on one rail or when two or more rails are mounted on the same plane.


The accuracy of model SSR is categorized into Normal grade (no symbol), High-accuracy grade (H), Precision grade (P), Super-precision grade (SP) and Ultra-super-precision grade (UP) by model numbers, as indicated in the table below.

surface D against surface B

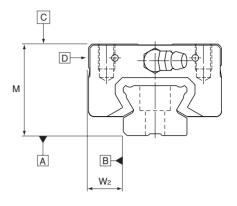

Unit: mm

		Normal	High-accuracy	Precision	Super-precision	Ultra-super	
odel No.	Accuracy standard	grade	grade	grade	grade	precision grade	
	Item	No symbol	Н	Р	SP	UP	
	Dimensional tolerance for height M	± 0.1	± 0.03	0 - 0.03	0 - 0.015	- 0.008	
	Difference in height M	0.02	0.01	0.006	0.004	0.003	
	Dimensional tolerance for width W2	± 0.1	± 0.03	0 - 0.03	0 - 0.015	0 - 0.008	
15 20	Difference in width W2	0.02	0.01	0.006	0.004	0.003	
	Running parallelism of	ΔC (conclusion in the figure holow)					
	surface C against surface A	ΔC (as shown in the figure below)					
	Running parallelism of						
	surface D against surface B	ΔD (as shown in the figure below)					
	Dimensional tolerance for height M	± 0.1	± 0.04	- 0.04	0 - 0.02	0 - 0.01	
	Difference in height M	0.02	0.015	0.007	0.005	0.003	
05	Dimensional tolerance for width W2	± 0.1	± 0.04	0 - 0.04	0 - 0.02	0 - 0.01	
25	Difference in width W2	0.03	0.015	0.007	0.005	0.003	
30	Running parallelism of	ΔC (as shown in the figure below)					
35	surface C against surface A						
	Running parallelism of			hown in the figu	ra balaw)		
	surface D against surface B	$\Delta {\sf D}$ (as shown in the figure below)					

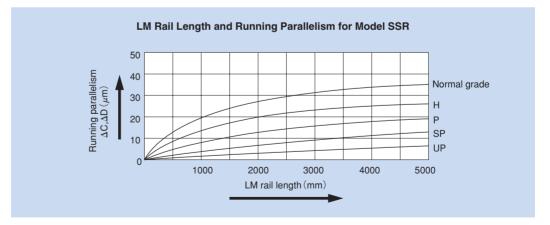




Shoulder Height of the Mounting Base and the Corner Radius

Normally, the mounting base for the LM rail and the LM block has a datum plane on the side face of the shoulder of the base in order to allow easy installation and highly accurate positioning.

The corner of the mounting shoulder must be machined to have a recess, or machined to be smaller than the corner radius "r," to prevent interference with the chamfer of the LM rail or the LM block.

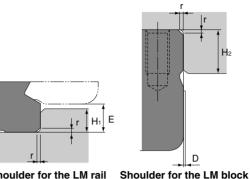

Shoulder for the LM rail

I Init[.] mm


I Init //m

Model No.	Corner radius r (max)	Shoulder height for the LM rail H1	Maximum shoulder height for the LM block H ₂	E	D
15	0.5	3.8	5.5	4.5	0.3
20	0.5	5	7.5	6	0.3
25	1	5.5	8	6.8	0.4
30	1	8	11.5	9.5	0.4
35	1	9	16	11.5	0.4

Note: When closely contacting the LM block with the datum shoulder, the resin layer may stick out from the overall width of the LM block by the dimension D. To avoid this, machine the datum shoulder to have a recess or limit the datum shoulder's height below the dimension H₂

Error Allowance in the Parallelism Between Two Rails


The table shows error allowances in parallelism (P) between two rails that will not affect the service life in normal operation.

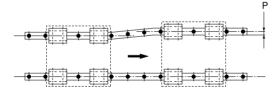

			Unit: µm
Model No.	Clearance C0	Clearance C1	Normal clearance
15	—	25	35
20	25	30	40
25	30	35	50
30	35	40	60
35	45	50	70
	+0	50	70

Error Allowance in Vertical Level Between Two Rails


The values in the tables indicate the error allowances in vertical level between two rails per 500 mm of the axis-to-axis distance, and are proportional to the axis-to-axis distances.

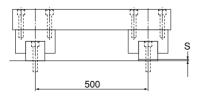

			0
Model No.	Clearance C0	Clearance C1	Normal clearance
15	_	100	180
20	80	100	180
25	100	120	200
30	120	150	240
35	170	210	300
	15 20 25 30	15 — 20 80 25 100 30 120	15 — 100 20 80 100 25 100 120 30 120 150



Models SSR-XV(XVM)/SSR-XW(XWM) Dimensional Table for Models SSR-XV(XVM)/SSR-XW(XWM)

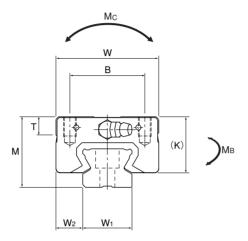

	Extern	External dimensions			LM block dimensions										
Model No.	Height	Width	Length												Grease
	М	W	L	В	С	S×ℓ	L1	т	к	Ν	E	fo	e₀	D	nipple
SSR 15XVY (XVMY)	24	34	40.3	26	_	M4×7	23.3	6.5	19.5	4.5	5.5	2.7	4.5	3	PB1021B
SSR 15XWY (XWMY)	24	04	56.9	20	26	WI-T/VI	39.9	0.0	10.0	4.0	0.0	2.7	4.0	0	
SSR 20XV (XVM)	28	42	47.7	32	_	M5×8	27.8	8.2	22	5.5	12	2.8	5.2	3	B-M6F
SSR 20XW (XWM)	20	72	66.5	02	32	MOXO	46.6	0.2	22	0.0	12	2.0	0.2	0	2
SSR 25XVY (XVMY)	33	48	60	35	—	M6×9	36.8	8.4	26.2	6	12	3.3	7	3	B-M6F
SSR 25XWY (XWMY)	55	40	83	55	35	100/9	59.8	0.4	20.2	0	12	0.0	1	3	Billio
SSR 30XW (XWM)	42	60	97	40	40	M8×12	70.7	11.3	32.5	8	12	4.5	7.6	4	B-M6F
SSR 35XW	48	70	110.9	50	50	M8×12	80.5	13	36.5	8.5	12	4.7	8.8	4	B-M6F



Note) Those models whose numbers contain the symbol "M" have stainless steel LM blocks, LM rails and balls, and therefore are highly resistant to corrosion and the environment.

Example of model number coding




Model number 2 Type of LM block 3 No. of LM blocks used on the same rail 4 Dust prevention accessory symbol (see page 19) Badial clearance symbol (see page 6) Stainless steel LM block 7LM rail length (in mm) Accuracy symbol (see page 7) 9 Stainless steel LM rail 10 No. of rails used on the same plane



This model number indicates that an LM block and an LM rail constitute one set (i.e., the required number of sets when 2 rails are used in parallel is 2).



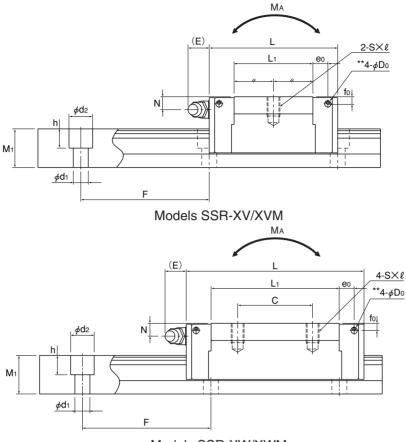

Models SSR-XW/XWM

	L	_M rail di	mensior	IS	Basic loa	ad rating		Static perm		Mass			
Width		Height	Pitch		С	C₀	Ν	Ma		Мв		LM block	LM rail
W₁ ±0.05	W_2	M1	F	d₁×d₂×h	kN	kN	1 block	2 blocks in close contact	1 block	2 blocks in close contact	1 block	kg	kg/m
15	9.5	12.5	60	4.5×7.5×5.3	9.1	9.7	0.0303	0.192	0.0189	0.122	0.0562	0.08	1.2
10	0.0	12.5	00	4.0/01.0/00.0	14.7	16.5	0.0792	0.44	0.0486	0.274	0.0962	0.15	1.2
20	11	15.5	60	6×9.5×8.5	13.4	14.4	0.0523	0.336	0.0326	0.213	0.111	0.14	2.1
20	11	15.5	00	0//0.0//0.0	19.6	23.4	0.138	0.723	0.0847	0.448	0.18	0.25	2.1
23	12.5	18	60	7×11×9	21.7	22.5	0.104	0.661	0.0652	0.419	0.204	0.23	2.7
20	12.5	10	00	771173	31.5	36.4	0.258	1.42	0.158	0.884	0.33	0.4	2.1
28	16	23	80	7×11×9	46.5	52.7	0.446	2.4	0.274	1.49	0.571	0.8	4.3
34	18	27.5	80	9×14×12	64.6	71.6	0.711	3.72	0.437	2.31	0.936	1.1	6.4



Note) Pilot holes for side nipples** are not drilled through in order to prevent foreign matter from entering the product. THK will mount grease nipples per your request. Therefore, do not use the side nipple pilot holes** for purposes other than mounting a grease nipple.


Static permissible moment*:

1 block : static permissible moment value with 1 LM block

2 blocks: static permissible moment value with 2 blocks closely contacting with each other

Unit: mm

Model SSR-XTB Dimensional Table for Model SSR-XTB

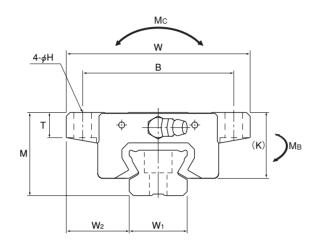

_																
		External dimensions				LM block dimensions										
	Model No.	Height	Width	Length												Grease
		М	w	L	В	С	н	Lı	Т	к	Ν	Е	fo	e₀	D₀	nipple
	SSR 15XTBY	24	52	56.9	41	26	4.5	39.9	6.1	20	4.5	5.5	2.7	4.5	3	PB1021B
	SSR 20XTB	28	59	66.5	49	32	5.5	46.6	9	22	5.5	12	2.8	5.2	3	B-M6F
_	SSR 25XTBY	33	73	83	60	35	7	59.8	10	26.2	6	12	3.3	7	3	B-M6F


Example of model number coding



Model number 2 Type of LM block 3 No. of LM blocks used on the same rail 4 Dust prevention accessory symbol (see page 19) Radial clearance symbol (see page 6) 6 LM rail length (in mm) 7 Applied to only 15 and 25 8 No. of rails used on the same plane

Note This model number indicates that an LM block and an LM rail constitute one set (i.e., the required number of sets when 2 rails are used in parallel is 2).



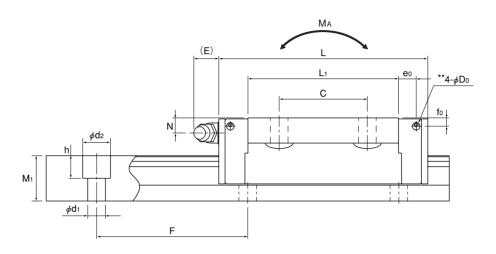

Unit: mm LM rail dimensions Basic load rating Static permissible moment kN-m* Mass Width Height Pitch С C_0 MA Мв Mс LM block LM rail W₁ 2 blocks in close contact 2 blocks in close contac W₂ M₁ F d₁Xd₂Xh kΝ kΝ 1 block 1 block 1 block kg kg/m ±0.05 4.5×7.5×5.3 0.0792 0.0486 0.274 0.0962 15 18.5 12.5 60 14.7 16.5 0.44 0.19 1.2 20 19.5 15.5 60 6×9.5×8.5 19.6 23.4 0.138 0.723 0.0847 0.448 0.18 0.31 2.1 23 25 18 60 7×11×9 31.5 36.4 0.258 1.42 0.158 0.884 0.33 0.53 2.7



Note Pilot holes for side nipples** are not drilled through in order to prevent foreign matter from entering the product.

THK will mount grease nipples per your request. Therefore, do not use the side nipple pilot holes** for purposes other than mounting a grease nipple.

Static permissible moment*:

1 block : static permissible moment value with 1 LM block


2 blocks: static permissible moment value with 2 blocks closely contacting with each other



SSR Standard Length and Maximum Length of the LM Rail

The table below shows the standard LM rail lengths and the maximum lengths of model SSR variations. If the maximum length of the desired LM rail exceeds them, connected rails will be used. Contact THK for details.

For the G dimension when a special length is required, we recommend selecting the corresponding G value from the table. The longer the G dimension is, the less stable the G area may become after installation, thus adversely affecting accuracy.

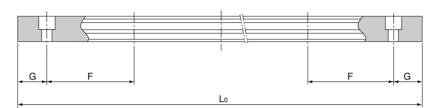

Standard Length and Maximum Length of the LM Rail for Model SSR


Model No.	SSR 15X	SSR 20X	SSR 25X	SSR 30X	SSR 35X
	160	220	220	280	280
	220	280	280	360	360
	280	340	340	440	440
	340	400	400	520	520
	400	460	460	600	600
	460	520	520	680	680
	520	580	580	760	760
	580	640	640	840	840
	640	700	700	920	920
	700	760	760	1000	1000
	760	820	820	1080	1080
	820	940	940	1160	1160
	940	1000	1000	1240	1240
	1000	1060	1060	1320	1320
- C	1060	1120	1120	1400	1400
gth	1120	1180	1240	1480	1480
len	1180	1240	1300	1640	1640
rail	1240	1300	1360	1720	1720
Σ	1300	1360	1420	1800	1800
qL	1360	1420	1480	1880	1880
Standard LM rail length (L _o)	1420	1480	1540	1960	1960
tan	1480	1540	1600	2040	2040
ين ا	1540	1600	1660	2120	2120
		1660	1720	2200	2200
		1720	1780	2280	2280
		1780	1840	2360	2360
		1840	1900	2440	2440
		1900	1960	2520	2520
		1960	2020	2600	2600
		2020	2080	2680	2680
		2080	2140	2760	2760
		2140	2200	2840	2840
			2260	2920	2920
			2320		
			2380		
			2440		
tandard pitch F	60	60	60	80	80
G	20	20	20	20	20
Max length	2500(1240)	3000(1480)	3000(2020)	3000(2520)	3000

Note 1: The maximum length varies with accuracy grades. Contact THK for details.

Note 2: If connected rails are not allowed and a greater length than the maximum values above is required, contact THK.


Note 3: The values in the parentheses indicate the maximum lengths of stainless steel types.



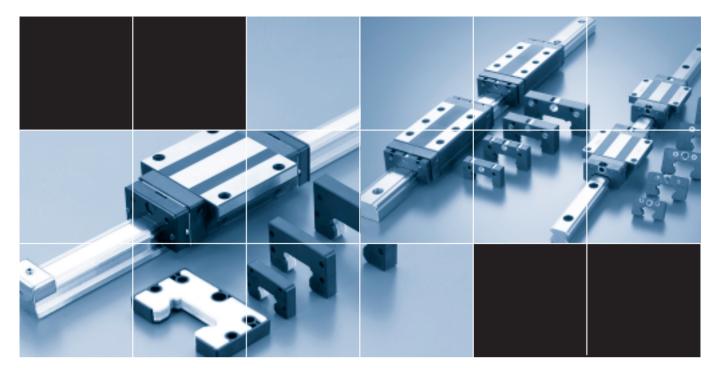

SSR OPTIONS Options


For model SSR, dust-prevention and lubrication accessories are available. Make a selection according to the application and the installation site.

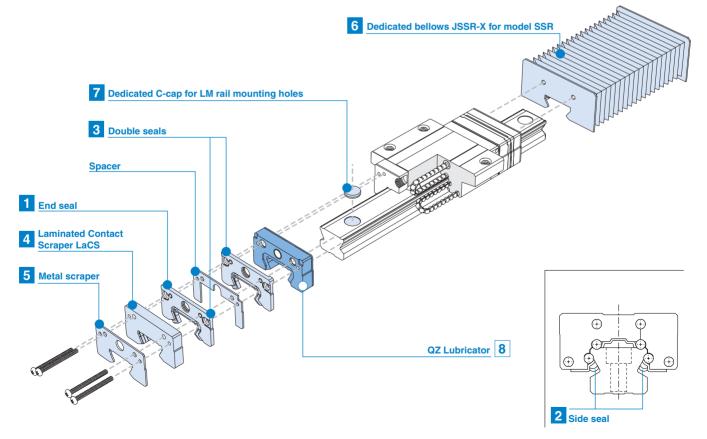



Dust Prevention Accessories

When foreign matter enters an LM system, it will cause abnormal wear or shorten the service life. It is necessary to prevent foreign matter from entering the system. Therefore, when possible entrance of foreign matter is predicted, it is important to select an effective sealing device or dust-prevention device that meets the working conditions.

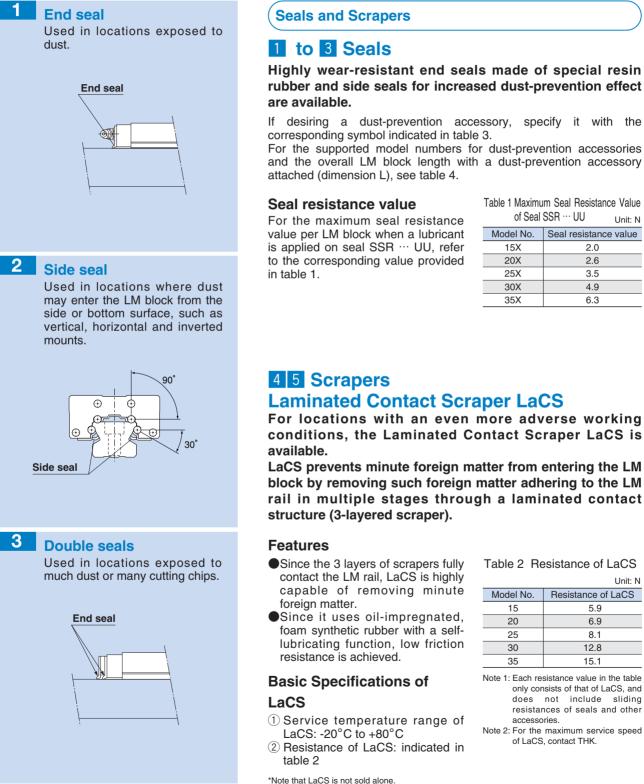

15

of Seal SSR ···· UU

15X

20X

25X

30X

35X

15

20

25

30

35

accessories

of LaCS, contact THK.

Unit: N

Unit[.] N

Resistance of LaCS

5.9

6.9

81

12.8

15.1

only consists of that of LaCS, and does not include sliding

resistances of seals and other

Seal resistance value

2.0

26

3.5

4.9

6.3

block by removing such foreign matter adhering to the LM rail in multiple stages through a laminated contact

Table 3 Symbols of Dust Prevention Accessories for Model SSR


Symbol	Dust prevention accessory
UU	With end seal
SS	With end seal + side seal
DD	With double seals + side seal
ZZ	With end seal + side seal + metal scraper
KK	With double seals + side seal + metal scraper
SSHH	With end seal + side seal + LaCS
DDHH	With double seals + side seal + LaCS
ZZHH	With end seal + side seal + metal scraper + LaCS
ККНН	With double seals + side seal + metal scraper + LaCS

Note: For model SSR, a light sliding-resistance contact seal LiCS, which is highly stable in sliding resistance, is also available. For details, contact THK.

When Dust Prevention Accessories SSHH, DDHH, ZZHH or KKHH are Attached

When dust prevention accessories SSHH, DDHH, ZZHH or KKHH are attached, the grease nipple in the location indicated in the figure below. The table on the right shows incremental dimensions with the grease nipple.

		Unit: mm
Model No.	Incremental dimension with grease nipple H	Nipple type
15XVY/XWY	4.4	PB107
15XTBY	—	PB107
20XV/XW	4.6	PB107
20XTB	—	PB107
25XVY/XWY	4.5	PB107
25XTBY	—	PB107
30XW	5.0	PB1021B
35XW	5.0	PB1021B

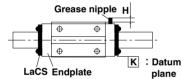


Note: When desiring the mounting location for the grease nipple other than the one indicated in the figure above, contact THK.

When Dust Prevention Accessories DD, ZZ or KK are Attached

For the mounting location of the grease nipple and its incremental dimension when dust prevention accessories DD, ZZ or KK are attached, contact THK.

Table 4 Overall LM Block Length (Dimension L) of Model SSR with a Dust Prevention Accessory Attached


Buotin	Duct i revention / teococory / ttached													
Model No.	UU	SS	DD	ZZ	KK	SSHH	DDHH	ZZHH	KKHH					
15XVY	40.3	40.3	46.1	44.9	50.7	59.5	65.3	60.7	66.5					
15XWY/XTBY	56.9	56.9	62.7	61.5	67.3	76.1	81.9	77.3	83.1					
20XV	47.7	47.7	54.6	53.4	60.3	67.7	74.6	70.1	77					
20XW/XTB	66.5	66.5	73.4	72.2	79.1	86.5	93.4	88.9	95.8					
25XVY	60	60	67.4	65.7	73.1	80	87.4	82.4	89.8					
25XWY/XTBY	83	83	90.4	88.7	96.1	103	110.4	105.4	112.8					
30XW	97	97	105.1	102.7	110.7	121	129.1	123.4	131.5					
35XW	110.9	110.9	119.9	117.7	126.7	136.9	145.9	139.3	148.3					

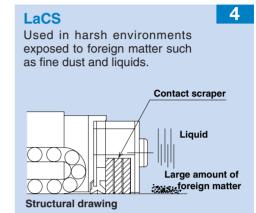

Metal scraper

5

Used in locations where welding spatter may adhere to the LM rail.

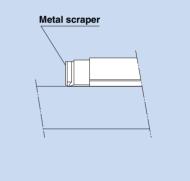




6 Dedicated bellows JSSR-X

for model SSR

Used in locations exposed to dust or cutting chips.

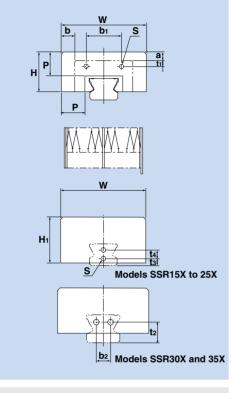


Note: The length of the bellows is calculated as follows.

 $Lmin = \frac{S}{(A-1)}$ Lmax = Lmin·A

S: Stroke length (mm) A: Extension rate

Dedicated C-cap

It prevents cutting chips from entering the LM rail mounting holes.

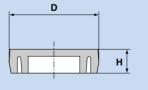

6 Dedicated Bellows JSSR-X for Model SSR

For locations with an even more adverse working conditions, dedicated bellows are available. The dimensions of the dedicated bellows are provided below. When placing an order, specify the desired bellows type with the corresponding bellows model number indicated below.

Table 1 The dimensions of dedicated bellows JSSR-X for model SSR

																Unit: mm
Model		Major dimensions												А	Supported	
No.		Mounting bolt b												(Lmax)	Supported model	
INO.	W	Н	Ηı	Ρ	b1	t1	b ₂	t2	t₃	t4	S	а	XW/XV	XTB	Lmin	model
JSSR 15X	51	24	26	15	20.5	4.7	—	—	8	—	M3×5 ℓ	5	8.5	-0.5	5	SSR 15
JSSR 20X	58	26	30	15	25	4.2	—	-	6	6	M3×5 ℓ	4	8	-0.5	5	SSR 20
JSSR 25X	71	33	38	20	29	5	-	-	6	7	M3×5ℓ	7	11.5	-1	7	SSR 25
JSSR 30X	76	37.5	37.5	20	35	9	12	17	_	—	M4×6 ℓ	3	8	_	7	SSR 30
JSSR 35X	84	39	39	20	44	7	14	20	-	-	M5×10 ℓ	2	7	—	7	SSR 35

Note 1: When desiring to use the dedicated bellows other than in horizontal mount (i.e., vertical, wall and inverted mount), or when desiring a heat-resistant type of bellows, contact THK.

Note 2: For lubrication when using the dedicated bellows, contact THK. Note 3: When using the dedicated bellows, the LM block and LM rail need to be machined so that the bellows can be mounted. Be sure to indicate that the dedicated bellows is required when ordering SSR.

Example of model number JSSR35X-60/420

Model number --- bellows for SSR35X

2 Bellows dimensions (length when compressed / length when extended)

7 Dedicated C-cap for LM Rail Mounting Holes

If any of the LM rail mounting holes of an LM Guide is filled with cutting chips or foreign matter, they may enter the LM block structure. Entrance of such foreign matter can be prevented by covering each LM rail mounting hole with the dedicated cap so that the top of the mounting holes are on the same level as the LM rail top face.

The dedicated C-cap for LM rail mounting holes is highly durable since it uses a special synthetic resin with high oil resistance and high wear resistance. When placing an order, specify the desired cap type with the corresponding cap number indicated in the table on the right.

Model No.	C-cap	Bolt	Major dimensions mm			
Model No.	model No.	used	D	Н		
15	C4	M4	7.8	1.0		
20	C5	M5	9.8	2.4		
25	C6	M6	11.4	2.7		
30	C6	M6	11.4	2.7		
35	C8	M8	14.4	3.7		



Lubrication Accessories

8 QZ Lubricator_{TM}

The QZ Lubricator feeds the right amount of lubricant to the ball raceway on the LM rail. This allows an oil film to continuously be formed between the balls and the raceway, and drastically extends the lubrication and maintenance intervals.

When the QZ Lubricator is required, specify the desired type with the corresponding symbol indicated in table 1.

For supported LM Guide model numbers for the QZ Lubricator and overall LM block length with the QZ Lubricator attached (dimension L), see table 2.

Features

- Supplements lost oil to drastically extend the lubrication/maintenance interval.
- Eco-friendly lubrication system that does not contaminate the surrounding area since it feeds the right amount of lubricant to the ball raceway.
- The user can select a type of lubricant that meets the intended use.

*Note that the QZ Lubricator is not sold alone.

*Those models equipped with the QZ Lubricator cannot have a grease nipple.

When desiring both the QZ Lubricator and a grease nipple to be attached, contact THK.

Table 1 Parts Symbols for Model SSR with the QZ Lubricator

Dust prevention accessories for model SSR with QZ Lubricator
With end seal + QZ Lubricator
With end seal + side seal + QZ Lubricator
With double seals + side seal + QZ Lubricator
With end seal + side seal + metal scraper + QZ Lubricator
With double seals + side seal + metal scraper + QZ Lubricator
With end seal + side seal + LaCS + QZ Lubricator
With double seals + side seal + LaCS + QZ Lubricator
With end seal + side seal + metal scraper + LaCS + QZ Lubricator
With double seals + side seal + metal scraper + LaCS + QZ Lubricator


Table 2 Overall LM Block Length (Dimension L) of Model SSR with the QZ Lubricator Attached

Model No.	QZUU	QZSS	QZDD	QZZZ	QZKK	QZSSHH	QZDDHH	QZZZHH	QZKKHH				
15XVY	59.3	59.3	65.1	62.7	68.5	75.5	81.3	76.7	82.5				
15XWY/XTBY	75.9	75.9	81.7	79.3	85.1	92.1	97.9	93.3	99.1				
20XV	66.2	66.2	73.1	72.1	79	83.7	90.6	86.1	93				
20XW/XTB	85	85	91.9	90.9	97.8	102.5	109.4	104.9	111.8				
25XVY	82.6	82.6	90	88.4	95.8	100	107.4	102.4	109.8				
25XWY/XTBY	105.6	105.6	113	111.4	118.8	123	130.4	125.4	132.8				
30XW	119.7	119.7	127.8	125.4	133.4	141	149.1	143.4	151.5				
35XW	134.3	134.3	143.3	141.3	150.3	156.9	165.9	159.3	168.3				

Significant Extension of the Maintenance Interval

Attaching the QZ Lubricator helps extend the maintenance interval throughout the whole load range from the light-load area to the heavy-load area.

QZ Lubricator

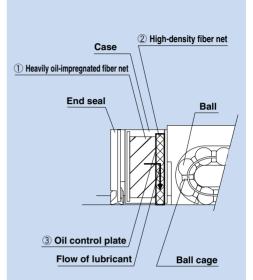

The structure of the QZ Lubricator consists of three major components:

- ① a heavy oil-impregnated fiber net (functions to store lubricant).
- a high-density fiber net (functions to apply lubricant to the raceway).
- an oil-control plate (functions to adjust oil flow). The lubricant contained in the QZ Lubricator is fed by the capillary phenomenon, which is used also in felt pens and many other products, as the fundamental principle.

THK Caged Ball LM Guide Model SSR



Precautions on use

Handling

- Disassembling components may cause dust to enter the system or degrade mounting accuracy of parts. Do not disassemble the product
- Tilting an LM block or LM rail may cause them to fall by their own weight.
- Dropping or hitting the LM Guide may damage it. Giving an impact to the LM Guide could also cause damage to its function even if the guide looks intact.

Lubrication

- Thoroughly remove anti-corrosion oil and feed lubricant before using the product.
- · Do not mix lubricants of different physical properties.
- In locations exposed to constant vibrations or in special environments such as clean rooms, vacuum and low/high temperature, normal lubricants may not be used. Contact THK for details.
- When planning to use a special lubricant, contact THK before using it.
- When adopting oil lubrication, the lubricant may not be distributed throughout the LM system depending on the mounting orientation of the system. Contact THK for details.
- Lubrication interval varies according to the service conditions. Contact THK for details.

Precautions on Use

- Entrance of foreign matter may cause damage to the ball circulating path or functional loss. Prevent foreign matter, such as dust or cutting chips, from entering the system.
- When planning to use the LM system in an environment where coolant penetrates the LM block, it may cause trouble to product functions depending on the type of coolant. Contact THK for details.
- Do not use the LM system at temperature of 80°C or higher. When desiring to use the system at temperature of 80°C or higher, contact THK in advance.
- If foreign matter adheres to the LM system, replenish the lubricant after cleaning the product. For available types of detergent, contact THK
- When using the LM Guide with an inverted mount, breakage of the endplate due to an accident or the like may cause balls to fall out and the LM block to come off from the LM rail and fall. In these cases, take preventive measures such as adding a safety mechanism for preventing such falls.
- When using the LM system in locations exposed to constant vibrations or in special environments such as clean rooms, vacuum and low/high temperature, contact THK in advance.
- . When removing the LM block from the LM rail and then replacing the block, an LM block mounting/removing jig that facilitates such installation is available. Contact THK for details.

Storage

. When storing the LM Guide, enclose it in a package designated by THK and store it in a horizontal orientation while avoiding high temperature, low temperature and high humidity.

• "LM Guide," "Ball Cage," " 🦚 ," and "QZ" are registered trademarks of THK CO., LTD.

EUROPE

DÜSSELDORF

- The photo may differ slightly in appearance from the actual product.
- The appearance and specifications of the product are subject to change without notice. Contact THK before placing an order.
- Although great care has been taken in the production of this catalog, THK will not take any responsibility for damage resulting from typographical errors or omissions. • For the export of our products or technologies and for the sale for exports, THK in principle complies with the foreign exchange law and the Foreign Exchange
- and Foreign Trade Control I aw as well as other relevant laws
- For export of THK products as single items, contact THK in advance.

All rights reserved

T H K CO., LTD.

HEAD OFFICE 3-11-6, NISHI-GOTANDA, SHINAGAWA-KU, TOKYO 141-8503 JAPAN ASIA PACIFIC SALES DEPARTMENT PHONE: (03) 5434-0351 FAX: (03) 5434-0353

NORTH AMERICA

CHICAGO

- PHONE: (847) 310-1111 FAX: (847) 310-1182 NEW JERSEY
- PHONE: (201) 529-1950 FAX: (201) 529-1962 ATLANTA

PHONE:(770)840-7990 FAX:(770)840-7897 LOS ANGELES

PHONE:(714)891-6752 FAX:(714)894-9315 SAN FRANCISCO

PHONE: (925) 455-8948 FAX: (925) 455-8965 BOSTON

PHONE:(781)575-1151 FAX:(781)575-9295 DETROIT

PHONE: (248) 858-9330 FAX: (248) 858-9455 TORONTO

PHONE: (905)712-2922 FAX: (905)712-2925 BRASIL (SÃO PAULO)

PHONE: (011)3767-0100 FAX: (011)3767-0101



- PHONE:0049-(0)2102-7425-0 FAX:0049-(0)2102-7425-299 STUTTGART
- PHONE:0049-(0)7150-9199-0 FAX:0049-(0)7150-9199-888 MÜNCHEN

PHONE:0049-(0)89-370616-0 FAX:0049-(0)89-370616-26 U.K.

PHONE:0044-(0)1908-303050 FAX:0044-(0)1908-303070 MILANO

PHONE:0039-039-2842079 FAX:0039-039-2842527 BOLOGNA

PHONE:0039-051-6412211 FAX:0039-051-6412230 SWEDEN

PHONE:0046-(0)8-4457630 FAX:0046-(0)8-4457639 AUSTRIA

PHONE:0043-(0)7229-51400 FAX:0043-(0)7229-51400-79 SPAIN

PHONE:0034-93-652-5740 FAX:0034-93-652-5746 THK FRANCE S. A. S

PHONE:0033-(0)4-37491400 FAX:0033-(0)4-37491401 SOUTH AFRICA

PHONE:0027-(0)44-2720020 FAX:0027-(0)44-2720020

CHINA

THK SHANGHAI CO., LTD.

PHONE:(21)6334-5131 FAX:(21)6334-5137 BEIJING

PHONE:(10)6590-3259 FAX:(10)6590-3557 THK SHOUZAN CO., LTD.

PHONE:2376-1091 FAX:2376-0749

TAIWAN

TAIPEI

PHONE:(02)2888-3818 FAX:(02)2888-3819 TAICHUNG

PHONE:(04)2359-1505 FAX:(04)2359-1506 SOUTHERN

PHONE:(06)289-7668 FAX:(06)289-7669 KOREA (SEOUL)

PHONE:(02)3468-4351 FAX:(02)3468-4353 MALAYSIA (KUALA LUMPUR)

PHONE:(03)9287-1137 FAX:(03)9287-8071 INDIA (BANGALORE)

PHONE:(080)2330-1524FAX:(080)2330-1524